

HANDBOOK



PEUGEOT 807







PEUGEOT

# WELCOME

Please note the following point: the fitting of electrical equipment or accessories which are not recommended by PEUGEOT may result in a failure of your vehicle's electronic system. Please note this specific warning. It is advisable to contact a PEUGEOT dealer to be shown the recommended equipment and accessories.

Each model may only be fitted with some of the equipment shown, depending on the specification and the characteristics of the country in which it is sold.

Where the item of equipment or the function is preceded by the phrase "If your vehicle is fitted with...", this draws your attention to possible differences in specification.

Your 807 has been designed to satisfy all your requirements in terms of practicality, comfort, safety and aesthetics. In order to get the most out of your vehicle, we suggest that you take a tour, from the instruments and controls to the rear seats, with the "Handbook" in front of you.

The handbook presents the operation of the equipment and configurations available on board in detail.

PEUGEOT thanks you for your confidence and wishes you very happy motoring.



## Contents

2

1. FAMILIARISATION 4-17		2. READY TO SET OFF 18-42		3. EASE OF USE and COMFORT 43-84		4. SAFETY 85-102	
Presentation	4	Accesses	18	Steering wheel controls	43	Driving safety	86
Communication	4	Keys	18	Lighting	43	Handbrake	86
Exterior	6	Alarm	22	Lighting	43	Hazard warning lights	86
Interior	8	Doors	23	Windscreen wipers	46	Parking assistance	87
Identification features	17	Child safety	25	Cruise control	48	ABS and EBSD	88
		Tailgate	25	Speed limiter	51	Horn	88
		Sunroofs	26	Ventilation	54	Emergency braking assistance	88
		Instruments and controls	27	De-icing and demisting	55	ASR and ESP	89
		Control block	27	Seats	59	Tyre under-inflation detection	90
		Instrument panels	28	Front	59	Seat belts	91
		Warning lights	29	Rear	64	Airbags	93
		Indicators, Display	34	Bench seat	69	Passenger air bag disarming	93
		Gearbox		Modularity	71	Child seats	97
		Automatic	37	Comfort and safety	75	Isofix seats	99
		Manual	41	Layout	75	Recommended seats	100
		Steering wheel adjustment	41	Courtesy lights	80	Monitoring mirror	102
		Starting and stopping	42	Sun visor	81		
				Mirrors and windows	82		

<b>5. ACCESSORIES 103-107</b>	<b>7. QUICK HELP 116-131</b>	<b>9. TECHNOLOGY on BOARD</b>	<b>10. VISUAL SEARCH 139-146</b>
Towing a trailer 103 Roof bars 105 Very cold climate screen 106 Other accessories 107	Battery 116 Changing a wheel 117 a bulb 121 a fuse 124 a wiper blade 130 Being towed 131	Peugeot Connect Navigation (RT6) 9.1 Peugeot Connect Sound 9.61  The "In-Car Technology" section presents the new radio/navigation equipment.  Peugeot Connect: Peugeot Connect is the name given to all of the new equipment of the radio/navigation range.	Exterior 139 Interior 140 Front interior 141 Instruments and controls 142 Technical data - Maintenance 143 Eco-driving 144  The "Location" section assists you in finding the controls and functions and their associated page numbers on the schematic outlines of the vehicle (visual index).
<b>6. CHECKS 108-115</b>	<b>8. TECHNICAL DATA 132-138</b>		
Fuel 109 Tank 109 Circuit disarmed 110 Diesel repriming pump 110 Opening the bonnet 111 Diesel under-bonnet layout 112 Levels 113 Checks 115	Model codes 132 Diesel 133 Engine 133 Weights and towing loads 134 Dimensions 136		

## PRESENTATION

This handbook has been designed to familiarise you with your new vehicle from the moment you get behind the wheel and to describe the operating features.

Reading the handbook is made easy with the content consisting of 10 identified chapters, which can be located by means of a colour code specific to each one. Its sections cover, by subject, all of the functions of the vehicle in its most complete specification.

Chapter 8 gives all of the technical data relating to your vehicle. At the end of the document, diagrams of the outside and inside of the vehicle will assist you in locating equipment or functions and page numbers refer you to the relevant section of the handbook.

Within the chapters, symbols draw your attention to specific information:



directs you to the chapter and section which contains detailed information concerning a function,



indicates important information relating to use of the equipment,



alerts you to the safety of individuals and equipment on board.

## PEUGEOT COMMUNICATION PUTS AN INTERNET SITE AT YOUR DISPOSAL




The technical data, equipment and accessories may change during the year. To obtain this new data, refer to the "Latest Information" section on the SERVICE BOX Internet site free of charge.

**<http://public.servicebox.peugeot.com>**, select:

- your model,
- the body type: saloon, CC, SW, estate, van...
- the period corresponding to the date of first registration,
- the "Latest Information" section.


<http://public.servicebox.peugeot.com>

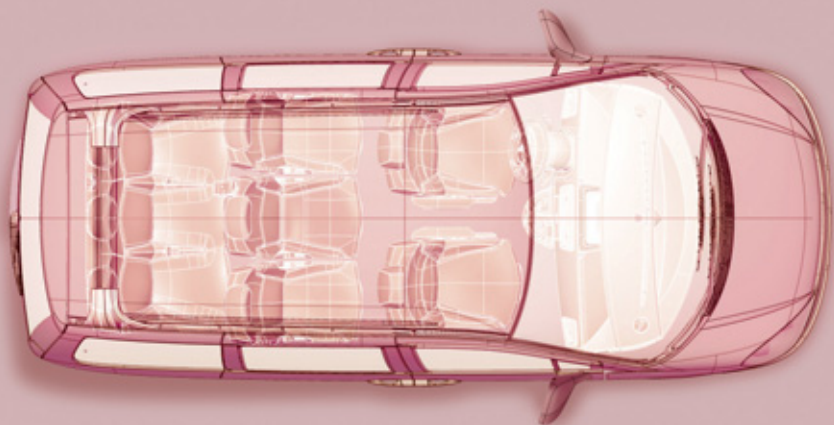



4 ▶ 87

### Parking assistance

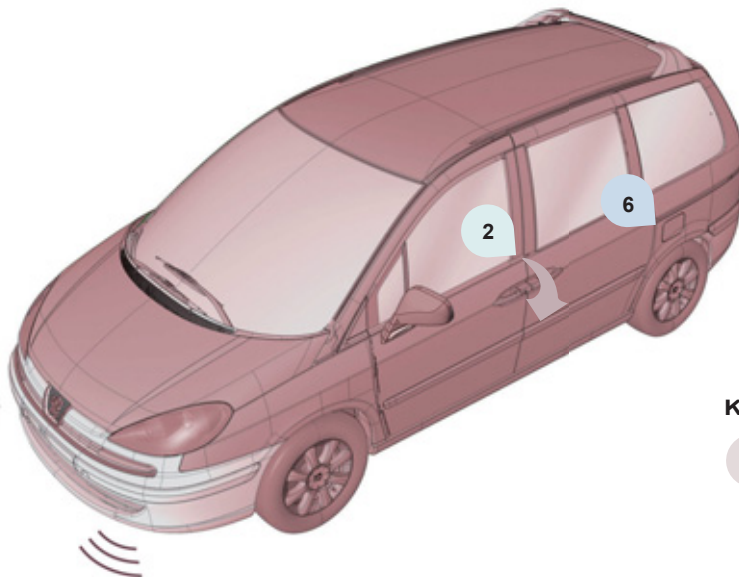Audible and/or visual front parking assistance.



### Key

-  item identification mark
-  page identification mark

2



### 2 buttons

The movement of the door must be guided on opening.

▶ 18

Right-hand door



Left-hand door

### 4 buttons

A press selected by one or the other.

6



### Flap open

When the fuel filler flap is open, a safety system limits the opening of the sliding side door while the fuel tank is being filled.

▶ 109



2 ▶ 25

**Tailgate**

Locking and unlocking by remote control. Press the handle and raise the tailgate.

4 ▶ 87

**Parking assistance**

Audible and/or visual rear parking assistance.

7a ▶ 117


**Spare wheel**

Raise the wheel to be repaired by means of the cable until it is flush against the floor. Close the cover on the access opening securely.

5 ▶ 105


**Transverse roof bars**

Release the four levers, move your bars then secure the levers.

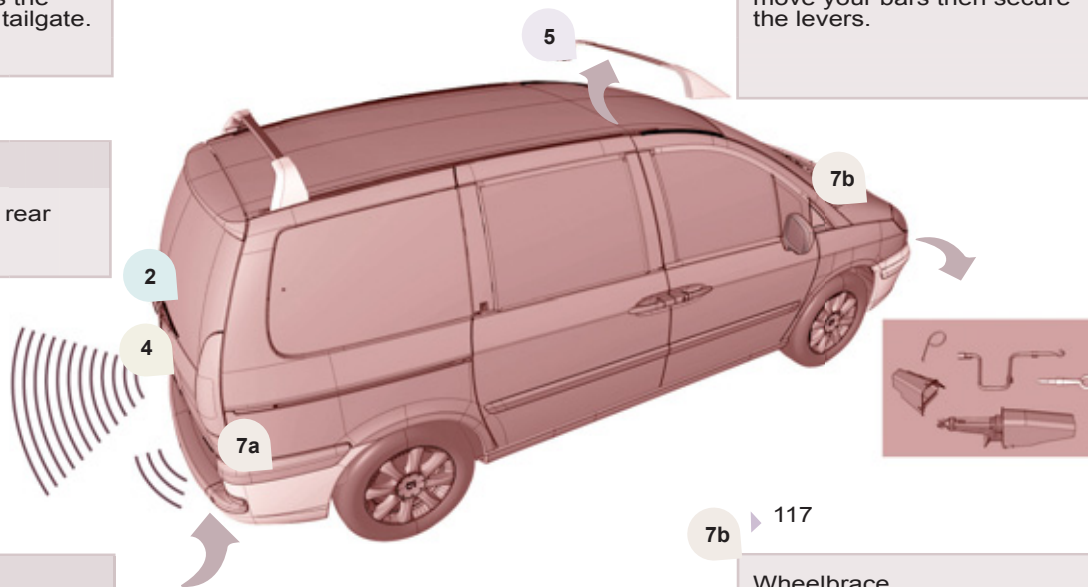

7b ▶ 117

Wheelbrace.  
Jack box.  
Towing eye.

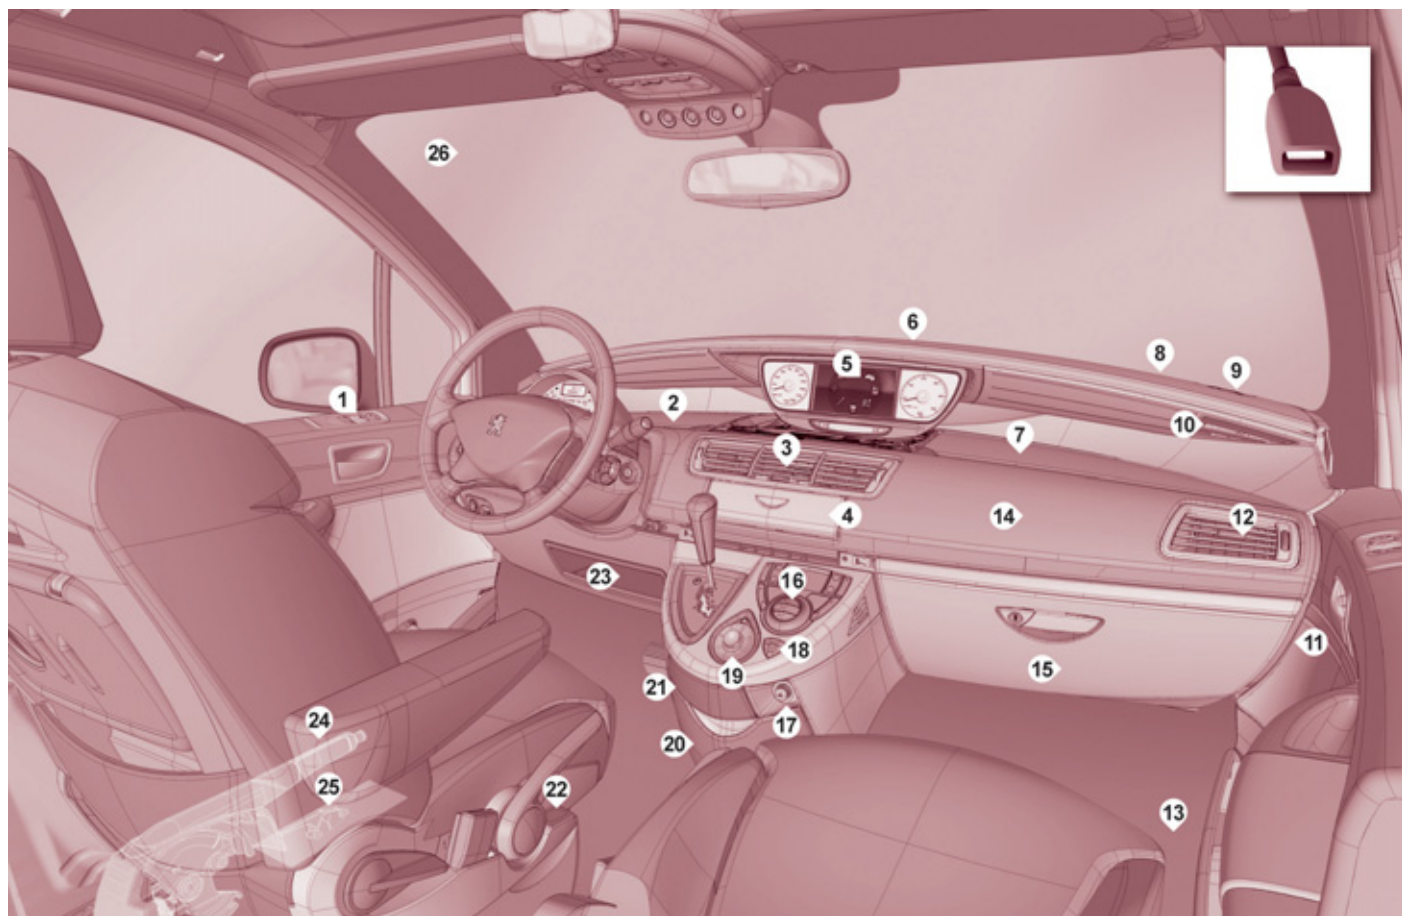

## INTERIOR OVERVIEW

1. Electric mirror controls.
  - Electric window controls.
  - Deactivation of the rear electric controls.
2. Driver's upper glove box.
3. Central adjustable vents.
4. Audio equipment or GPS multimedia audio equipment with flap.
5. Instrument panel / Large colour display.
6. Sunshine and passenger compartment temperature sensor.
7. Passenger's upper glove box.
  - Bluetooth.
8. Windscreen demisting vents.
9. Speaker (tweeter).
10. Front window demisting vents.
11. Passenger airbag disarming switch, if fitted on your vehicle.
12. Side adjustable vent.
13. Battery / Fuse box.
14. Passenger airbag.
15. Passenger's lower glove box / Fuse box / RCA sockets.
16. Air conditioning controls.
17. Lighter /
  - 12 V accessories socket.
18. Hazard warning lights switch.
19. Storage compartment or additional telematics control.
20. Cooled compartment.
21. Ashtray / Can holder.
22. Seat adjustment control.
23. Storage compartment.
24. Handbrake - on the left.

25. Bonnet release under cover - on the left.

26. Acoustic windscreen.




### SETTING THE DATE AND TIME

For more information about this adjustment, refer to the "Setting the date and time" section of the "In-car technology" chapter.



### ADDITIONAL HEATER

With the engine at idle or when the vehicle is stationary, it is normal to notice a high-pitched whistling and a slight emission of smoke and odour.

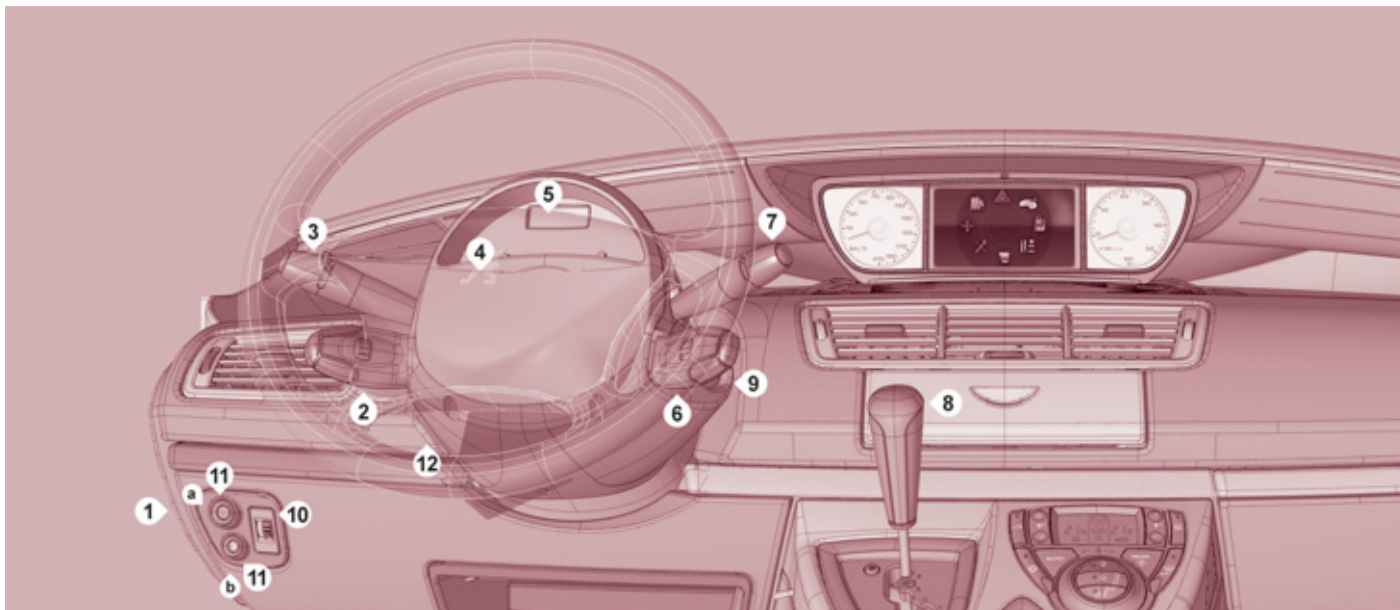

## INSTRUMENTS AND CONTROLS

- |  |  |  |
|--|--|--|
| <p>1. Interior protection alarm deactivation button.</p> <p>2. Speed limiter / cruise control switches.</p> <p>3. Lights and direction indicators controls.</p> <p>4. Driver's airbag. Horn.</p> | <p>5. Control block.</p> <p>6. Steering wheel audio equipment controls.</p> <p>7. Wipers / wash-wipe / trip computer controls.</p> <p>8. Gear lever.</p> <p>9. Ignition.</p> | <p>10. Headlamp height adjustment.</p> <p>11. a- Dynamic stability control button (ESP/ASR).<br/>b- Parking assistance button.</p> <p>12. Steering wheel adjustment control.</p> |
|--|--|--|

### INSTRUMENTS AND CONTROLS

Truly ergonomic control for access to the functions of the Peugeot Connect Media Navigation (RT5).



selection

confirmation

### Peugeot Connect Navigation (RT6)



### Bluetooth



9

### Peugeot Connect Sound



### JACK / RCA socket



9

9

## SIT COMFORTABLY

12

## Driver's seat



1. Forwards-backwards adjustment.



2. Angle.



3. Height.




4. Lumbar.



5. Head restraint height and angle.

## Rotating the seat

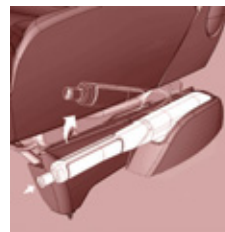

If your vehicle is fitted with a version with a rotating front seat, pull the button placed at the end of the handbrake forwards.

The handbrake lever lowers.

You can now rotate the seat. To return to normal operation, pull the lever up until it clicks.


## Other types of seat



Linked side seats



Central rear seat

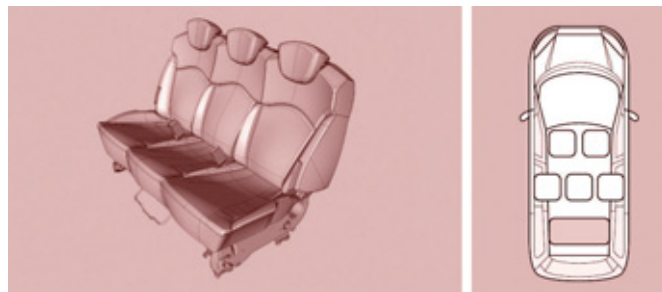

Rear bench seat

## SIT COMFORTABLY



Adjust the height and depth of the steering wheel.



Electric exterior mirrors.




Selection



Adjustment




Repositioning

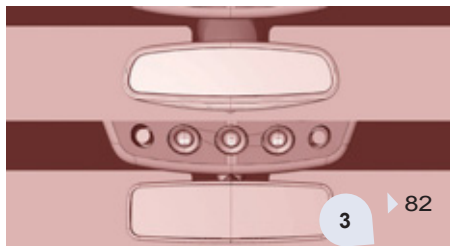

3

▶ 82

## Seat belts

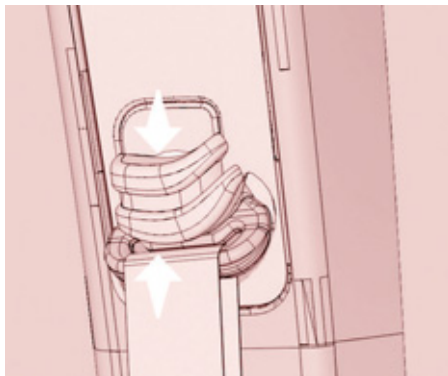

Height adjustment.



Fastening.

4

▶ 91

## SEE CLEARLY



Lights off

3

▶ 43



Side lights



Main beam headlamps (blue)  
Dipped headlamps (green)

**AUTO** AUTO, automatic switching on of the lights

## Wipers stalk



2 fast.

1 normal.

I intermittent.

0 off.

↓ single wipe.


3

▶ 46



AUTO, press the stalk down.



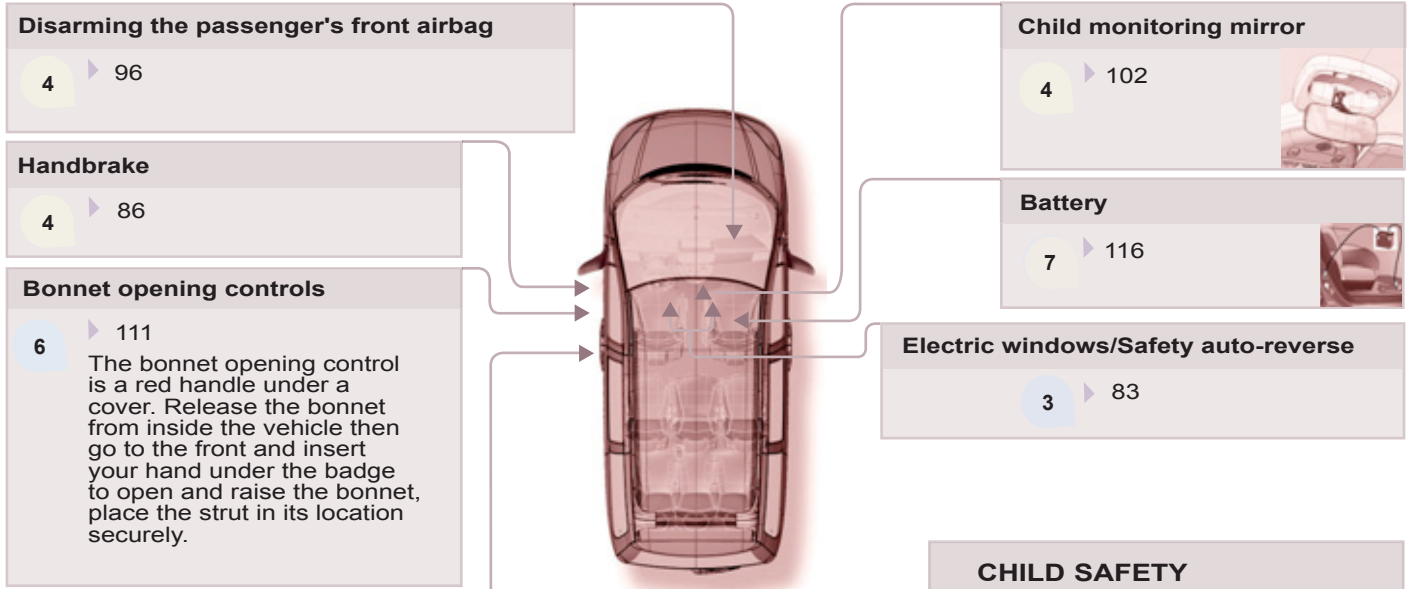

**Disarming the passenger's front airbag**

4 ▶ 96

**Handbrake**

4 ▶ 86


**Bonnet opening controls**

6 ▶ 111

The bonnet opening control is a red handle under a cover. Release the bonnet from inside the vehicle then go to the front and insert your hand under the badge to open and raise the bonnet, place the strut in its location securely.

**Child monitoring mirror**

4 ▶ 102





**Battery**

7 ▶ 116



**Electric windows/Safety auto-reverse**

3 ▶ 83


<p><b>Opening control</b></p> <p>2 ▶ 24</p> <p>Sliding side doors from the inside.</p>  	<p><b>closing</b></p> <p>On a steep gradient, guide the side door manually to assist closing.</p>
---	---

**CHILD SAFETY**

Safety auto-reverse. 3 ▶ 84

Monitoring mirror. 4 ▶ 102

Child seats. 4 ▶ 97



## ADAPT CORRECTLY

16


Details of the modularity of the seats are indicated in chapter 3.

Good practice when moving a seat.

Observe the order of the steps referred to in the document, place the head restraint in the lowest position, fold the seat back onto the seat cushion, ensure that the refitting position is compatible with the type of seat, offer up the front feet of the seat directly above the slides or retaining hooks on the floor before triggering the refitting of the rear feet.


## VENTILATION

### Air conditioning

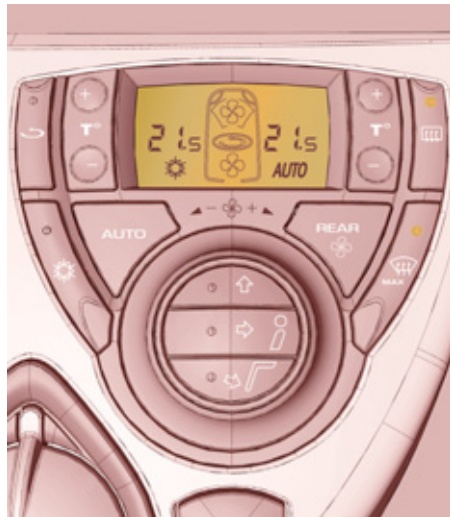

#### Automatic with separate adjustment

Press, AUTO is displayed, this is the usual mode.

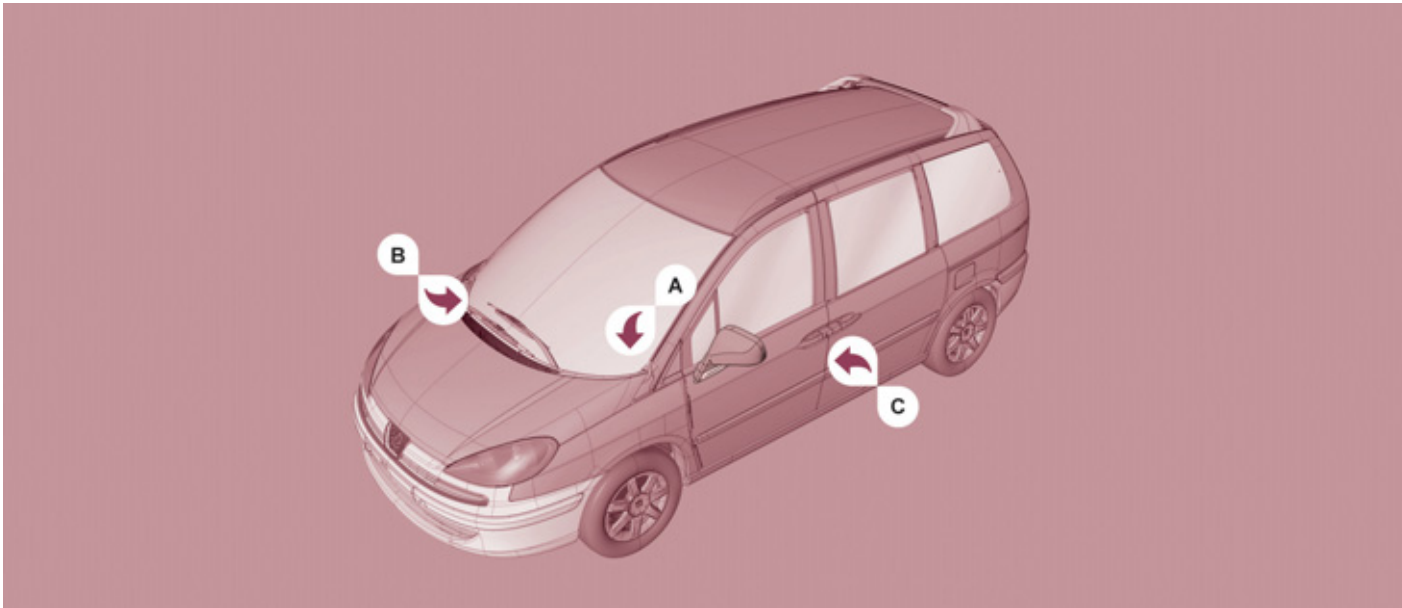

## IDENTIFICATION FEATURES

**A. Manufacturer's plate.**

**B. Model serial number.**

**C. Tyres and paint colour reference.**

The label C on the driver's door gives:

- the wheel and tyre sizes,
- the brands of tyres approved by the manufacturer,
- the tyre pressures (**the tyre pressure must be checked when the tyre is cold, at least once a month**),
- the paint colour reference.



## ACCESS

### KEYS

#### Central locking

From the driver's door or passenger door, the keys allow you to lock, deadlock or unlock the doors and tailgate, as well as fold back the exterior mirrors.

If one of the doors or the tailgate is open, the central locking does not work.

**The remote control performs the same functions at a distance.**

The key allows you to switch on the ignition and to mechanically operate the lock on the fuel filler cap, the glove box, the passenger airbag disarming switch and the mechanical child lock.

## REMOTE CONTROL

### Normal locking



Press the closed padlock to lock the vehicle.

This is confirmed by fixed lighting of the direction indicators for approximately two seconds.

### Deadlocking



If your vehicle is fitted with deadlocking, **a second press** on the closed padlock within five seconds of locking changes this to deadlocking.

This is confirmed by fixed lighting of the direction indicators for approximately two seconds.



Deadlocking renders the internal and external door locking controls inoperative. Never leave anyone inside the vehicle when it is deadlocked.

If the deadlocking is operated from inside the vehicle, it will change to normal locking when the vehicle is started.



**Pressing the closed padlock for more than 2 seconds**, in addition to locking or deadlocking, permits automatic closing of the windows and places the sunroofs in the partially open position, if they were open. To close them completely, you must press their switch before leaving the vehicle.

## Unlocking



Press the open padlock to unlock the vehicle. This is confirmed by rapid flashing of the direction indicators.

If the vehicle is locked and unlocking is activated inadvertently, unless the doors are opened within 30 seconds, the vehicle will lock automatically.

## Opening/Closing the electric sliding side doors



Pressing one of the buttons opens or closes the corresponding rear door (right or left).



This press unlocks the entire vehicle before opening the sliding door.

## Folding/opening out the key



To tuck away the key blade, press the button, then fold it down into the remote control module.

To open out the key, press the button.


## Locating your vehicle



To locate your vehicle, if you have locked it, in a car park. Press the closed padlock, the courtesy lights come on and the direction indicators flash for a few seconds.

## Key in ignition

A buzzer sounds on opening the driver's door, if the key has been left in the ignition.

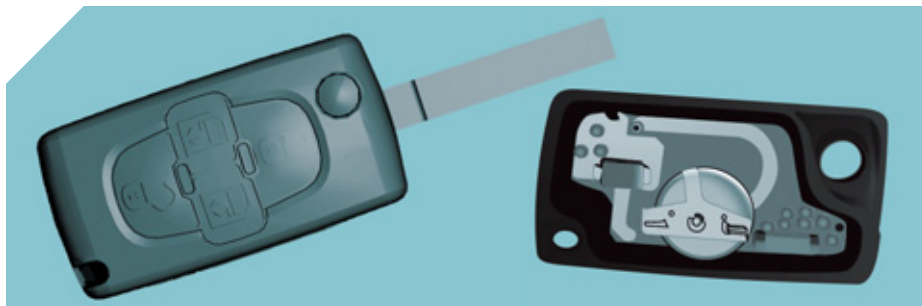

### Changing the remote control battery

Battery ref.: CR1620/3 volts.

The information "battery flat" is given by an audible signal, accompanied by a message on the multifunction display.

To replace the battery, unclip the casing using a coin at the ring.

If the remote control does not work after the battery has been changed, re-programme the remote control.

Do not discard the remote control batteries, they contain metals which are harmful to the environment.

Take them to a PEUGEOT dealer, or to any other approved collection point.

### Reinitialising the remote control



Following changing of the remote control battery or disconnection of the vehicle battery, the remote control may have to be reinitialised.



Wait at least one minute before using the remote control.

Insert the key in the ignition switch with the buttons (padlocks) of the remote control facing you.

Switch on the ignition.

Press the locking padlock for at least five seconds within the next ten seconds.

Switch off the ignition.

Wait at least one minute before using the remote control.

The remote control is now working again.

## ELECTRONIC ENGINE IMMOBILISER

This locks the engine control system as soon as the ignition has been switched off and therefore prevents starting of the vehicle by anyone who does not have the key.

The ignition key has an electronic chip which has a special code. When the ignition is switched on, the code must be recognised for starting to be possible.

If the system does not function correctly, the central locking button indicator light, situated on the courtesy light console, flashes rapidly when the ignition is switched on (2nd notch).

In this case your vehicle will not start. Contact a PEUGEOT dealer as soon as possible.

## Good practice

### Key, remote control

Take care not to allow the key to come into contact with grease, dust, rain or a damp environment.

A heavy object attached to the key (key ring, ...) weighing on the shaft of the key in the switch may cause a malfunction.

The high frequency remote control is a sensitive system; do not operate it while it is in your pocket as there is a possibility that it may unlock your vehicle, without you being aware of it.

Do not repeatedly press the buttons of your remote control out of range and out of sight of your vehicle. You run the risk of stopping it from working and the remote control would have to be reprogrammed.

The remote control does not operate when the key is in the ignition, even when the ignition is switched off, except for reprogramming.

Do not make any modifications to the electronic engine immobiliser system.

## If the keys are lost

A PEUGEOT dealer will be able to retrieve the key code and the transponder code to order a replacement key if you show him your V5 registration certificate and personal identification.

## Safety


In the event of a serious impact the doors are unlocked automatically to permit access by the emergency services.

Remove the ignition key when you leave the vehicle, even for a short time, if there are children on board.

## Purchasing a second-hand vehicle

Ensure that you are given the anti-theft socket for alloy wheels (remember to note the code engraved on the head of the socket).

Have the key codes memorised by a PEUGEOT dealer, to ensure that the keys in your possession are the only ones which can start the vehicle.

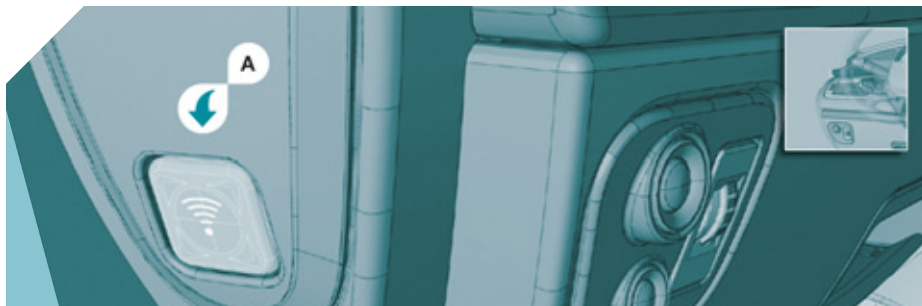

## ALARM

If fitted on your vehicle, this provides two types of protection:

- exterior protection: it sounds if a door, the tailgate or the bonnet is opened.
- interior protection: it sounds if the volume inside the passenger compartment changes (breaking of a window or a movement inside the vehicle).

A red indicator light, located in the centre of the fascia, indicates the information detailed below.

### Setting the alarm

- Switch off the ignition and get out of the vehicle.
- Set the alarm within five minutes of getting out of the vehicle, by locking or deadlocking using the remote control (the red indicator light flashes once per second).

- i** To lock your vehicle without setting the alarm, insert the key in the lock then lock the vehicle (e.g. for washing).

When the alarm is triggered, the siren sounds and the direction indicator lights flash for thirty seconds.

Warning - alarm triggered: the red indicator light flashes rapidly, insert the key and switch on the ignition to switch it off.

When the alarm has been triggered ten times in succession (on the eleventh time) the alarm is deactivated. Repeat the rules for setting the alarm.

### Disarming

Unlock the vehicle with the remote control (the red indicator light goes out).

### To set the alarm with exterior protection only

If, while you are away from the vehicle, you wish to leave a window partially open or a pet inside the vehicle, you should choose exterior protection only.

- Close the sunroofs,
- Switch off the ignition,
- In the next ten seconds, press button **A**, located on the left-hand side of the fascia, until the red indicator light is on continuously,
- Get out of the vehicle,
- Within the next five minutes, set the alarm by locking or deadlocking using the remote control (the red indicator light flashes once a second).

- i** When the alarm is set but the remote control does not operate:

- Unlock the doors with the key and open the door. The alarm is triggered.
- Switch on the ignition in the next ten seconds. The alarm is disarmed.

### Incorrect operation

When the ignition is switched on, if the red indicator light remains on for ten seconds, there is a fault in the siren connection.

Consult a PEUGEOT dealer to have the system checked.

### Automatic setting of the alarm

If fitted on your vehicle, the alarm is set automatically 2 minutes after the last door or the tailgate is closed.

To prevent triggering of the alarm when a door or the tailgate is opened, it is imperative to press the remote control unlocking button again.

- e** Do not make any modifications to the alarm system as this could cause faults.





Opening the doors from outside



Opening the doors from inside



## DOORS



### Locking/Unlocking from the inside

Press the padlock, the red warning light comes on when the vehicle is locked and switches off when it is unlocked.

This locks/unlocks the doors and the tailgate.



If the vehicle is locked or deadlocked from the outside, the red warning light flashes and the padlock does not function. In this case, use the key or the remote control to unlock from the outside.

The door opening switches do not function when the vehicle is deadlocked.

### Automatic central locking

The doors can lock automatically when you are driving (at a speed of more than 6 mph (10 km/h)).

You can activate or deactivate this function.



### To activate

With the ignition on, press and hold the padlock.

Activation of the function is accompanied by an audible signal and a message on the display.



### To deactivate

With the ignition on, press and hold the padlock.

Deactivation of the function is accompanied by an audible signal.

### "Door open" alert

If a door or the tailgate is not closed properly:

- **when the engine is running**, you are warned by a graphic and a message on the display for a few seconds,
- **when the vehicle is moving** (speed above 6 mph (10 km/h)), the service warning light comes on. It is accompanied by an audible signal, a message and a graphic on the display for a few seconds.



## ELECTRIC SLIDING SIDE DOORS



### Opening/Closing from the front

Press the corresponding control.

An audible signal accompanies the opening and closing of the door.



### Opening/Closing from row 2

Press the corresponding control.



### Opening/Closing using the remote control

Press one of the buttons to open or close the corresponding rear door (right or left).



Remember to close the sliding doors when your vehicle is parked for long periods, the electric open door monitoring system consumes power.

On a steep gradient, guide the side door manually to assist closing.

## General recommendations

It is imperative that the doors are only operated when the vehicle is stationary.

Always ensure that the door is operated safely. Check that no person, animal or object is preventing the required operation, either inside or outside the vehicle.

Do not lean through an open window, do not leave any object protruding through the door during opening or closing.

Do not leave children or pets near the opening and closing controls without supervision.

## Obstacle detection


The detection system is triggered when an obstacle which has a certain physical resistance hinders the movement of the door.

If an obstacle is detected during:

- closing of the door, the door opens fully,
- opening of the door, the door stops.

When the obstacle has been removed, complete or restart the action using the remote control or the interior controls.

Failure to observe these recommendations may result in injury or damage if part of the body or an object becomes jammed or caught.

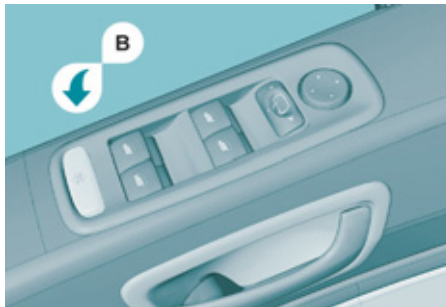

## ELECTRIC CHILD SAFETY

### B - Electric

This disarms all the electrical controls in the rear:

- electric windows,
- sliding side doors,
- sunroofs in rows 2 and 3.

With the ignition on, press button **B**.


A message appears on the display, accompanied by an audible signal, indicating the status of the function: activated or not activated.

Always check the status before setting off.

This safety system is independent of the central locking.

In the event of a serious impact, the doors are unlocked automatically to permit access by the emergency services.

- i** Always remove the ignition key when leaving the vehicle, even for a short time.

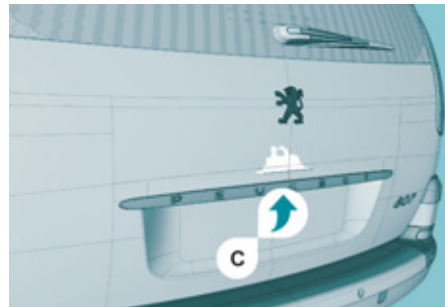

## TAILGATE

### Simultaneous locking or unlocking of the tailgate and the doors


The tailgate is locked or unlocked by the remote control or the driver's door or passenger door lock.

To open, operate the handle **C** and lift the tailgate.

- i** The tailgate locks automatically when the vehicle is being driven at more than 6 mph (10 km/h) and unlocks when one of the front doors is opened.

### "Tailgate open" warning

When the engine is running or the vehicle is being driven, you are warned if the tailgate is not closed correctly by a diagram on the display, accompanied by an audible signal.

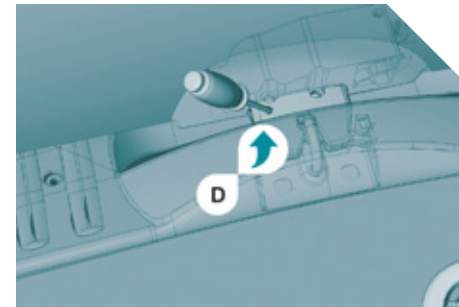

## Tailgate release

This enables the tailgate to be unlocked in the event of a central locking fault.

- Fold back a row 2 rear seat,
- Fold back a row 3 rear seat or the bench seat to gain access to the lock from inside the boot,
- Insert a small screwdriver into hole **D** in the lock and push it towards the left to unlock the tailgate.



## SUNROOFS

You have three sunroofs each with an independent control.

However, the front passenger's control can also operate the two rear sunroofs simultaneously.

**To partially open the roof:** press and hold part **A** of the control.

**To open the roof completely:** press part **A** of the control briefly.

**To close it completely:** press part **B** of the control briefly to slide it, then press the control again continuously to close it completely.

## Safety auto-reverse

When the sunroof is sliding closed and meets an obstacle, it stops then partially opens again.

## Malfunction

In the event of a malfunction, unwanted opening of the roof on closing (for example, in the presence of ice), following reconnection of the battery or if the sunroof does not close:

- press **A** until the roof is fully open,
- press **B** within one second to close the roof,
- if the roof does not close, press **B** several times until the roof is fully closed,
- release then continue to press the control **B** for approximately five seconds after closing of the roof.

**The safety auto-reverse function is not active during these operations.**

## Disarming of the row 2 and 3 controls

Press the rear electrical functions disarming switch.

**i** The sunroof shutter is manual. To open it, lift the handle and slide it rearwards.

To close it, slide it forwards until the handle locks.

## Good practice

Do not open the sunroofs immediately after a shower or immediately after washing the car.

Always ensure that the sunroofs are closed correctly before leaving the vehicle.

In the event of contact during operation of the roof, you must reverse the movement of the roof. To do this, press the switch concerned.

When the driver operates the roof switch, he must ensure that no one is preventing correct closing of the roof. Be aware of children when operating the roof.


The driver must ensure that the passengers use the sunroof correctly.




**INSTRUMENTS AND CONTROLS  
CONTROL BLOCK**



**Display**

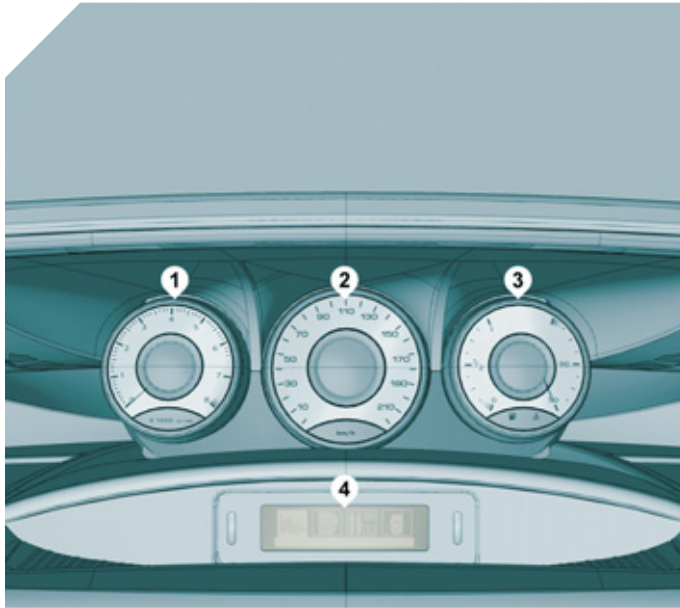

With monochrome display

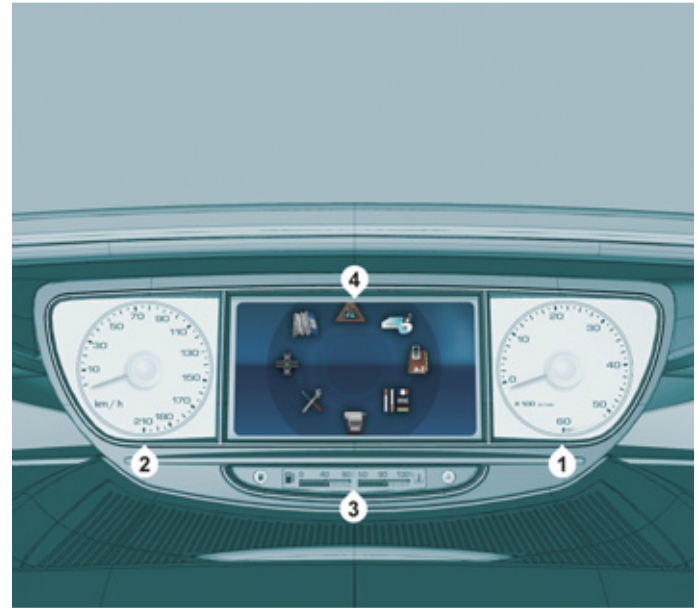




With colour display






## INSTRUMENT PANELS

1. Rev counter.
2. Speedometer.
3. Fuel level and coolant temperature.
4. Display.





## WARNING LIGHTS






Each time the engine is started: a series of warning lights comes on applying a self-test check. They switch off almost immediately. With the engine running: the warning light becomes a warning if it remains on continuously or flashes. This initial warning may be accompanied by an audible signal and a message which appears on the display. "Do not ignore these warnings."








Warning light		is	indicates	Solution - action
	<b>STOP</b>	lit, associated with another warning light and accompanied by a message on the display.	major faults linked with the "Brake fluid level", "Engine oil pressure", "Coolant temperature", "Electronic brake force distribution", "Power steering" and "Punctured tyre" warning lights.	<b>You must stop, park, switch off the ignition and call a PEUGEOT dealer.</b>
	<b>Handbrake/ Brake fluid level/EBFD</b>	lit.	handbrake applied or not released correctly.	Releasing the handbrake switches off the warning light. Chapter 2, "Starting and stopping" section.
		lit.	low brake fluid level.	Top up using a fluid recommended by PEUGEOT.
		remaining on, even though the level is correct and associated with the ABS warning light.	failure of the electronic brake force distribution.	<b>You must stop, park, switch off the ignition and call a PEUGEOT dealer.</b>
	<b>Engine oil pressure</b>	lit while driving.	insufficient pressure.	Park, switch off the ignition and allow to cool. Visually check the level. Chapter 6, "Levels" section.
		remaining on, even though the level is correct.	major fault.	Call a PEUGEOT dealer.


Warning light		is	indicates	Solution - action
	<b>Coolant temperature and level</b>	lit.	an abnormal increase in the temperature.	Park and switch off the ignition then allow to cool. Visually check the level. Chapter 2, "Instruments and controls" section.
		flashing.	a drop in the coolant level.	Chapter 6, "Levels" section. Contact a PEUGEOT dealer.
	<b>Service</b>	lit temporarily.	minor faults or warnings.	Consult the warnings log on the display or on the screen. See chapter 9 In-car Technology, "Audio equipment - Trip computer" section, depending on the seriousness of the fault, contact a PEUGEOT dealer.
		remaining on.	major faults.	In the case of a low diesel additive level, see chapter 6 "Levels" section.
	<b>Row 1 seat belt not fastened</b>	lit.	the driver or a front passenger has not fastened his seat belt.	Pull the strap then insert the tongue in the buckle.
		flashing, accompanied by an audible signal of increasing volume.	the vehicle is moving with the driver or front passenger seat belt not fastened.	Check that the seat belt is fastened by pulling the strap. Chapter 4, "Seat belts" section. The driver must ensure that all passengers fasten and use the seat belts correctly.
	<b>Front/side/curtain airbag</b>	flashing or remaining on.	failure of an airbag.	Have the system checked by a PEUGEOT dealer without delay. Chapter 4 "Airbags" section.
	<b>Front passenger airbag disarmed</b>	lit.	intentional disarming of this airbag in the presence of a rear facing child seat.	Chapter 4, "Airbags-children on board" section.



Warning light		is	indicates	Solution - action
	<b>Low fuel level</b>	lit.	that the fuel reserve is being used (approximately 5 litres remain). Capacity approximately 80 litres.	You have enough fuel left to drive approximately 30 miles (50 km). Fill up with fuel without delay. The evaluation of the fuel reserve is a parameter which is sensitive to the style of driving, the profile of the road, the time elapsed and the distance travelled since the warning light came on. Never continue to drive until you run out of fuel, this could damage the emission control and injection systems.
		flashing.	a malfunction of the gauge or cutting off of the supply following a serious impact.	Restore the supply. Chapter 6, "Fuel" section.
	<b>EOBD emission control system</b>	flashing or remaining on.	failure of the injection, ignition or emission control system.	Have the system checked by a PEUGEOT dealer as soon as possible.
	<b>Battery charge</b>	lit.	fault in the charging circuit.	Check the battery terminals, ... Chapter 7, "Battery" section.
		flashing.	placing of the active functions on standby (economy mode).	Chapter 7, "Battery" section.
		remaining on, in spite of the checks.	faulty circuit, injection or ignition malfunction.	Call a PEUGEOT dealer.
	<b>ABS</b>	remaining on or coming on above 7 mph (12 km/h).	failure of the anti-lock braking system.	The vehicle retains conventional braking without assistance but you are advised to stop. Call a PEUGEOT dealer.

Warning light		is	indicates	Solution - action
	<b>ESP/ASR</b>	flashing.	wheel skid avoided.	The system optimises the traction and improves the directional stability of the vehicle. Chapter 4, "Driving safety" section.
		remaining on.	a malfunction of the system. E.g.: under-inflation of the tyres.	Check the pressure of the tyres. Call a PEUGEOT dealer.
		remaining on with the button (below the steering wheel on the left) pressed.	deactivation of the system.	The operation of the system has been deactivated. Chapter 4, "Driving safety" section.
	<b>Diesel pre-heating</b>	lit.	climatic conditions requiring pre-heating.	Wait until the warning light is switched off before operating the starter.
	<b>Dipped headlamps/Daytime lights</b>	lit.	manual selection or automatic lighting.	Rotate the ring on the lights stalk to the second position.
			lighting of the dipped headlamps from the time the ignition is switched on - daytime lights. Depending on the country in which the vehicle is sold.	Chapter 3, "Steering wheel controls" section.
	<b>Main beam headlamps</b>	and with an audible signal, ignition off.	pulling of the stalk towards you.	Pull the stalk to return to dipped headlamps.
			opening of the driver's door with the lights still on.	Rotate the ring on the lights stalk to position 0.
	<b>Direction indicators</b>	flashing with buzzer.	change of direction via the lights stalk, to the left of the steering wheel.	To the Right: control to be pushed upwards. To the Left: control to be pushed downwards.

Warning light		is	indicates	Solution - action
	<b>Front fog lamps</b>	lit.	manual selection.	The fog lamps only operate if the side lights or dipped headlamps are on.
	<b>Rear fog lamps</b>	lit.	manual selection.	The fog lamps only operate if the side lights or dipped headlamps are on. In conditions of normal visibility, take care to switch them off on penalty of being booked. "This light is a dazzling red."
Display		is	indicates	Solution - action
	<b>Cruise control</b>	lit.	cruise control selected.	Manual selection. Chapter 3, "Steering wheel controls" section.
	<b>Speed limiter</b>	lit.	speed limiter selected.	Manual selection. Chapter 3, "Steering wheel controls" section.
	<b>Service spanner</b>	lit.	service due shortly.	Refer to the list of checks in the servicing booklet. Have the service carried out by a PEUGEOT dealer.
	<b>Automatic gearbox</b>	displayed.	gear lever position selected.	Chapter 2, "Instruments and controls" section.
	<b>Particle emission filter saturation warning</b>	displayed and associated with the service warning light.	malfunction of the particle emission filter (diesel additive level, risk of clogging, ...).	Have the filter checked by a PEUGEOT dealer. Chapter 6, "Levels" section.

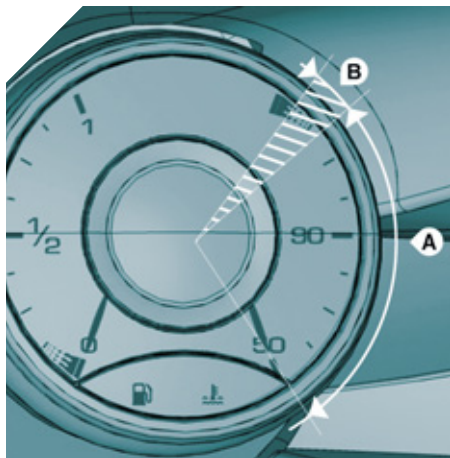


With monochrome screen


### COOLANT TEMPERATURE INDICATOR

In zone **A**, the temperature is correct. In zone **B**, the temperature is too high. The central **STOP** warning light and the maximum coolant temperature warning light **1** come on, accompanied by an audible signal and the message "Engine coolant temp. too high" on the display.

**You must stop immediately.**

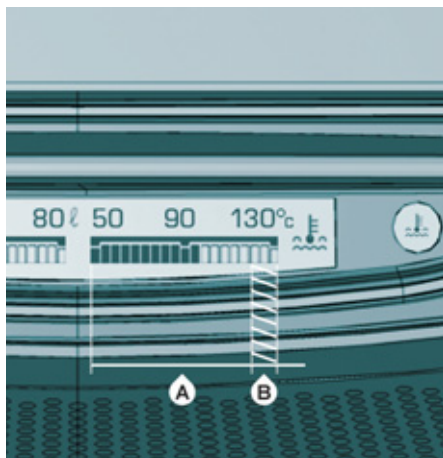

With colour screen

 Wait for the engine to cool before topping up the level. The cooling system is pressurised. In the event of a breakdown and in order to avoid any risk of scalding, unscrew the cap two turns to allow the pressure to drop. When the pressure has dropped, remove the cap and top up the level. Contact a PEUGEOT dealer.




### INSTRUMENT PANEL DISPLAY

After switching on the ignition, three functions are shown in succession:

- service indicator,
- engine oil level indicator (see corresponding section),
- total distance recorder (total and trip distances).

It also displays the automatic gearbox positions and programmes selected (see opposite).

 The total and trip distances are displayed for thirty seconds, when the ignition is switched off, on opening the driver's door as well as on locking and unlocking the vehicle.

## Service indicator

The display, located in the control block, informs you when the next service will be due in accordance with the "Manufacturer's" servicing schedule indicated in the servicing booklet. This information is determined in relation to the distance travelled since the previous service.

**i** Refer to the list of checks in the servicing booklet which was given to you on delivery of the vehicle.

**+** For further information, consult the internet site at the address:  
<http://public.servicebox.peugeot.com>

## Operation

A few moments after the ignition has been switched on, the spanner indicating a service operation lights up; the display for the total distance recorder tells you (in round figures) the distance remaining before the next service.

The points at which a service is due are calculated from the last indicator zero reset.

The point at which a service is due is determined by the distance travelled.

**Example:** 4 800 miles/km remain before the next service is due. When the ignition is switched on and for a few seconds, the display shows:



A few seconds after the ignition is switched on, the oil level is displayed, then the total distance recorder resumes normal operation showing the total and trip distances.

## The distance remaining before the next service is less than 500 miles/1 000 km

Each time the ignition is switched on and for a few seconds, the spanner flashes and the number of miles/kilometres remaining is displayed:



A few seconds after the ignition is switched on, the oil level is displayed, then the total distance recorder resumes normal operation and the spanner remains lit. This indicates that a service should be carried out shortly.

## The service is overdue

Each time the ignition is switched on and for a few seconds, the spanner flashes and the excess distance is displayed.



**i** With the engine running the spanner remains lit until the service has been carried out.

### Zero re-set


Your PEUGEOT dealer carries out this operation after each service.

However, if you carry out the service yourself, the re-set procedure is as follows:

- Switch off the ignition,
- Press and hold the trip recorder re-set button,
- Switch on the ignition.

The display begins a countdown.

When the display shows "**=0**", release the button; the spanner disappears.

 After this operation, if you wish to disconnect the battery, lock the vehicle and wait for at least five minutes, otherwise the zero re-set will not be registered.

### Engine oil level indicator

When the ignition is switched on, the engine oil level is indicated for a few seconds, after the service information.



### Oil level correct



### Lack of oil

Flashing of "**OIL**", linked with the service warning light, accompanied by an audible signal and a message on the display, indicates a lack of oil which could damage the engine.

If the lack of oil is confirmed by a check using the dipstick, it is essential that the level is topped up.



### Oil level gauge fault

Flashing of "**OIL --**" indicates a malfunction of the engine oil level

gauge. Consult a PEUGEOT dealer.



The level read will only be correct if the vehicle is on level ground and the engine has been off for more than 15 minutes.



### Dipstick

**A** = maximum, never exceed this level as a surplus of oil may damage the engine.

Contact a PEUGEOT dealer without delay.

**B** = minimum, top up the level via the oil filler cap, using the type of oil suited to your engine.





### Trip recorder zero reset button

With the ignition on, press the button until the zeros appear.



### Lighting rheostat

With the lights on, press the button to vary the intensity of the lighting of the instruments and controls. When the lighting reaches the minimum (or maximum) setting, release the button then press it again to increase (or reduce) the brightness. As soon as the lighting is of the required brightness, release the button.

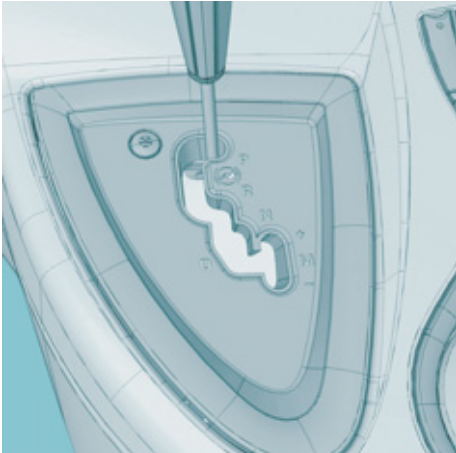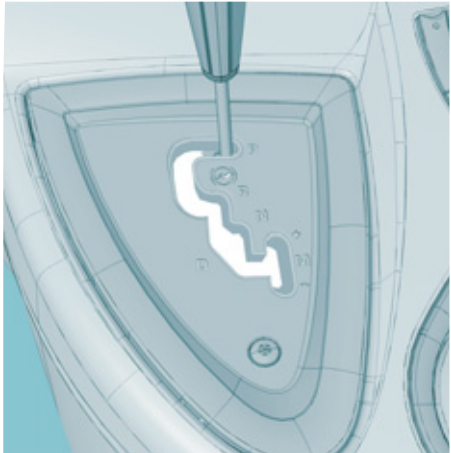

### GEARBOXES AND STEERING WHEEL

#### AUTOMATIC GEARBOX

The six-speed (Diesel engine) "Porsche Tiptronic-system" **automatic** gearbox offers a choice between:

- the comfort of **integral automatic operation**, enhanced by a snow programme,
- or the pleasure of **manual gear changing**.

#### Gear selection gate

- Move the lever in the gate to select a position. Once the position is selected, the corresponding indicator light appears on the instrument panel display.



**Park:** position of the lever when parked.  
To immobilise the vehicle or start the engine.



**Reverse:** position of the lever in reverse gear.  
To reverse the vehicle.



**Neutral:** position of the lever in neutral.



To park the vehicle (handbrake on) and start the engine.  
**Drive:** position of the lever while driving.



To move the vehicle forwards in automatic mode.  
**Manual:** selection of the gears by pressing the gear lever (1 to 6).

To move the vehicle forwards in manual mode.

## Gearboxes and steering wheel

### Moving off

38

With the engine running, to move off from position **P**.



- It is essential to press the brake pedal to exit position **P**,



- select position **R** or **D**,



- gradually release the pressure on the brake pedal; the vehicle moves off immediately.

You can also move off from position **N**.




- With your foot on the brake, release the handbrake,



- select position **R**, **D** or **M**,



- gradually release the pressure on the brake pedal; the vehicle moves off immediately.

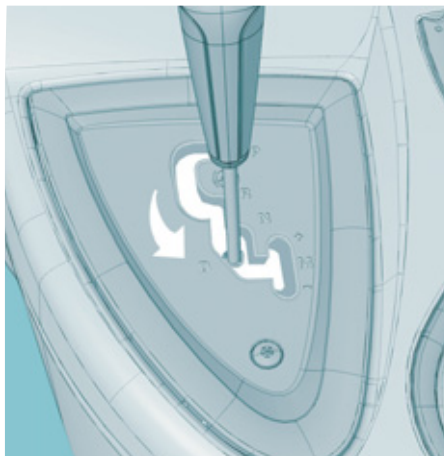

**i** For immediate maximum acceleration without touching the gear lever, press the accelerator pedal down as far as it will go to the end of its travel passing the point of resistance (kickdown). The gearbox will automatically change down or maintain the gear selected until maximum engine speed is reached.

On a descent, the gearbox will automatically change down in order to provide efficient engine braking and good re-acceleration.

If you take your foot off the accelerator suddenly, the gearbox will not change to a higher gear for reasons of safety.

When stationary with the gear lever in position **D** (drive), a vibration limiting device is activated by pressing the brake pedal.

### Automatic mode

Automatic changing of the **six gears**.




- Select position **D**.

The gearbox always selects the most suitable gear according to the following parameters:

- the style of driving,
- the road profile,
- the vehicle load.

The gearbox is then operating in auto-adaptive mode, without any action on your part.



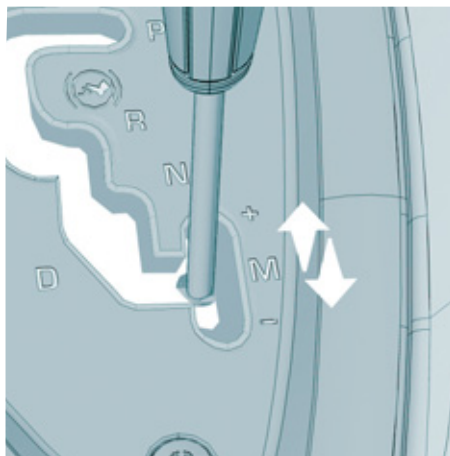

## Manual mode

Manual changing of the gears by pressing.



- Select lever position **M**,



- press the lever to the + sign to change to a higher gear, from 1 to 6,



- conversely, press the lever to the - sign to change to a lower gear.

- i** You can change from position **D** (automatic mode) to position **M** (manual mode) at any time.

In manual mode, it is only possible to change from one gear to another if the vehicle speed and engine speed permit. If they do not, the vehicle will operate temporarily in automatic mode.

When the vehicle is stationary or moving very slowly, the gearbox automatically selects gear 1.

The ❄ (snow) programme does not operate in manual mode.

## Reverse gear



- Select position **R**, with the vehicle stationary and the engine at idle.

## Stopping the vehicle, starting the engine



- Select position **P** to **immobilise the vehicle** or to **start the engine**, with the handbrake on or off.

- i** If the battery is flat and the lever is in position **P**, it will be impossible to change to another position.



- You can also select position **N** to **park** or to **start the engine**, with the handbrake on.

- i** If position **N** is engaged inadvertently while driving, allow the engine to return to idle before engaging position **D** to accelerate.

### Snow programme



In addition to the automatic programme, there is a special Snow programme.


This improves starting and drive when traction is poor. The snowflake appears on the instrument panel display.




- Press button  once the vehicle has been started and position **D** selected.

The gearbox adapts to driving on slippery roads.



 You can return to the automatic programme at any time.

- Press button  again to switch off the programme you are in.

### Operating abnormality

Any operating abnormality is indicated by an audible signal, accompanied by the message "**Automatic gear fault**" on the display and flashing of the Snow snowflake on the instrument panel.

In this situation the gearbox operates in downgrade mode (locked in 3rd gear). You may feel a substantial knock when changing from **P** to **R** and from **N** to **R** (this will not cause any damage to the gearbox).

Do not exceed 60 mph (100 km/h), keeping within the limit of local speed restrictions.

Contact a PEUGEOT dealer as soon as possible.

### Good practice

Never select position **N** when the vehicle is moving.

Never select positions **P** or **R** unless the vehicle is stationary.

Never change between positions to optimise braking on a slippery surface.

There is a risk of damage to the gearbox:

- if you press the accelerator and brake pedals at the same time,
- if you force the lever from position **P** to another position in the event of a battery failure.

When the engine is at idle, brakes not applied, if position **R**, **D** or **M** is selected the vehicle moves even without the accelerator being pressed.


For this reason, **do not leave children unsupervised inside the vehicle, with the engine running.**



5-speed gearbox



6-speed gearbox

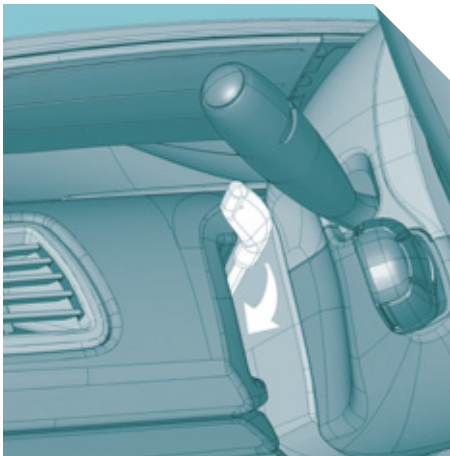

**MANUAL GEARBOX**

To change gear easily, always press the clutch pedal fully.

To prevent the mat from becoming caught under the pedal:

- ensure that the mat is positioned correctly,
- never fit one mat on top of another.

When driving, avoid leaving your hand on the gear knob as the force exerted, even if slight, may wear the internal components of the gearbox over time.

**Reverse gear (6-speed)**

Raise the collar under the gear knob to engage reverse gear.

Never engage reverse gear before the vehicle is completely stationary.


The lever should be moved slowly to reduce the noise on engaging reverse gear.

**STEERING WHEEL HEIGHT AND REACH ADJUSTMENT**

When the vehicle is stationary, release the steering wheel adjustment mechanism by lowering the lever.

Adjust the steering wheel for height and reach, then lock the adjustment mechanism by pushing the lever fully upwards.

## Starting and stopping

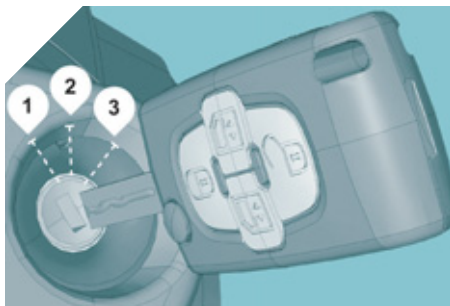

### STARTING AND STOPPING

STOP position: steering lock.  
The ignition is off.

Running and accessories position.  
Certain accessories can be used.

Starting position.  
The starter is operated.

### Good practice when starting



#### Diesel pre-heating warning light

Turn the key to the Running position.


In cold weather, wait for this warning light to switch off then operate the starter (Starting position) until the engine starts.

If the temperature is high enough, the warning light comes on for less than one second, you can start without waiting.

### Key

Take care not to place the key in contact with grease, dust, rain or a damp environment.

A heavy object attached to the key (key ring, ...) weighing down on the shaft of the key in the ignition switch may cause a malfunction.

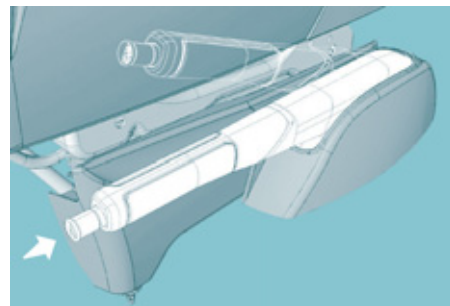

### Good practice when stopping

#### Minimise engine and gearbox wear

When switching off the ignition, let the engine run for a few seconds to allow the turbocharger to return to idle.

Do not press the accelerator when switching off the ignition.

There is no need to engage a gear after parking the vehicle.

### Handbrake

If your vehicle is fitted with a version with a rotating front seat, the handbrake can be disengaged. Pulling the handbrake to immobilise the vehicle then lowering the lever does not release the brake, it permits rotation of the driver's seat.

Pull the button placed at the end of the handbrake forwards.

The handbrake lever lowers.


You can now rotate the seat.

To return to normal operation, pull the lever up until it clicks.



If the handbrake is on or has not been released fully, this is indicated by:

- a warning light which comes on on the instrument panel,
- an audible signal,
- a message on the display.

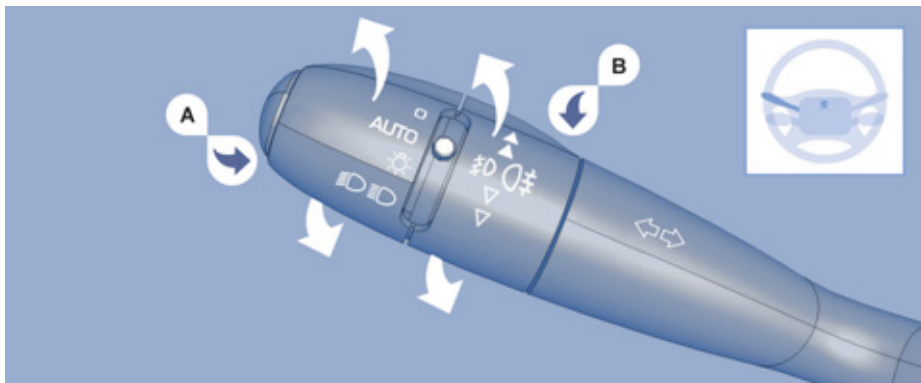

## STEERING MOUNTED CONTROLS

### DIRECTION INDICATORS (green flashing)




**Left:** downwards.  
**Right:** upwards.

### LIGHTING CONTROL

#### Front and rear lights

Selection is by turning ring **A**.

 Checking by means of the indicator lights on the instrument panel is described in the "Instruments and controls" section of chapter 2.



Lights off

# AUTO

Automatic lights  
If your vehicle is fitted with a brightness sensor.



Side lights



Dipped beam (green)  
Main beam (blue)

## Steering mounted controls

### Dipped beam/main beam change

Pull the stalk fully towards you.

### Lights-on buzzer

When the ignition is switched off, when the driver's door is opened, a buzzer sounds if you have left your lights on.

### Front and rear fog lights

Rotate ring **B** forwards to switch on and rearwards to switch off. The status is confirmed by the light on the instrument panel.

These operate with the side lights and the dipped beam headlamps.



Front fog lights (green, 1st rotation of the ring forwards).



Front fog lights (green) and rear fog lights (amber, 2nd rotation of the ring forwards).



To switch off the front and rear fog lights, turn the ring rearwards twice in succession.



In clear weather or in rain, both day and night, rear fog lights dazzle and are prohibited.

Do not forget to switch them off when they are no longer needed.

Automatic switching on of the lights switches off the rear fog lamps, but the front fog lamps remain on.

### Daytime running lamps

Depending on the country in which the vehicle is sold, the vehicle may be equipped with daytime running lamps. The dipped headlamps come on when the vehicle is started.



This warning lamp comes on in the instrument panel.



The instruments and controls (instrument panel, screen, air conditioning control panel, ...) are only illuminated on switching to the automatic illumination of headlamps mode or when the lamps are switched on manually.

## Automatic switching on of the lights

# AUTO

If your vehicle is fitted with a brightness sensor, the side lights and dipped beam headlamps switch on automatically if the

light is poor, or during operation of the windscreen wipers. They switch off as soon as the light becomes bright enough or the windscreen wipers stop. This function is not compatible with the daytime lights.

**i** In foggy weather or in snow, the brightness sensor can detect sufficient light. As a consequence, the lights will not come on automatically.

**👁️** Do not cover the brightness sensor located in the centre of the fascia. It is used for the automatic switching on of the lights and for the automatic wipers.

### Activation

Turn the ring to the **AUTO** position. The activation of this function is accompanied by a message on the display.

### Deactivation

Turn the ring forwards or rearwards. The deactivation of this function is accompanied by a message on the display.

The function is deactivated temporarily when you use the manual lights stalk.

**If the brightness sensor does not function correctly**, the lights come on accompanied by the service warning light, an audible signal and a message on the display.

Contact a PEUGEOT dealer.

## Automatic "Follow-Me-Home" lighting

With the ignition off, when you leave your vehicle with the **automatic switching on of the lights function activated**, the side lights and dipped headlamps remain on for the selected duration.



To deactivate or activate this function, go to the display configuration menu.

The duration of the timed period must also be set (15, 30, 60 seconds), via the display configuration menu.

Carry out these operations when the vehicle is stationary.

### Cancelling:

- "flash" the headlamps,
- get out of the vehicle and lock it.



## HEADLAMPS BEAM


Depending on the load in your vehicle, the beam setting must be adjusted.

- 0** - 1 or 2 people in the front seats.
- 1** - 5 people.
- 2** - 6 to 8 people.
- 3** - Driver + maximum authorised loads.

**Initial setting is position 0.**

## AUTOMATIC ADJUSTMENT OF THE XENON HEADLAMPS

On vehicles which are fitted with xenon headlamps, this system automatically corrects the height of the light beam, regardless of the load in the vehicle. The driver is then guaranteed optimum lighting without dazzling other road users.

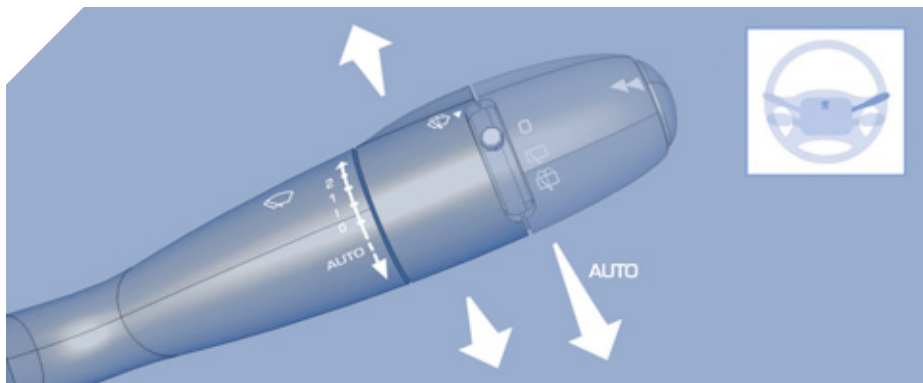

## WINDSCREEN WIPER STALK

### Manual windscreen wipers

- 2 Fast wipe (heavy rain).
- 1 Normal wipe (moderate rain).
- 1 Intermittent wipe.
- 0 Off.
- ↓ Single wipe (press downwards).

In the Intermittent position, the wiping speed is in proportion to the vehicle speed.

**The command must be reactivated whenever the ignition has been switched off for more than one minute:**

- move the stalk to any position,
- then move it back to the required position.

### Special position of the windscreen wipers

In the minute following switching off of the ignition, any action on the stalk positions the wipers against the windscreen uprights.

This action enables you to position the wiper blades for winter parking, cleaning or replacement.

**+** Refer to the "Changing a windscreen wiper blade" section of chapter 7.

To park the wipers in their normal position after this has been done, switch on the ignition and move the stalk.

### Wash-wipe and headlamp wash

Pull the stalk towards you, the wash-wipe is accompanied by a timed sweep of the wipers.

If your vehicle is fitted with this function, the headlamp wash is linked with the wash-wipe, it is triggered if the dipped headlamps are on.

**+** To top up the levels, refer to the "Levels" section of chapter 6.

### Vehicle fitted with the automatic windscreen wipers control

Do not cover the rain sensor located in the centre of the fascia.

On vehicles which are fitted with this control, in the **AUTO** position, the windscreen wipers operate automatically and **adapt their speed to the intensity of the rainfall.**

When not in **AUTO** mode, for the other positions, refer to the manual windscreen wipers section.



## Activation

Press the control downwards.  
Activation of the function is accompanied by a message on the display.


**The automatic windscreen wipers function must be reactivated** if the ignition has been switched off for more than one minute, by pressing the stalk downwards.

## Deactivation/Switching off


Place the windscreen wipers stalk in position 1, 1 or 2. Deactivation of the function is accompanied by a message on the display.

**In the event of malfunction** of the automatic windscreen wipers, the windscreen wipers will operate in intermittent mode.

Contact a PEUGEOT dealer to have the system checked.

 When using an automatic car wash, switch off the engine.

In winter, it is advisable to wait until the windscreen is completely clear of ice before activating the automatic wiping.

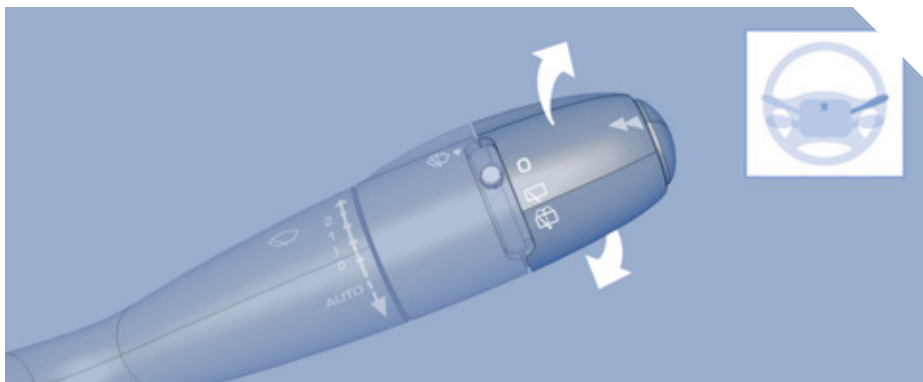

## Rear windscreen wiper

Turn the ring to the first notch. The wiping speed is inversely proportional to the speed of the vehicle.

## Automatic wiping - reverse gear

- place the front wipers stalk in a position other than 0.
- engage reverse gear.
- the rear wiper operates with intermittent wiping.



## Rear windscreen wash

Turn the ring past the first notch: the windscreen wash then the windscreen wiper operate for a fixed time.



## Good practice


When using an automatic car wash, switch off the ignition without setting the alarm.

In winter, it is advisable to wait until the windscreen is completely clear of ice before activating the automatic wiping.

In the event of a considerable amount of snow or ice, switch on the rear screen demister. Once de-icing is complete, remove the snow or ice which has accumulated on the rear wiper blade. You can now operate the rear windscreen wiper.



If a tailgate bicycle carrier is used, deactivate the rear wiper by going to the display's configuration menu.

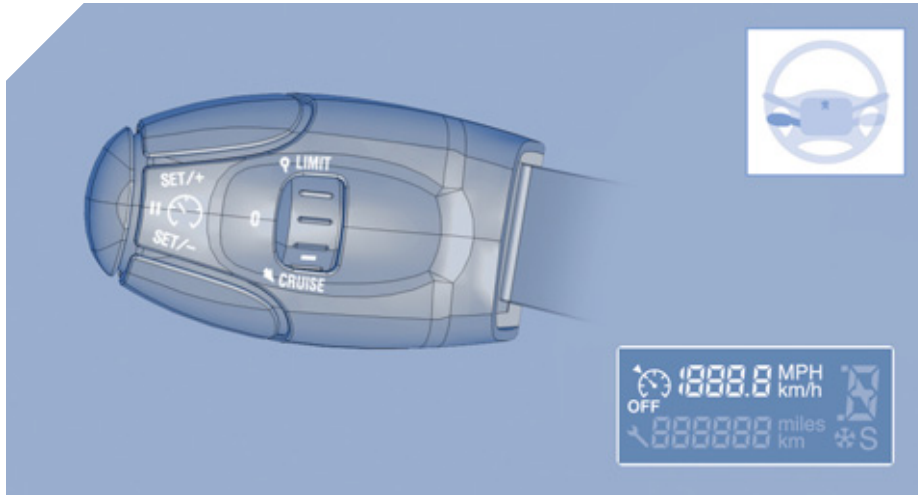

## CRUISE CONTROL "CRUISE"

"This is the speed at which the driver wishes to drive".

This aid to driving in free-flowing traffic enables the vehicle to maintain the speed programmed by the driver, unless a steep gradient makes this impossible.

In order for it to be programmed or activated, the vehicle speed must be greater than 25 mph (40 km/h) with at least 4th gear engaged in the case of vehicles fitted with a manual gearbox.

On vehicles fitted with an automatic gearbox, the lever must be in position **D** (Drive) or at least 2nd gear must be engaged in manual mode.

If the vehicle is fitted with a speed limiter and cruise control (according to the country in which the vehicle is sold and the engine), these functions cannot be activated at the same time.

This cruise control shows the function selection status on the instrument panel and displays the programmed speed:



Function selected, displaying of the "Cruise Control" symbol.



Function deactivated, OFF (example at 65 mph (107 km/h)).




Function activated (example at 65 mph (107 km/h)).



Vehicle speed above (e.g. 70 mph (118 km/h)), the programmed speed is displayed flashing.



Operating fault detected, OFF - the dashes flash.

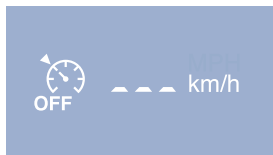

### Selecting the function

- Place the switch in the **CRUISE** position. The cruise control is selected but is not yet active and no speed has been programmed.



### First activation/ programming a speed

- Reach the chosen speed by pressing the accelerator.
- Press the **SET -** or **SET +** button.



This programmes/activates the reference speed and the vehicle will maintain this speed.



### Temporary exceeding of the speed


It is possible **to accelerate** and drive momentarily at a speed greater than the programmed speed. The value programmed flashes.

When the accelerator pedal is released, the vehicle will return to the programmed speed.

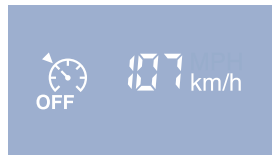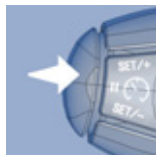

### Deactivation (off)

- Press this button or the brake or clutch pedal.

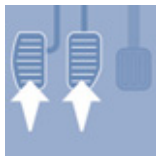

### Reactivation

- Following deactivation of the cruise control, press this button.

Your vehicle will return to the last programmed speed.

Alternatively, you can repeat the "first activation" procedure.



### Changing the programmed speed

There are two methods of memorising a speed higher than the previous one:

Without using the accelerator:

- press the **Set +** button.

A brief press increases the speed by 1 mph (km/h).

A maintained press increases the speed in steps of 5 mph (km/h).

Using the accelerator:



- exceed the memorised speed until the speed required is reached,
- press the **Set +** or **Set -** button.

To memorise a speed lower than the previous one:

- press the **Set -** button.

A brief press decreases the speed by 1 mph (km/h).

A maintained press decreases the speed in steps of 5 mph (km/h).

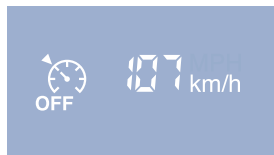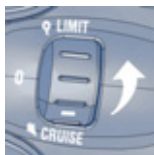


### Switching the function off

- Place the dial in position **0** or switch off the ignition to switch everything off.

### Cancelling the programmed reference speed

When the vehicle becomes stationary, after switching off the ignition, the system no longer memorises a speed.

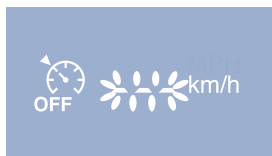

### Operating fault

The programmed speed is cleared and the dashes flash for a few seconds.

Consult a PEUGEOT dealer to have the system checked.

### Good practice

When changing the programmed reference speed by means of a maintained press, pay attention as the speed can increase or decrease rapidly.

Do not use the cruise control on slippery roads or in heavy traffic.


In the event of a steep slope, the cruise control cannot prevent the vehicle from exceeding the programmed speed.

In any event, the cruise control cannot replace the need to observe the speed limits, nor can it replace the need for vigilance and responsibility on the part of the driver.

You are advised to keep your feet near the pedals.

To avoid any jamming under the pedals:

- ensure that the mat and its fixings on the floor are positioned correctly,
- never place one mat on top of another.

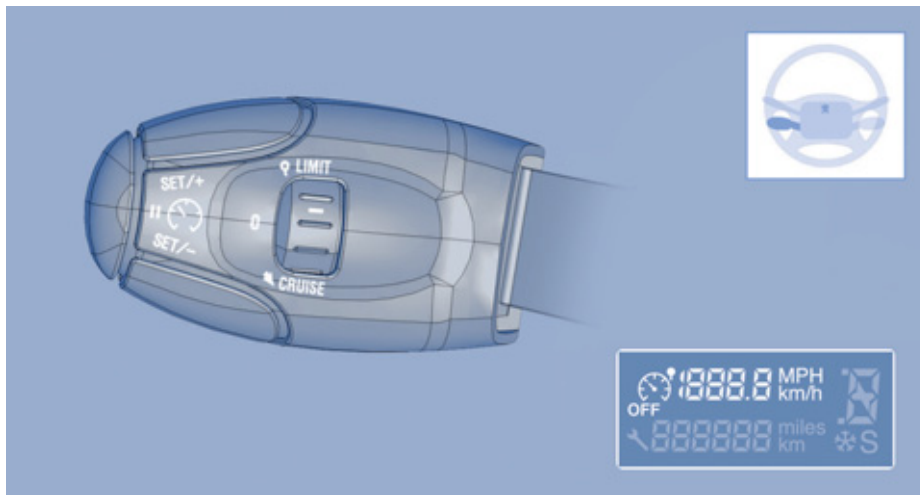

## SPEED LIMITER "LIMIT"

"This is the selected speed which the driver does not wish to exceed".

This selection is made with the engine running while stationary or with the vehicle moving. The minimum speed which can be programmed is 20 mph (30 km/h).

The speed of the vehicle responds to the pressure of the driver's foot as far as the accelerator pedal point of resistance which indicates that the programmed speed has been reached.


However, pressing the pedal beyond this point of resistance to the floor permits exceeding of the programmed speed.


To resume use of the limiter, simply reduce the pressure on the accelerator pedal gradually and return to a speed below that programmed.


If the vehicle is fitted with a speed limiter and cruise control (according to the country in which the vehicle is sold and the engine), these functions cannot be activated at the same time.


**The operating actions can be carried out when stationary, with the engine running, or with the vehicle moving.**


This speed limiter shows the function selection status on the instrument panel and displays the programmed speed:

- 

Function selected, displaying of the "Speed Limiter" symbol.
- 


Function deactivated, last programmed speed - OFF (example at 65 mph (107 km/h)).
- 

Function activated (example at 65 mph (107 km/h)).
- 

Vehicle speed above (example at 70 mph (118 km/h)), the programmed speed is displaying flashing.
- 



Operating fault detected, OFF - the dashes flash.

## Steering mounted controls

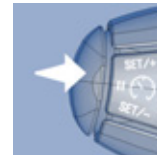

### Selecting the function

- Place the dial in the **LIMIT** position. The limiter is selected but is not yet active. The display indicates the last programmed speed.

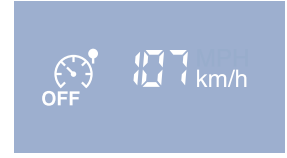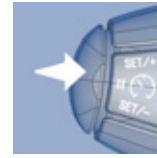

### Programming a speed

A speed can be programmed without activating the limiter but with the engine running.

To memorise a speed higher than the previous one:

- press the **Set +** button.

A brief press increases the speed by 1 mph (km/h).

A maintained press increases the speed in steps of 5 mph (km/h).

To memorise a speed lower than the previous one:

- press the **Set -** button.

A brief press decreases the speed by 1 mph (km/h).

A maintained press decreases the speed in steps of 5 mph (km/h).

### Activation/Deactivation (off)

Pressing this button once activates the limiter, pressing the button again deactivates it (OFF).



### Exceeding the programmed speed

Pressing the accelerator pedal in order to exceed the programmed speed will have no effect unless you press the pedal **firmly** beyond the **point of resistance**.


The limiter is deactivated temporarily and the programmed speed flashes.

To return to the limiter function, reduce your speed to below the programmed speed.

### Flashing of the speed

The speed flashes:

- following forcing of the accelerator point of resistance,
- when the limiter cannot prevent an increase in the vehicle speed due to the profile of the road or on a steep descent,
- in the event of sharp acceleration.

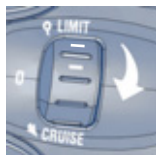

### Switching the function off

- Place the dial in position **0** or switch off the ignition to switch the system off. The last programmed speed remains in the memory.



### Operating fault

The programmed speed is cleared and the dashes flash for a few seconds.

Contact a PEUGEOT dealer to have the system checked.



### Good practice


In any event, the speed limiter cannot replace the need to observe speed limits, nor can it replace the need for vigilance and responsibility on the part of the driver.

Always pay attention to the profile of the road, take care on sharp acceleration and stay in complete control of your vehicle.

To avoid any jamming under the pedals:

- ensure that the mat and its fixings positioned correctly,
- never place one mat on top of another.



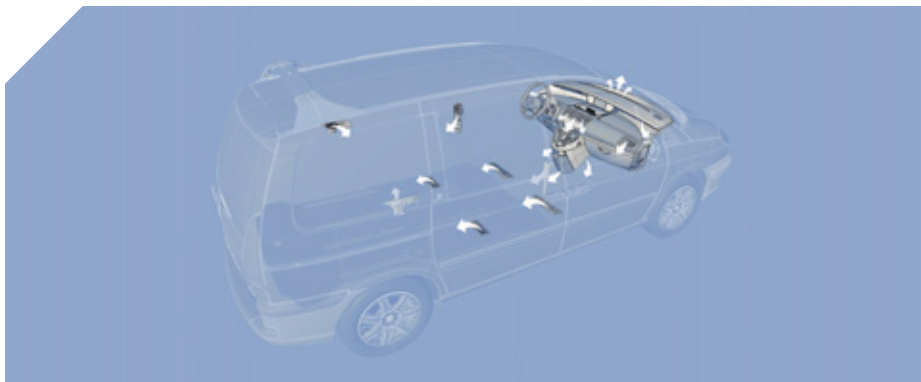

### VENTILATION

#### CORRECT USE OF THE VENTILATION AND AIR CONDITIONING

##### Vents

##### "Leave them open"

For optimum distribution and diffusion of hot or cool air in the passenger compartment, there are adjustable central and side vents which can be directed sideways (right or left) towards the top of the body. For your comfort while driving, do not close them, direct the flow of air towards the windows instead.

The air vents directed towards the floor of the vehicle complete the equipment.

##### Passenger compartment filter, carbon filter

Ensure that this filter is in good condition and have all of the filter elements replaced regularly.



Refer to the "Checks" section of chapter 6.

##### Air conditioning

In all seasons, the air conditioning should only be used with the windows closed. However, if the interior temperature remains high after a prolonged period parked in the sun, do not hesitate to ventilate the passenger compartment for a few minutes.

Use the AUTO mode as much as possible as it permits optimised control of all of the functions: air flow, passenger compartment comfort temperature, air distribution, air intake mode or air recirculation in the passenger compartment.

Operate the air conditioning system for 5 to 10 minutes, once or twice a month, to keep it in perfect working order.

It is normal that the condensation created by the air conditioning system results in a flow of water which may form a puddle under the vehicle when parked.

If the system does not produce cold air, do not use it and consult a PEUGEOT dealer.





## DE-ICING AND DEMISTING

### De-icing the rear screen and mirrors



Press this button, with the engine running, to de-ice the rear screen and mirrors.

The de-icing indicator light comes on. The duration

of de-icing depends on the exterior temperature.

Pressing the button again reactivates the de-icing.



It is possible to stop the de-icing before it is switched off automatically by pressing this button again.

### Demisting, visibility programme



The comfort programme may not be sufficient to quickly demist or de-ice the windows (humidity, several passengers, ice).

In this case, select the visibility programme. The visibility programme indicator light comes on.

It activates the air conditioning, the air flow, the de-icing of the rear screen and provides optimum distribution of the ventilation to the windscreen and side windows.

It deactivates the air recirculation.




## ADDITIONAL HEATER

To improve your comfort, vehicles fitted with an HDi engine may be fitted with automatic additional heating.

However, with the engine at idle or when the vehicle is stationary, it is normal to notice a high-pitched whistling and a slight emission of smoke and odour.



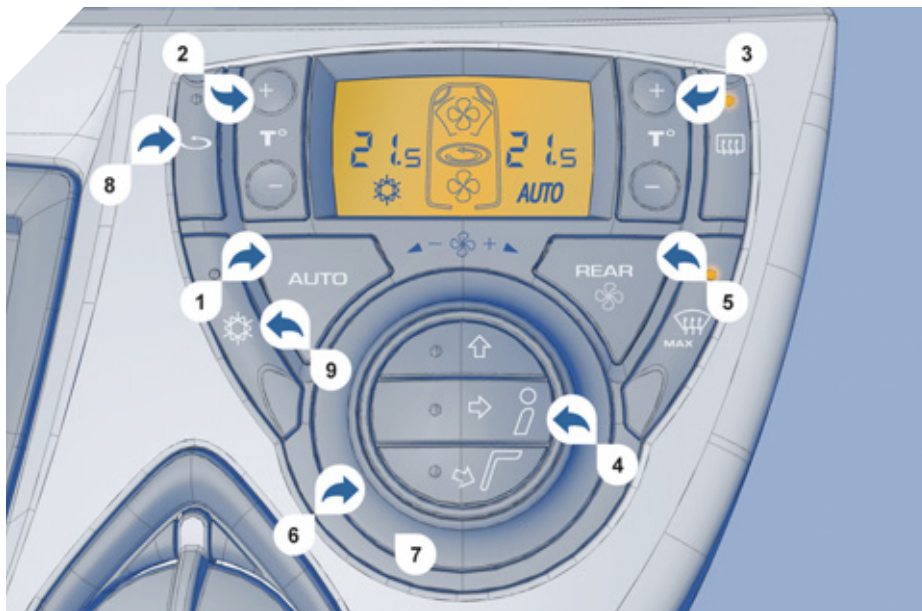

**AUTO**

**1 - AUTO mode**  
This is the normal air conditioning operating mode.

- Press the **"AUTO"** button.  
Depending on the comfort temperature selected, the system controls the air distribution, flow and intake so that the passenger compartment is comfortable and has an adequate circulation of air. You do not have to make any further adjustments.

When the engine is cold, in order to prevent a rush of cold air, the ventilation will reach its optimum level progressively.

The **"AUTO"** symbol is displayed.


For your comfort, the settings selected when the ignition is switched off will be retained when it is switched on again, if the temperature in the passenger compartment has not changed significantly; otherwise, operation will resume in automatic mode.


### AUTOMATIC AIR CONDITIONING WITH SEPARATE SETTINGS

Located on the centre console, the control panel is to the right of the gear lever.

The driver and front passenger can each adjust the air temperature to suit their requirements.

They can also activate or disarm the rear ventilation adjustment controls.

 Do not cover the sunshine sensor located in the centre of the fascia. This is used to regulate the air conditioning.

 Refer to the beginning of the "Ventilation" section of chapter 6.



## 2 - Driver's temperature adjustment

## 3 - Passenger's temperature adjustment

The required value is displayed (from 14 to 28: comfort value = 21).

The maximum difference between the value displayed for the driver and for the passenger may not be greater than 5.

If you use these manual adjustments, the AUTO symbol switches off.

Press the corresponding + and - buttons to adjust.

To make the driver and passenger setting the same:

- air conditioning with "MONO" version, press the **MONO** button.
- air conditioning with "REAR" version, press the + button for more than two seconds.

**i** On entering the vehicle, the interior temperature may be considerably lower (or higher) than is comfortable. It is not necessary to change the value displayed in order to quickly obtain the desired level of comfort. The system will operate at maximum performance to reach the comfort value set.



## 4 - Adjustment of the air distribution

Pressing the corresponding button(s) **4** allows you to position the air flow towards:



- the windscreen,
- the side vents and the central vents,
- the side vents, the central vents and the footwells,
- the windscreen and the footwells,
- the footwells.



The indicator light corresponding to the position selected **4** comes on.



## 5 - Adjustment of the rear ventilation ("REAR" version)

To permit adjustment of the ventilation to the rear passengers, press the **REAR** button.

The rear ventilation symbol is displayed.



The row 2 side vents air flow adjustment controls are operational and can be adjusted.

To deactivate the rear ventilation controls, press the **REAR** button again.

The rear ventilation symbol switches off.

Take care not to obstruct the side vents and the air outlets on the floor.



## MONO Version

Press this button once to obtain an even temperature throughout the passenger compartment. The reference value is selected by the driver.



### 6 - Adjustment of the air flow

- Turn control knob **6** to the right or to the left respectively to increase or decrease the air flow.

On the display, the blades of the fan darken when the air flow is increased.

### 7 - Switching the system off

- Turn air flow control knob **6** to the left until the display switches off.

The action disarms all the system functions, with the exception of demisting of the rear screen. Your comfort setting is no longer maintained and switches off.

For your comfort, avoid remaining in the off position.

- Operating control knob **6** again or the "**Visibility**" button or "**AUTO**" button reactivates the system with the values which were present before it was switched off.

Flashing of the points in the temperature setting values indicates that there is a malfunction of the air conditioning.

Consult a PEUGEOT dealer.



### 8 - Intake of exterior air/ Recirculation of interior air

- Press this button to recirculate the air inside.

The air recirculation symbol and indicator light **8** are displayed.

Recirculation insulates the passenger compartment from outside smells and smoke.



Avoid prolonged operation of interior air recirculation (risk of misting of the windows and deterioration of air quality).

- Press this button again to return air intake to automatic control.



### 9 - Air conditioning On/Off

- Press this button to activate automatic operation of the air conditioning.



The symbol and the indicator light **9** are displayed.

- Press this button again to switch off the air conditioning.


The symbol and the indicator light **9** switch off.

## SEATS

## FRONT SEATS WITH MANUAL ADJUSTMENT

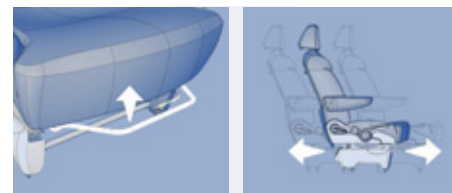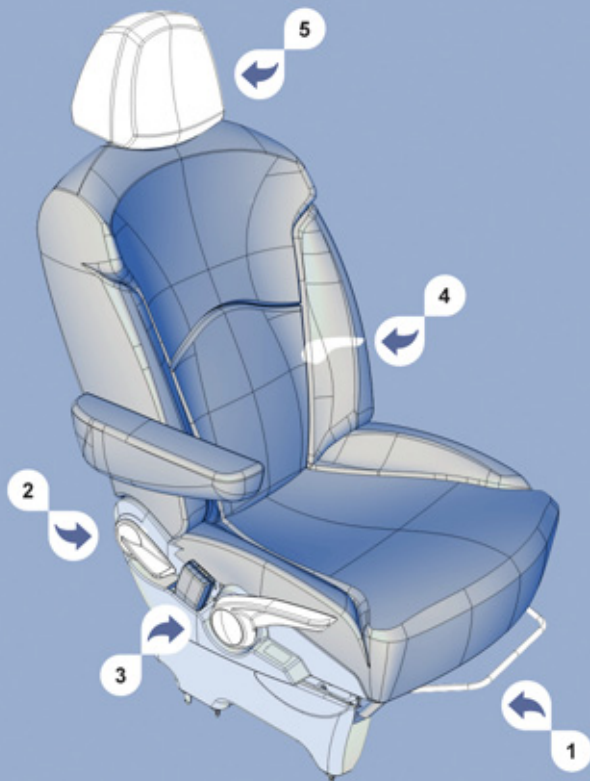**1 - Forwards/backwards adjustment**

Lift the bar and slide the seat forwards or backwards.

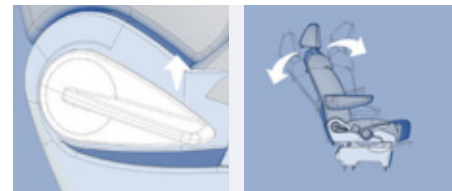
**2 - Seat back angle adjustment**

Pull the lever upwards and set the required angle.



### 3 - Driver's seat height adjustment

Manoeuvre the handle upwards or downwards until the desired position is reached.

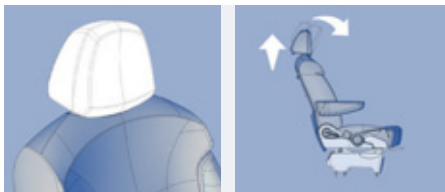

### 5 - Head restraint height and angle adjustment

To raise or lower the restraint, pull it forwards, then slide it.

The adjustment is correct when the upper edge of the head restraint is level with the top of the head.

To remove it, set it in the high position, lift the tab using a coin and pull upwards and forwards at the same time.

To re-install, engage the head restraint rods in the holes, making sure they are aligned with the seat back.




### 4 - Driver's seat lumbar adjustment

Move the lever up or down to obtain the required position.



Never drive with the head restraints removed; they must be in place and correctly adjusted.

## FRONT SEATS WITH ELECTRICAL ADJUSTMENT

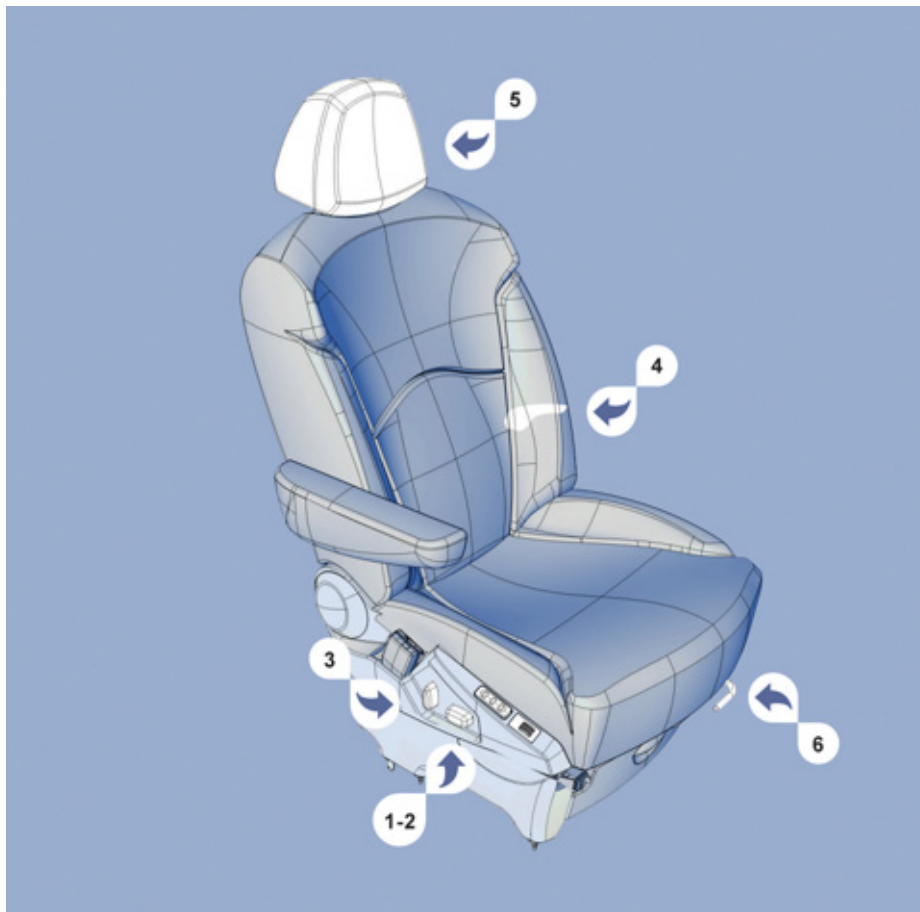

### 1 - Forwards-backwards adjustment

Push the control forwards or backwards to slide the seat.



### 2 - Driver's seat height adjustment

Push the rear part of the control upwards or downwards to obtain the required height.



### 3 - Seat back angle adjustment

Tilt the control to the front or the rear to obtain the angle required.

**i** The electrical functions of the seats are cancelled one minute after the ignition has been switched off.



### 4 - Driver's seat lumbar adjustment (mechanical)

Raise or lower the lever to obtain the correct position.



### 5 - Head restraint height and angle adjustment (manual)


To raise or lower the head restraint, pull it forwards, then slide it.

The setting is correct when the upper edge of the head restraint is level with the top of the head.

To remove the head restraint, place it in the high position, lift the tab using a coin and pull upwards and forwards at the same time.

To re-install, engage the head restraint rods in the holes, making sure they are aligned with the seat back.

**👁** Never drive with the head restraints removed; they must be in place and correctly adjusted.

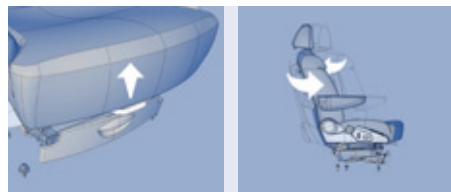

### 6 - Rotating of seats (mechanical)

Place the seat back in the upright position.

Place the seat in the highest intermediate longitudinal position.

On the driver's side, push the steering wheel, apply the handbrake. To allow rotation of the seat, lower the handbrake handle pulling on the end.

Pull the control upwards and rotate the seat inwards.

**+** For further information regarding the disengaging of the handbrake, refer to the "Driving safety" section of chapter 4.

**👁** This rotating operation must be carried out with the engine switched off. The handbrake, the lever of which is now in the lower position, remains applied. Do not forget to raise the lever and release the brake before setting off.

Driving with a passenger seated facing the rear is prohibited.





### Memorising seat positions

Two driving positions can be memorised, using **buttons M/1** and **M/2**.

These are located on the side of the seat:

- Place the ignition key in the "running" position (2nd notch),
- Adjust your seat,
- Press button **M**, then button **1** for a first driving position within four seconds.

Repeat the same actions on buttons **M** and **2** to store another driving position.

An audible signal confirms that a position has been memorised.

Memorising a new position cancels the previous one.



### Activating a memorised driving position


#### Engine off

- Briefly press button **1** or **2** to recall the corresponding memorised position.

**i** After recalling a memorised position five times in succession, the function will be cancelled until the engine is started.

#### Engine running

- Keep button **1** or **2** pressed down until the end of setting of the corresponding memorised position.


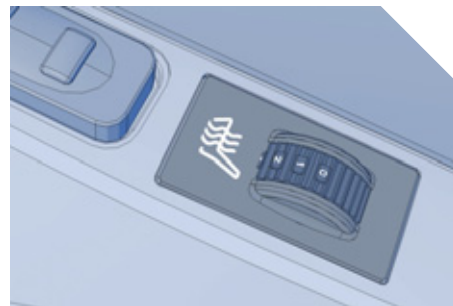


### Front heated seat controls

When the engine is running, the front seats can be heated separately.

Use the adjustment controls located on the side of each front seat to switch on and select the self-regulated level of heating:

- 1:** Low.
- 2:** Medium.
- 3:** High.
- 0:** Off.

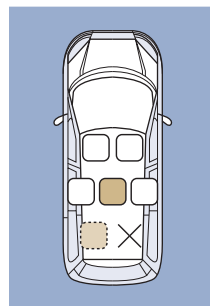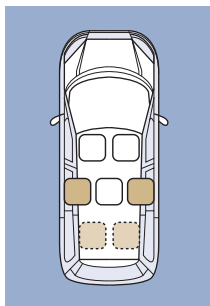


## Rear side seats

Two rear passenger seats, left and right side position, rows 2 and 3.

## Rear centre seat

One rear passenger seat, row 2 central position and row 3 left side position. Integrated seat belt. Plastic shell trim. Folds to the low table position.

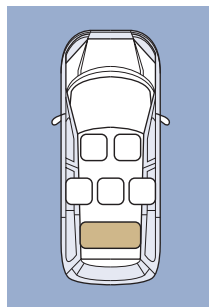

## Rear bench seat

One three-seat bench seat, row 3.



## REAR SIDE SEATS


### Forwards/backwards adjustment

Lift bar **A** and slide the seat forwards or backwards.

### Adjusting the angle of the seat back

Push lever **B** upwards and adjust the angle as required.


Release the lever to lock.

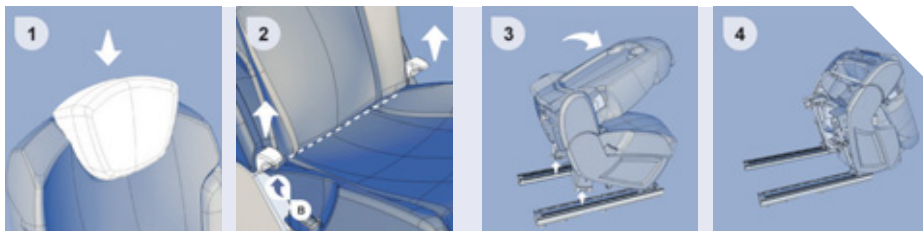

### Handling the side seat

#### Access to row 3

1. Place the head restraint in the low position.
2. Push lever **B** upwards as far as possible.

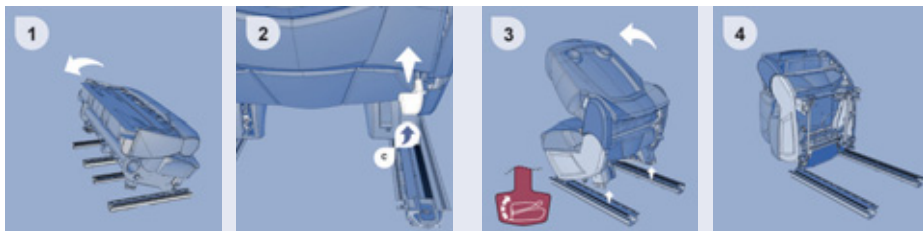


#### Exit from row 3

1. Place the head restraint in the low position.
2. Pull control **C**.
3. Guide the tilting of the seat back forwards until the rear anchorages are unlocked. If you experience any difficulty, use the red emergency control to unlock the anchorages.

3. Fold the seat back onto the seat cushion and guide the tilting of the seat back forwards until the rear anchorages are unlocked. If you experience any difficulty, use the emergency control to unlock the anchorages.
4. Place the seat in the vertical closed position.

4. Place the seat in the vertical closed position.

**i** Following each entry or exit, reposition the raised seat guiding it until the rear anchorages lock in their rails.

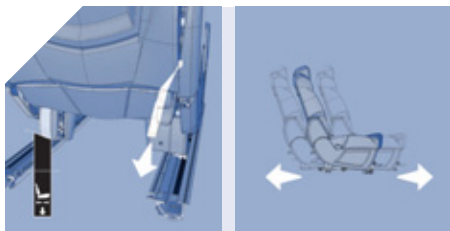

### Control for sliding the rear side seats from row 3 or the boot


Pull the strap (marked with the arrow symbol) to slide the seat in front of you.



### Removing the side seat

1. Tilt the seat back forwards to detach the rear anchorages.
2. Grab the red strap which appears and pull it upwards, the front anchorages unlock.

3. The strap, like the handle, enables you to remove the seat.

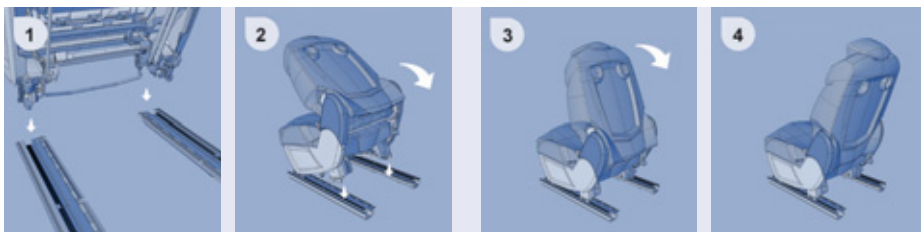

### Refitting the side seat



Check that there is no obstacle obstructing the slides or preventing correct locking of the seat anchorages.

1. Place the front anchorages at the front stop in the slides. Support the strap firmly for easier positioning of the seat.
2. Tilt the folded seat towards the rear. The rear anchorages lock.
3. Raise the seat back.
4. Slide the seat.



## ROW 2 CENTRE SEAT


This can be placed in row 3, on the left.



### "Low table" position

1. Place the head restraint in the low position.
2. At the top (at the back of the seat), lift the handle identified by the symbol and guide the tilting of the seat back towards its seat cushion.


3. You have a "low table". To return to the seat position, lift the handle and guide the raising of the seat back.

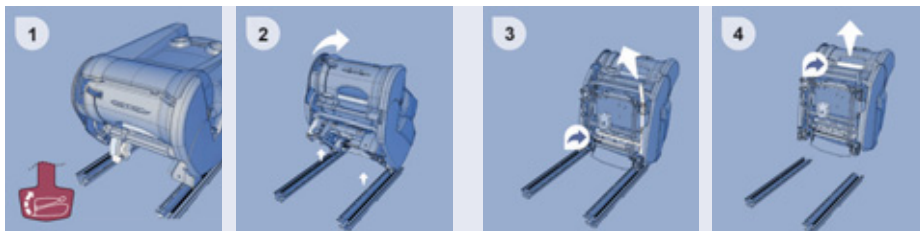


### Removing the centre seat

1. Place the seat in the "low table" position.
2. Using the control which you pull, tilt the seat back forwards so releasing the rear anchorages from the slides.


3. Grab the red strap which appears and pull it upwards, the front anchorages unlock.
4. The strap, like the handle, enables you to remove the seat.

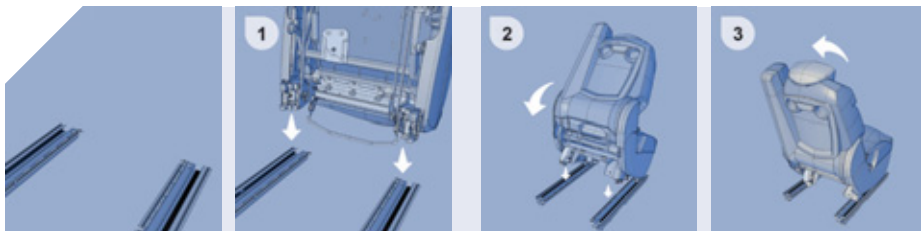

### Refitting the centre seat

 Check that there is no obstacle obstructing the slides or preventing correct locking of the seat anchorages.


1. Place the front anchorages at the front stop in the slides. Support the strap firmly for easier positioning of the seat.
2. Tilt the folded seat towards the rear. The rear anchorages lock.
3. Raise the seat back and slide the seat.

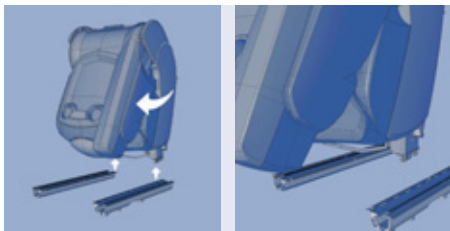

### Turning a rear seat round

The rear seats can be placed in a "face to face" position.

Carry out the operations described for **removal** then turn the seat round and resume with the procedure for **refitting** the seat.

 This turning operation must be carried out when stationary. Driving with a passenger seated facing the rear is prohibited. When the vehicle is being driven, placing a row 2 seat in the closed position while a passenger is sitting in row 3 is prohibited.

### Rear head restraints


The rear head restraints can be removed and have two positions:

- high, position for use,
- low, storage position.


To raise or lower a head restraint, pull it forwards sliding it at the same time.

To remove it, place it in the high position, push the lug and pull it forwards and upwards.

To refit it, engage the head restraint rods in the holes taking care to remain in the centreline of the seat back.

 Never drive with the head restraints removed, they must be in place and correctly adjusted.



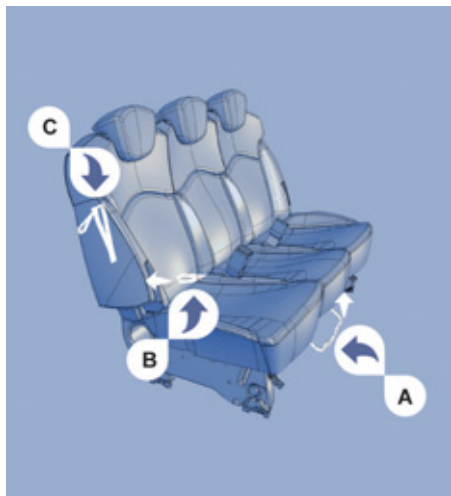

## REAR BENCH SEAT

### Forwards/backwards adjustment

From the seat cushion, lift bar **A** and slide the seat towards the front or the rear.


**i** From the boot, you can pull on strap **B** and slide the seat forwards to make it easier to load the vehicle.

**i** The rear bench seat must only be fitted in row 3.



### Seat back folded position

1. Place the head restraints in the low position.
2. Pull the strap **C** upwards, from the tailgate.
3. Tilt the seat back on the seat cushion.

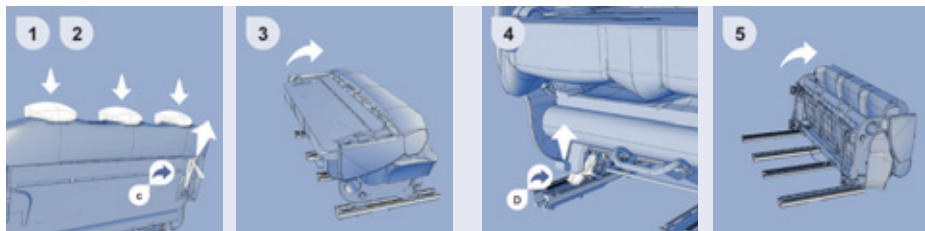


### Vertical position of the bench seat

1. Place the head restraints in the low position.
2. Pull the strap **C** upwards, from the tailgate.
3. Fold the seat back onto the seat cushion.
4. Pull the lever **D** to unlock the rear anchorages.
5. Place the seat in the vertical "folded" position.

**i** When driving, attach the retaining straps to the handles.

## Seats

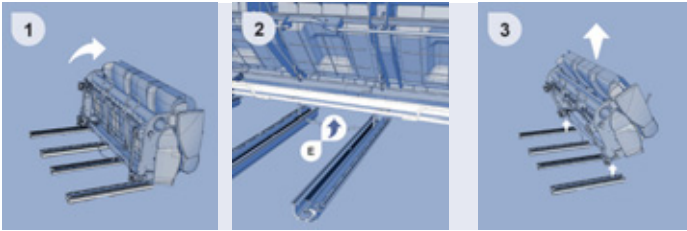


### Removing the bench seat

1. Fold the seat to the vertical position.
2. Grasp the two bars **E** underneath the seat.

3. The front anchorages unlock.

**i** For removal and refitting, pass the rear seat, in the "folded" position, through the sliding side doors.

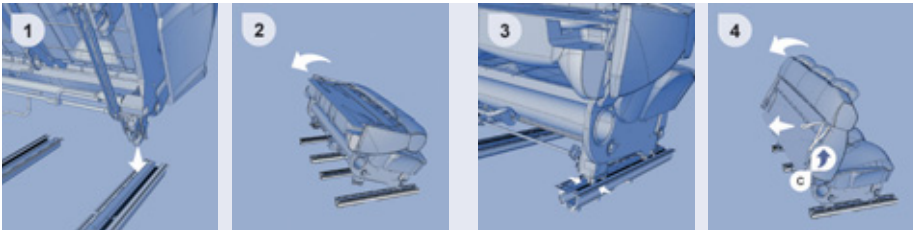

### Refitting the bench seat

**i** Check that there is nothing blocking the runners which could prevent correct locking of the bench seat anchorages.

1. Position the front anchorages at the front stop of the runners.
2. Tilt the folded seat rearwards.
3. The rear anchorages then lock.
4. Unlock the seat back and lift it using the strap **C**.



### **i** Good practice


When the vehicle is being driven, it is prohibited for a passenger to sit:

- in row 3 if the seat back in front (row 2) is in the table position.
- in row 3 if the seat/bench in front (row 2) is in the vertical folded position.
- in the centre seat if the right-hand side seat is in the vertical folded position.




## MODULARITY AND POSSIBLE SEAT CONFIGURATIONS


### Examples of various arrangements combining pleasure and practicality:

 The various operations modifying the existing configuration must be carried out with the engine switched off (See section on "Seats"). It is prohibited to be in a rearwards facing position when the vehicle is being driven.






The rotating of the seats depends on the vehicle equipment and the country.

 The centre seat may be installed in the central position in row 2 and in the left side position in row 3.

### 5 seats with picnic position when parked

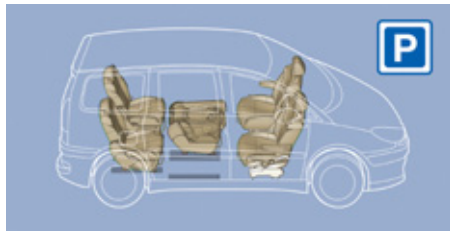



### 5 seat arrangements

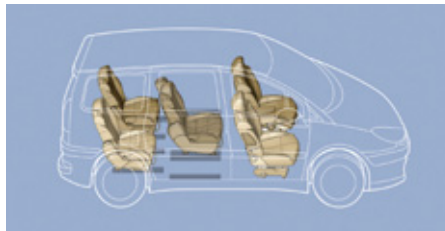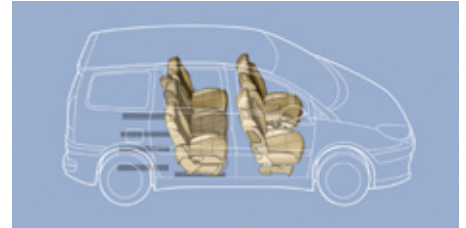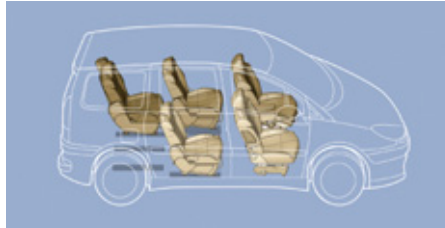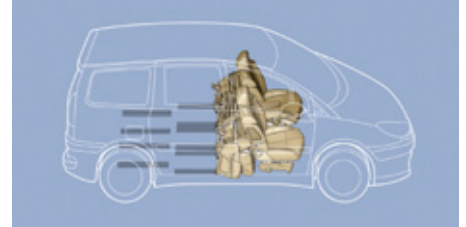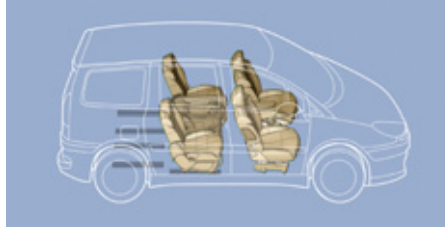







## Seats

72







7 seats with access to row 3

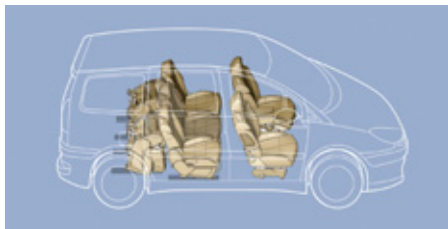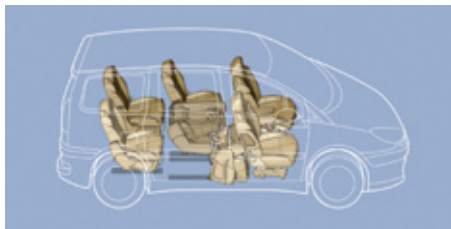


8 seats with bench seat

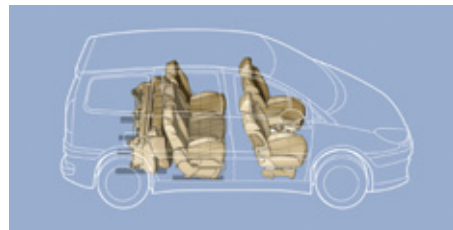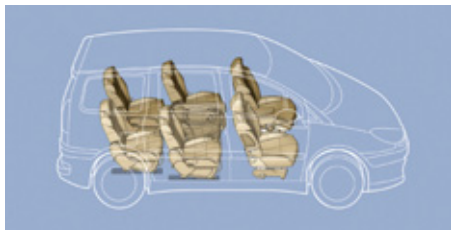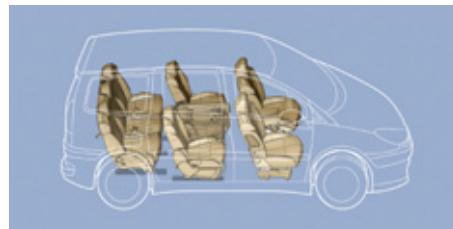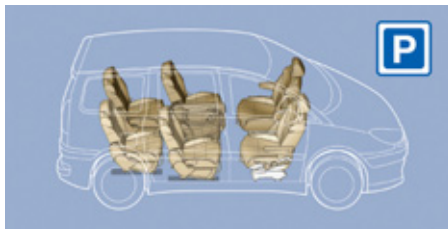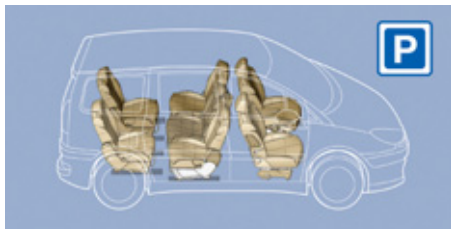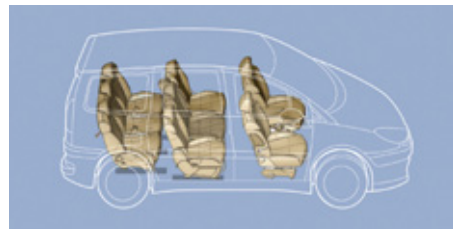

"Cargo"/Transportation of long objects configuration

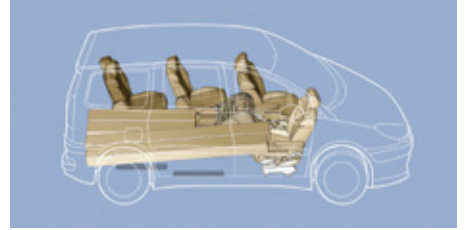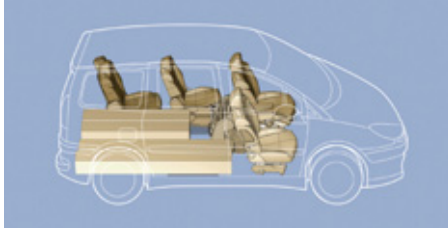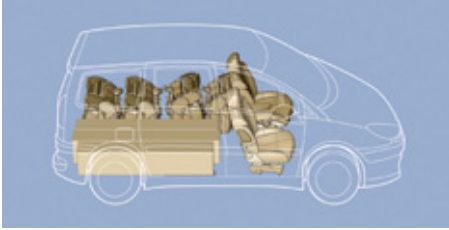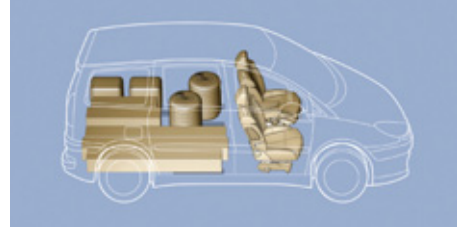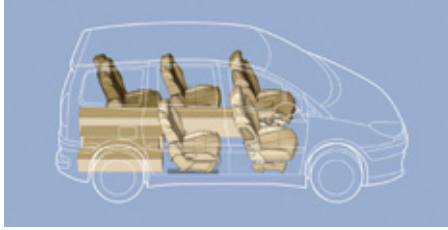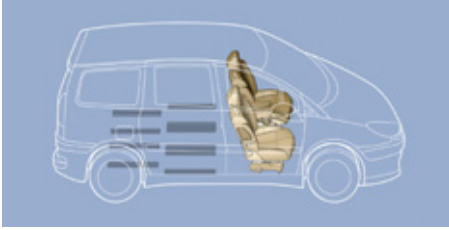



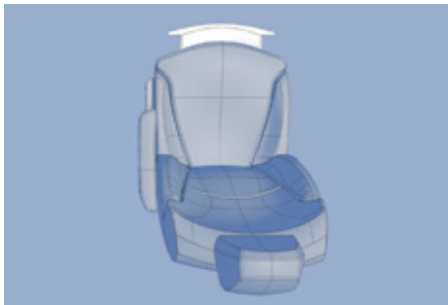

## PRACTICAL INFORMATION

### FRONT SEAT LAYOUT

#### Storage drawers

There is a storage drawer under each front seat.


- To open it, lift and pull.
- To take it out, open it to its full extent, lift the two tabs on either side of the drawer, then remove it completely.



#### 'Aircraft' type table

You have an 'aircraft' type table with a rim, equipped with a cup holder, fitted to the rear of each front seat.

Do not forget to fold this before pivoting the seat.

 Each front seat also has a storage pocket on the seat back.

#### 12V socket

You have a 12 V accessory socket (120 W) at the foot of the driver's seat, which is accessible to passengers of row 2.


#### Front and rear armrests

##### To place the armrest in its rest position:

- Lift the armrest until it is aligned with the seat back.

##### To place the armrest in the position in which it is used:

- Push it towards the rear,
- Fold it down completely,
- Raise it slowly to the required position,
- If you lift it past the required position, restart the above operations.

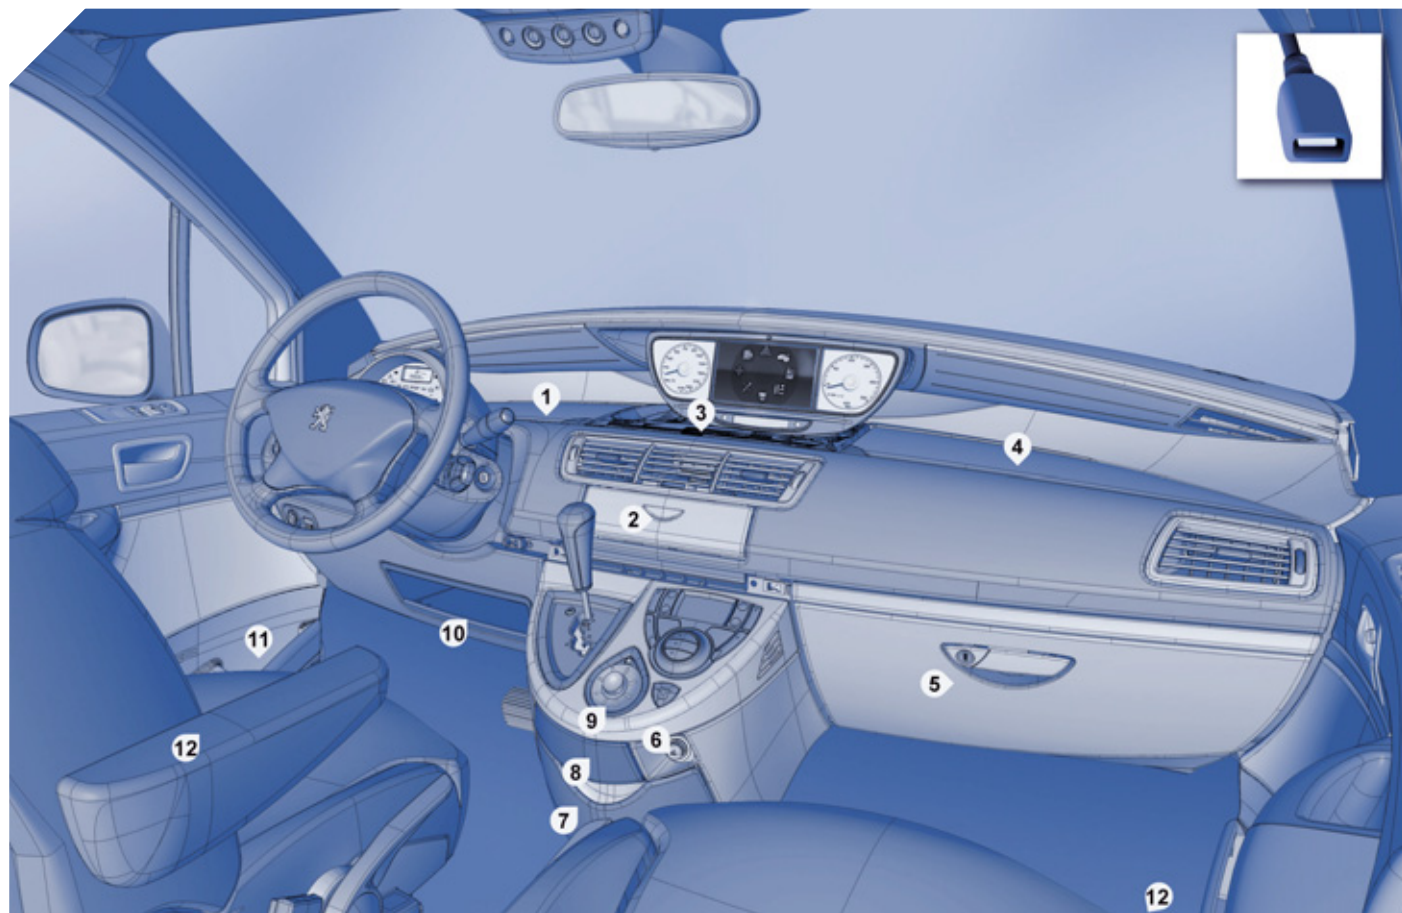

## FRONT INTERIOR LAYOUT

### 1. Driver's upper glove box

To open, press the button.

To close, press the cover.

It includes special compartments for storing a pen, a mobile telephone, coins or tokens and credit cards.

### 2. Audio equipment concealing flap

Lower the flap fully to lock it in place.

Press the flap to raise it.

### 3. Central storage compartment

### 4. Passenger's upper glove box

To open, press the button.

To close, press the cover.

It includes special compartments for storing a pair of spectacles, keys, five CDs and four audio cassettes or nine audio CDs.

Bluetooth.

### 5. Passenger's lower glove box

This is fitted with a lock.

To open the glove box, lift the handle.

The light comes on when the cover is opened.

It contains three sockets for the connection of video equipment and access to the fascia fuse box.

It includes special compartments for storing maps, a packet of cigarettes, an A4 document etc.

RCA sockets.

### 6. Lighter or 12 V socket for accessories (120 W)

This permits the connection of a mobile telephone charger, a baby's bottle warmer, etc.

### 7. Cooled compartment

It can hold up to three cans.

Slide the closer, located on the right, to open (upwards) or close (downwards) the air inlet.

### 8. Can holder and ashtray

This retractable and lit support contains up to two can holders, a removable ashtray and a location for the lighter when it is used as a 12 V socket (120 W).

### 9. Storage compartment or additional telematics control

The storage compartment must not be used as an ashtray.

If fitted on your vehicle, the additional telematics control is located on the centre console.

### 10. Storage compartment

### 11. Door tray with space for a bottle of water


### 12. Mat fitting/removal

When removing the front mat, push the seats as far back as possible and remove the fixings.

When refitting, position the mat correctly on the pins and clip the fixings. Check that the mat is secured correctly.

To prevent the mat from becoming caught under the pedals:

- only use mats suited to the fixings already present in the vehicle. It is imperative that these fixings are used.
- never fit one mat on top of another.

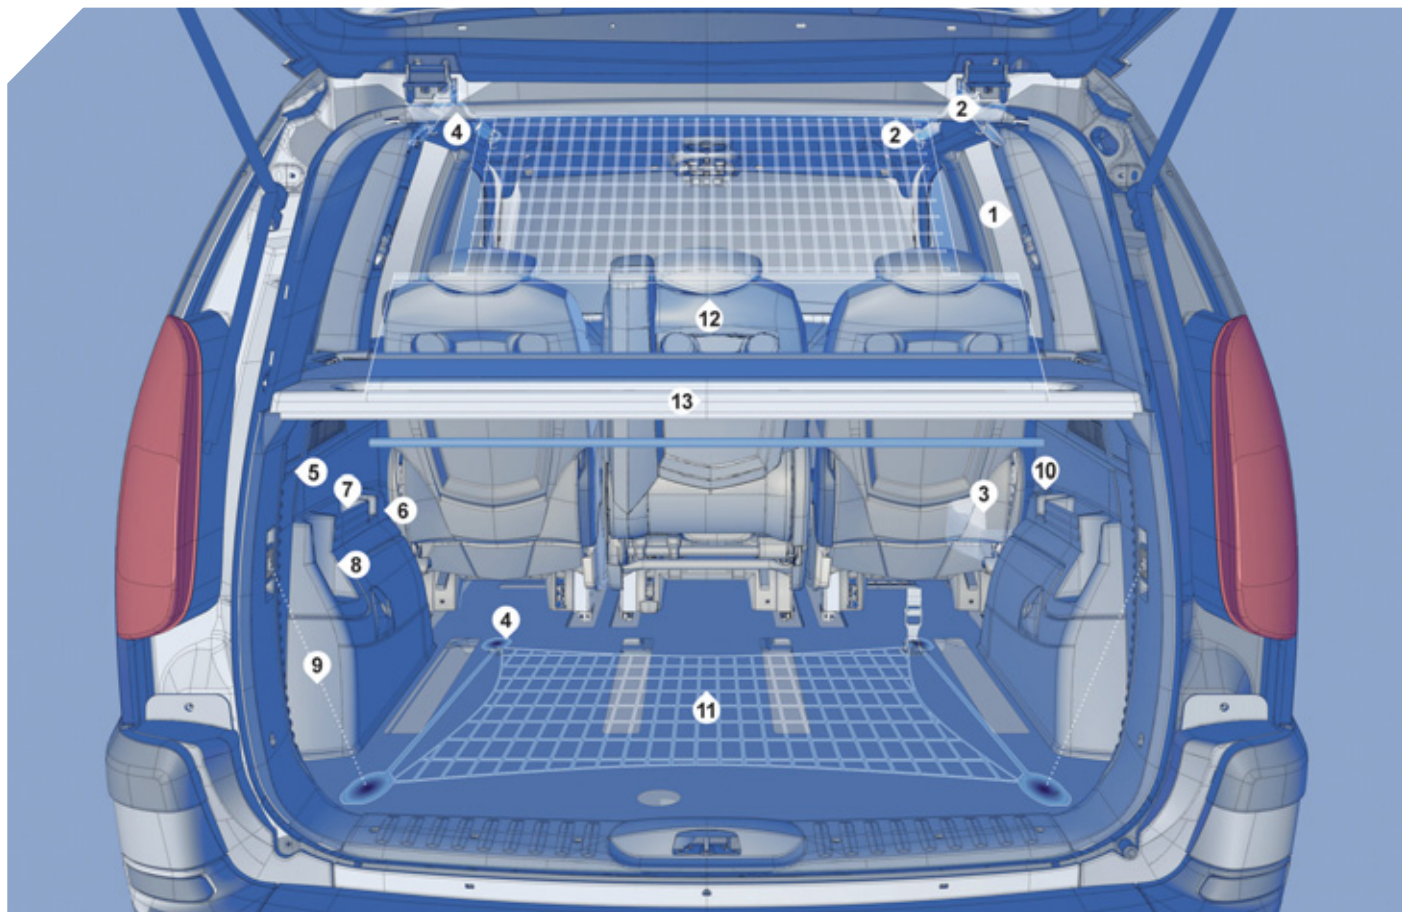



## REAR INTERIOR LAYOUT

### 1. Access handle

### 2. Grab handle and coat hook

### 3. Door tray with storage for a can and a bottle of water or for the portable bin with ashtray

### 4. High load retaining net fastenings

Open the covers of the upper fastenings in row 3.

Install the ends of the metal bar in these fastenings.

Secure the two tray strap hooks in the stowing rings on the floor.

Pull the two straps taut.

Secure the two hooks on the elastic parts of the tray in these rings.

The rings are located directly below the corresponding upper fastenings.

### 5. Storage compartment

### 6. Can holder

### 7. Storage compartment

### 8. Bottle holder or portable bin with ashtray

### 9. Luggage retaining net "hammock" position fastenings

Fold the net in two.

Secure the two centre hooks in the stowing rings on the floor.

Secure the net's remaining four hooks on the tailgate pillars.

### 10. 12 V socket for accessories (120 W)

This permits the connection of a mobile telephone charger, a baby's bottle warmer, ...

### 11. Luggage retaining net "octopus" position

Secure the net's four hooks in their stowing rings on the floor.

### 12. Load space cover (5 seat version)

To install it:

- position one end of the roller in row 2,
- compress the opposite end of the roller and position it,
- release it to allow it to engage,
- unroll the cover as far as the pillars,
- secure the two hooks on the pillars,

To remove it:

- pull the cover towards you to detach it from its fastenings,
- return the cover into its roller,
- compress it and remove it from its support in row 2.

### 13. Rear shelf with umbrella holder (7-8 seat version)

To remove the shelf:


- pull it rearward
- lift it slightly, then remove it

To install it:


- tilt it forwards slightly,
- push to engage it in its fastenings.



Front courtesy light

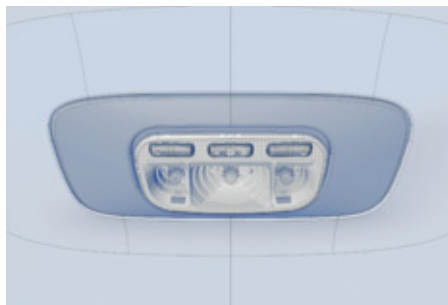

Rear courtesy light

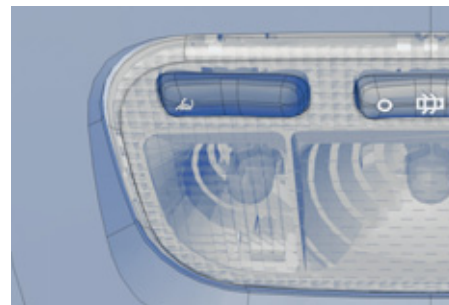

Individual reading light

## COURTESY LIGHTS

### Automatic switching on/off

The front courtesy light comes on when the key is removed from the ignition, when the vehicle is unlocked, when one of the front doors is opened or for location of the vehicle using the remote control.

It switches off gradually after the ignition is switched on and when the vehicle is locked.



Permanently on, ignition on.



Front: comes on when one of the front or rear doors is opened.




Rows 2 and 3: comes on when one of the rear doors is opened.



Permanently off.

### Rear courtesy light rows 2 and 3

These are switched on and off by means of a manual switch.

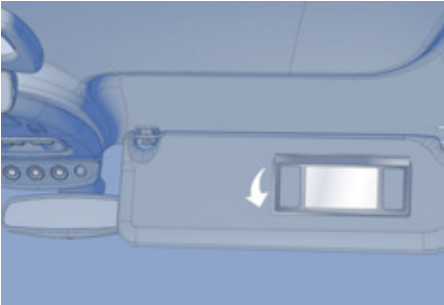

### SUN VISOR WITH ILLUMINATED COURTESY MIRROR

With the ignition on, the mirror is illuminated automatically when the concealing flap is raised.

### AREAS FOR TOLL CARDS/CAR PARK TICKETS

The athermic windscreen has two non-reflective zones located either side of the base of the interior mirror.

They are intended for affixing toll cards and/or car park tickets.





### SIDE BLINDS

Side blinds are available in rows 2 and/or 3.

Pull the side blind by the tab(s).

Position the blind's attachment(s) on the corresponding hook(s).

- i** Ensure that the tabs are hooked correctly to prevent any damage to the blind when the corresponding sliding side door is opened.

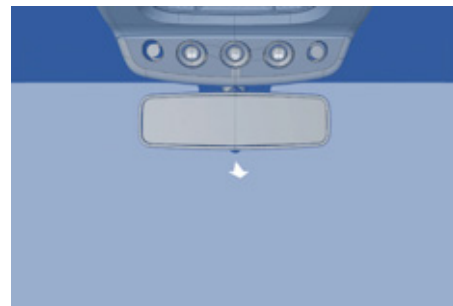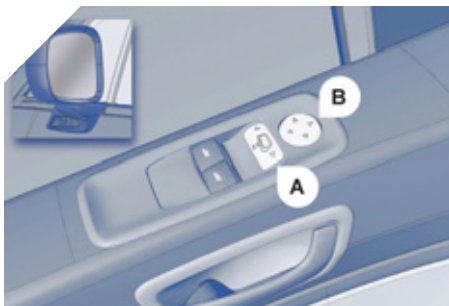

## MIRRORS AND WINDOWS

### MIRRORS

#### Electric exterior mirrors

- Move switch **A** to the right or to the left to select the corresponding mirror.
- Move knob **B** in all four directions to adjust.
- Return switch **A** to the centre position

When parked, the mirrors can be folded back manually, or electrically by pulling switch **A** rearwards.

Electric unfolding of the mirrors is possible with the key on unlocking the vehicle.

#### Automatic day/night interior mirror

This automatically and gradually changes between the day and night positions. To prevent dazzling, the glass of the mirror darkens automatically depending on the intensity of the light from behind. It clears as the light (headlamps of following vehicles, sunlight) decreases, ensuring maximum visibility.

#### Special feature

To ensure maximum visibility during manoeuvres, the mirror clears automatically when reverse gear is engaged.

#### Manual rear view mirror

The rear view mirror has two positions:

- day (normal),
- night (anti-dazzle).

To change from one to the other, push or pull the lever on the lower edge of the mirror.



## ELECTRIC WINDOWS

1. **Driver's electric window switch.**
2. **Passenger electric window switch.**
3. **Rear right electric window switch.**
4. **Rear left electric window switch.**
5. **Rear electric windows disarming switch (child safety).**
  - red strip visible: the rear switches are activated.
  - red strip covered: the rear switches are disarmed.

You have two options:

### Manual operation:

- ☞ press or pull switch **1**, without going beyond the point of resistance. The window stops when the switch is released.

### Automatic operation:

- ☞ press or pull switch **1**, beyond the point of resistance: the window opens or closes completely when the switch is released. Pressing the switch again stops the movement of the window.

- i** The electrical functions of the electric windows are disarmed one minute after switching off the ignition.

### Disarming the rear controls

For the safety of your children, press switch **5** to disarm all of the electrical controls in the rear:

- electric windows,
- sliding side doors,
- sunroofs.

### Safety auto-reverse

When the window rises and meets an obstacle, it stops and partially lowers again.

In the event of contact during operation of the windows, you must reverse the movement of the window. To do this, press the switch concerned.

### Reinitialising the window

In the event of unwanted opening of the window on closing (for example, in the presence of ice), in the event of a malfunction or following reconnection of the battery, the window must be reinitialised:


- press the switch until the window is fully open,
- then pull it again until the window is fully closed,
- continue to hold the switch for approximately one second after the window has closed.

**The safety auto-reverse function is not active during these operations.**

**i** Always remove the key from the ignition when leaving the vehicle, even for a short time.

The driver must ensure that:

- no one is preventing correct closing of the windows,
- the passengers use the electric windows correctly,
- children do not hinder the movement of the windows.

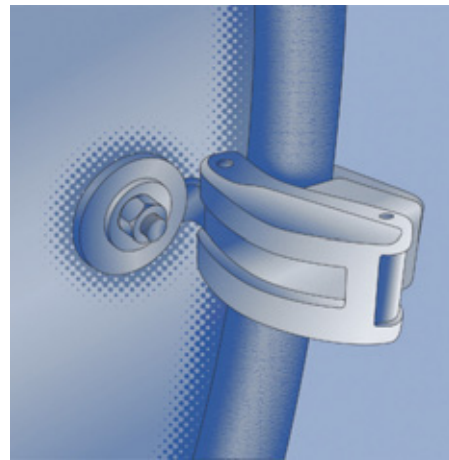

### REAR WINDOWS

To partially open the rear windows, tilt the lever and push it fully to lock the windows in the open position.



## IMPROVED SAFETY AND SECURITY



With 5 stars in the Euro NCAP ADULT OCCUPANT PROTECTION tests, the 807 protects you in several ways. Its structure absorbs


a large proportion of the energy connected with impacts.

In the event of a front impact, the retractable steering column limits the backwards movement of the steering wheel and the risks of intrusion of the engine and gearbox into the passenger compartment are reduced.

In the event of a side impact, you are inside a cell armed with solid side strengtheners.

Details of the other components are given in the content of this chapter.

Tests carried out on an 807 fitted with the 2.0 HDi engine.

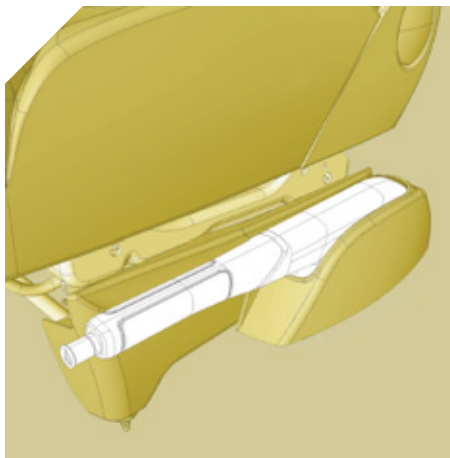

## DRIVING SAFELY

### HANDBRAKE

#### Applying


When parking, pull the handbrake to immobilize your vehicle. When parking on a slope, direct your wheels towards the pavement and pull the handbrake.

#### Releasing

Pull on the handle and press the button to release the handbrake.

#### Disengaging

If your vehicle is fitted with a version with a rotating front seat, apply the handbrake.

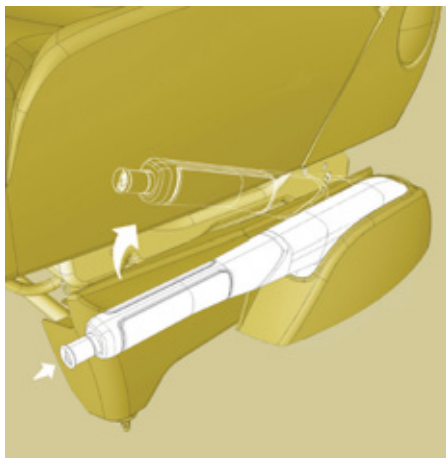

Pull the button located at the end of the handbrake forwards.

The handbrake lever lowers.


You can now pivot the seat.

To return to normal operation, pull the lever upwards until a click is heard.

If the handbrake is still on or has not been released properly, this is indicated by:



a warning light which comes on on the instrument panel, an audible signal, a message on the display.

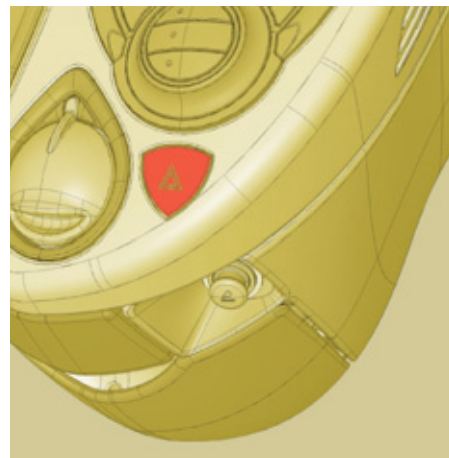

## HAZARD WARNING LIGHTS

Press the button, the direction indicators flash.

They can operate with the ignition off.

### Automatic lighting of hazard warning lights

Equipment conditioned according to country: when braking in an emergency, depending on the deceleration, the hazard warning lights come on automatically. They switch off automatically the first time you accelerate.

It is also possible to switch them off by pressing the button.





## FRONT AND/OR REAR PARKING ASSISTANCE

If fitted on your vehicle, the system is audible and/or visual and consists of four proximity sensors, located in the front and/or rear bumper. The sensors detect any obstacle which enters the field: person, vehicle, tree, gate, located in front of or behind the vehicle during the manoeuvre.

Objects the size or thickness of which is detected at the beginning of the manoeuvre, may no longer be detected at the end of the manoeuvre: due to blind spots between and below the sensors. Examples: stake, roadworks cone, kerbstone.

This system does not take the place of the vigilance and responsibility of the driver.

## Switching the system on

The system is activated as soon as:

- reverse gear is engaged,
- the speed falls below 6 mph (10 km/h) in forward gear.

This is accompanied by an audible signal and displaying of the vehicle, depending on the display.

The proximity information is given by:

- an audible signal, which becomes more rapid as the vehicle approaches the obstacle,
- a graphic on the display, with blocks which become progressively closer to the vehicle.

The obstacle is located in relation to the emission of the audible signal from the speakers, front or rear and right or left.

When the distance between the vehicle and the obstacle is less than approximately thirty centimetres, the audible signal becomes continuous and the "Danger" symbol appears depending on the display.

## Switching the system off

The system returns to the inactive status:

- when you exit reverse gear,
- when the speed increases to above 6 mph (10 km/h),
- at the end of the manoeuvre, when the vehicle becomes stationary (front parking assistance only).

## Deactivation



Press the button on the fascia to deactivate the system (to avoid waking a child...). The indicator light on the button comes on.

**i** This function will be deactivated automatically when the vehicle is towing a trailer or when a bicycle carrier is fitted (vehicle fitted with towing attachment or bicycle carrier recommended by PEUGEOT).

## RE-ACTIVATION

Press the button again to re-activate the system. The indicator light on the button switches off.

**i** In bad or wintry weather, ensure that the sensors are not covered with mud, frost or snow.

In this case (e.g. sensors dirty), when reverse gear is engaged, the indicator light flashes, accompanied by an audible signal and a message on the display.

Consult a PEUGEOT dealer.



## HORN

Press one of the spokes of the steering wheel.

## ANTI-LOCK BRAKING SYSTEM (ABS) AND ELECTRONIC BRAKE FORCE DISTRIBUTION (EBFD)

The ABS, in conjunction with the electronic brake force distribution, increases the stability and manoeuvrability of your vehicle on braking, in particular on poor or slippery road surfaces.

**i** When changing wheels (tyres and rims), make sure that these are approved.

The anti-lock braking system comes into operation automatically when there is a risk of wheel lock.



When this warning light comes on, accompanied by a buzzer and a message, it indicates that there is a malfunction of the ABS, which can cause a loss of control of the vehicle when braking.



When this warning light comes on, connected to the **STOP** warning light, accompanied by a buzzer and a message, it indicates that there is a malfunction of the electronic brake force distribution, which can cause a loss of control of the vehicle when braking.

**Stop immediately.**



In both cases, consult a PEUGEOT dealer.

Normal operation of the ABS may make itself felt by slight vibrations of the brake pedal.

**In emergency braking, press very firmly without releasing the pressure.**

## EMERGENCY BRAKING ASSISTANCE SYSTEM (EBA)

In an emergency, this system enables the optimum braking pressure to be reached more quickly, press the pedal firmly without releasing it.

It is triggered by the speed at which the brake pedal is activated.

This alters the resistance of the brake pedal under your foot.

To prolong the operation of the emergency braking assistance system: keep your foot on the brake pedal.

## TRACTION CONTROL (ASR) AND DYNAMIC STABILITY CONTROL (ESP)

These systems are linked and complement the ABS.

The ASR system optimises drive to prevent the wheels skidding, by acting on the brakes of the drive wheels and on the engine. It also allows the directional stability of the vehicle to be improved on acceleration.

If there is a variation between the trajectory followed by the vehicle and that required by the driver, the ESP system automatically acts on the engine and the brake of one or more wheels, in order to put the vehicle back on course, within the limits of the laws of physics.

### Activation of the ASR and ESP systems

When the ignition is on, the ASR and ESP systems are always active.



#### Operation of the ASR and ESP systems

The warning light flashes if the ASR or ESP is activated.



### Disarming the ASR/ESP systems

In certain conditions (vehicle stuck in mud or snow, or on loose ground...), it could prove useful to disarm the ASR and ESP systems to make the wheels spin and regain grip.

- ☞ Press the switch, situated under the steering wheel on the left of the fascia.



The indicator light comes on accompanied by a message: the ESP and ASR systems no longer act on the engine operation, but continue to act on the brakes.

### They engage again:

- ☞ automatically above 30 mph (50 km/h),
- ☞ manually by pressing the switch again.

### Operating check




When a malfunction of the systems occurs, the indicator light comes on, accompanied by an audible signal and a message on the display.

Consult a PEUGEOT dealer to have the system checked.

**i** The ASR/ESP systems offer increased safety during normal driving, but should not incite the driver to take risks or to drive at high speed.

The operation of these systems is ensured if the recommendations of the manufacturer regarding the wheels (tyres and rims), the braking components, the electronic components and the fitting and repair procedures within the PEUGEOT network are observed.

After an impact, have these systems checked by a PEUGEOT dealer.

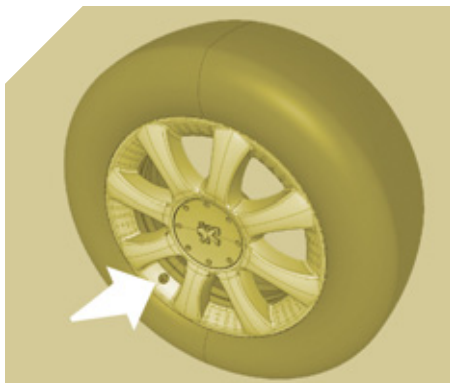

## TYRE UNDER-INFLATION DETECTION

Sensors check the tyre pressure during driving, and trigger a warning in the event of a malfunction (speed greater than approx. 15 mph [25 km/h]) or puncture.

An outline representing one or more wheels flashing indicates the location of the wheel or wheels concerned.



### Flat tyre

The SERVICE warning light comes on, accompanied by the message "**Tyre(s) deflated**", an outline on the display, and an audible signal.

Check the tyre pressure as soon as possible.

## Puncture

**STOP**

The STOP warning light comes on, accompanied by the message

**"Punctured tyre(s)"**, an outline on the display and an audible signal.

Stop immediately, avoiding any sudden movement of the steering wheel and the brakes.

Change the damaged (punctured or very deflated) tyre, and have the tyre pressure checked as soon as possible.



Refer to the "Changing a wheel" section of chapter 7.



If the damaged tyre is temporarily stored in the boot, it will again emit this message to remind you of the necessity of having it repaired. This will prevent another warning of the same type being displayed.



## Sensor(s) not detected

The SERVICE warning light comes on, accompanied by the message "**X tyre pressure sensor(s) missing**", an outline on the display and an audible signal.

Under-inflation detection is absent from one (or several) tyre(s). Consult a PEUGEOT dealer to replace the faulty sensor(s).



This message is also displayed when one of the tyres is away from the vehicle (being repaired) or when a wheel without a sensor is fitted.




All repairs and changing of tyres on a wheel fitted with this system must be carried out by a PEUGEOT dealer.

**The tyre under-inflation detection system is a driving aid which does not take the place of the vigilance or the responsibility of the driver.**

This system does not remove the need to have the tyre pressure checked regularly (including the spare wheel), to ensure that the dynamic performance of the vehicle remains at its best and to avoid premature wear of the tyres, in particular in the case of arduous driving (heavy load, high speed).

The system may temporarily be disturbed by radio broadcasts on a frequency close to it.

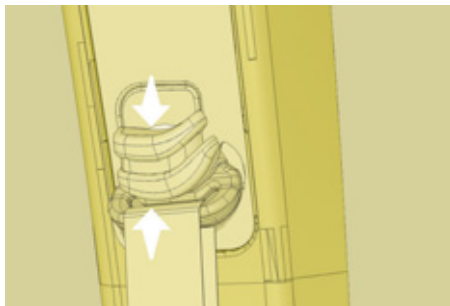

## SEAT BELTS

### FRONT AND REAR SIDE SEAT BELTS

The front seats and the rear side seats of row 2 are fitted with pre-tensioners and force limiters.

#### To adjust the height

- To lower the attachment point, squeeze control and slide it downwards
- To raise the attachment point, slide control upwards.

#### To fasten

- Pull the strap, then insert the buckle into the stalk.
- Check that the seat belt is secured correctly by pulling the strap.



The lap strap must be positioned as low as possible on the pelvis. The chest strap must pass over the hollow of the shoulder.

Check that the seat belt is fastened correctly by pulling the strap.

#### Inertia reel seat belts

These are fitted with a device which locks the seat belt automatically in the event of an impact or emergency braking.

Safety in the event of a frontal impact has been improved by the introduction of pre-tensioning and force-limiting seat belts. Depending on the seriousness of the impact, the pre-tensioning system instantly tightens the seat belts firmly against the body of the occupant.

The pre-tensioning seat belts are armed when the ignition is on.

The force-limiting device reduces the pressure of the seat belt against the chest of the occupant, so increasing his protection.



#### Front seat belt warning light

If the driver and/or front passenger has/have not fastened his/their seat belt, this warning light comes on.

Then, at a speed in excess of approximately 15 mph (25 km/h), it flashes accompanied by an audible signal of increasing volume (for approximately 90 seconds) and a message on the display.

**i** A bag placed on the front passenger seat or a pet sitting on this seat may trigger the lighting of this warning light.

#### Row 2 rear side seat belts

For your comfort, if you are not using the seat belt, slide the seat belt loop to the upper stop to prevent the tongue from vibrating.

#### Row 3 rear side seat belts

The row 3 rear side seats are fitted with two seat belts which are both three-point inertia reel belts with force limiter.

## Seat belts

To install the seat belt, move the tongue into position to insert it into the buckle

### Row 2 and 3 rear centre seat belts

The row 2 rear centre seat and the rear bench seat centre seat have an integrated three-point inertia reel seat belt.



### Good practice

The driver must ensure that passengers use the seat belts correctly and that they are all strapped in securely before moving off.

Wherever you are seated in the vehicle, always fasten your seat belt, even for short journeys.

The seat belts are fitted with an inertia reel which automatically adjusts the length of the strap to your size.

Do not use accessories (clothes pegs, clips, safety pins, etc.) which permit a clearance with the seat belt straps.

Ensure that the seat belt is rolled up correctly after use.

After folding or moving a seat or a rear bench seat, ensure that the seat belt is rolled up correctly and that the buckle is ready to accommodate the tongue.

Depending on the nature and seriousness of any impact, the pretensioning device may be triggered before and independently of inflation of the air bags. It instantly tightens the seat belts against the body of the occupants.

Triggering of the pretensioners is accompanied by a slight discharge of harmless smoke and a noise, due to the activation of the pyrotechnic cartridge incorporated in the system.

The force limiter reduces the pressure of the seat belt against the body of the occupants.

The pretensioning seat belts are active when the ignition is switched on.

The inertia reels are fitted with a device which automatically locks the strap in the event of a collision or emergency braking or if the vehicle rolls over.

You can unfasten the seat belt by pressing the red button on the buckle. Guide the seat belt after unfastening.

The air bag warning light comes on if the pretensioners are triggered. Consult a PEUGEOT dealer.

In order to be effective, a seat belt must:

- restrain one person only,
- must not be twisted, check by pulling in front of you with an even movement,
- be tightened as close to the body as possible.

The upper part of the seat belt should be positioned in the hollow of the shoulder.

The lap part should be placed as low as possible on the pelvis.

Do not invert the seat belt buckles as they will not fulfil their role completely. If the seats are fitted with armrests, the lap part of the seat belt should always pass under the armrest.

Check that the seat belt is fastened correctly by pulling the strap firmly.

### Recommendations for children:


- use a suitable child seat if the passenger is less than 12 years old or shorter than one metre fifty,
- never allow a child to travel on your lap, even with the seat belt fastened.

For further information regarding child seats, refer to the "Children on board" section of chapter 4.

In accordance with current safety regulations, your PEUGEOT dealer guarantees all work or any checks, from testing to maintenance, on your seat belt equipment.

Have the seat belts checked regularly (even after a minor impact) by a PEUGEOT dealer: they must not show any signs of wear, cutting or fraying and they must not be transformed or modified.

Clean the seat belt straps with soapy water or a textile cleaning product, sold by PEUGEOT dealers.

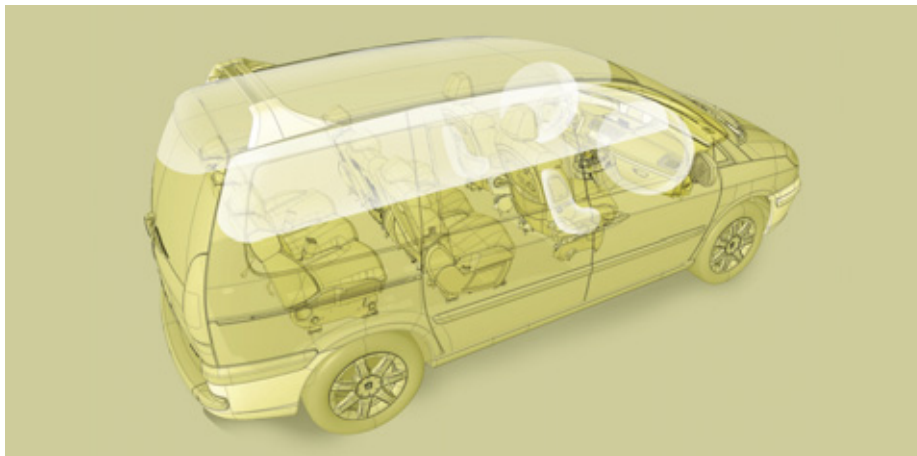

## AIR BAGS

The air bags have been designed to maximise the safety of the occupants (with the exception of the centre seats of rows 2 and 3) in the event of a serious collision; they work in conjunction with the force limiting seat belts.

In the event of a serious collision, the electronic detectors record and analyse the front and side impacts suffered in the impact detection zones:

- in the event of a serious impact, the air bags inflate instantly and protect the occupants of the vehicle.

Immediately after the impact, the air bags deflate rapidly, so that they do not hinder the visibility of the occupants nor their possible exit from the vehicle:

- in the event of a minor or rear impact and in certain roll-over conditions, the air bags will not be deployed; the seat belt alone is sufficient to provide maximum protection in these situations.

The seriousness of the collision depends on the nature of the obstacle and the speed of the vehicle at the moment of impact.


### **i** Air bags only operate when the ignition is switched on.

This equipment only operates once. If a second impact occurs (during the same or a subsequent accident), the air bag will not operate.

The triggering of an air bag or air bags is accompanied by a slight discharge of harmless smoke and a noise, due to the activation of the pyrotechnic cartridge incorporated in the system.

This smoke is not harmful, but sensitive individuals may experience some irritation.

The noise of the detonation may result in a slight loss of hearing for a short time.

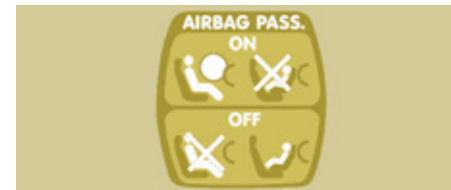

- +** It is imperative that the passenger air bag is disarmed if a child seat is installed facing rearwards. Refer to the "Children on board" section of chapter 4.

### Good practice

If your vehicle is fitted with a front passenger air bag, side air bags or curtain air bags, observe this good practice.

Sit in a normal upright position.

Wear a correctly adjusted seat belt.

Do not leave anything between the occupants and the air bags (a child, pet, object...). This could hamper the operation of the air bags or injure the occupants.

After an accident or if the vehicle has been stolen or broken into, have the air bag systems checked.

All work on the air bag system is strictly forbidden unless it is carried out by qualified personnel of the PEUGEOT network.

Even if all of the precautions mentioned are observed, a risk of injury or of minor burns to the head, chest or arms when an air bag is triggered cannot be ruled out. In fact, the bag inflates almost instantly (within a few milliseconds) then deflates within the same time discharging the hot gas via openings provided for this purpose.

### Side air bags

Only put approved covers on the seats. These will not hinder inflation of the side air bags. Consult a PEUGEOT dealer.

Do not fix or glue anything to the seat backs. This could cause injury to the chest or arms when the side air bag inflates.

Do not sit with the upper part of the body any nearer to the door than necessary.

### Curtain air bags

Do not fix or glue anything to the roof. This could cause injury to the head when the curtain air bag inflates.

Do not remove the grab handles installed on the roof, they play a part in securing the curtain air bags.

### Front air bags

Do not drive holding the steering wheel by its spokes or resting your hands on the centre part of the wheel.

Passengers must not place their feet on the fascia.

Smoke as little as possible as deployment of the air bags can cause burns or the risk of injury from a cigarette or pipe.

Never remove or pierce the steering wheel or hit it violently.





### Side air bags


If fitted on your vehicle, this is a system which protects the driver and front passenger in the event of a serious side impact in order to limit the risk of injury to the chest.

Each side air bag is incorporated in the front seat back frame, on the door side.

### Activation

It is triggered unilaterally in the event of a serious side impact applied to all or part of the side impact zone **B**, perpendicular to the longitudinal centreline of the vehicle on a horizontal plane and directed from the outside towards the inside of the vehicle.

The side air bag inflates between the front occupant of the vehicle and the corresponding door trim pad.

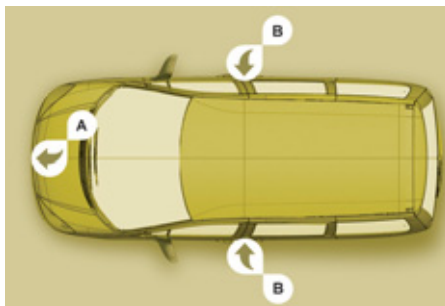

### Impact detection zones

- A.** Front impact zone.
- B.** Side impact zone.

### Curtain air bags

If fitted on your vehicle, this is a system which protects the driver and passengers (with the exception of the centre seats of rows 2 and 3) in the event of a serious side impact in order to limit the risk of head injuries.

Each curtain air bag is incorporated in the pillars and the upper part of the passenger compartment.

### Activation

It is triggered at the same time as the corresponding side air bag in the event of a serious side impact applied to all or part of the side impact zone **B**, perpendicular to the longitudinal centreline of the vehicle on a horizontal plane and directed from the outside towards the inside of the vehicle.

The curtain air bag inflates between the front or rear occupant of the vehicle and the windows.


**i** In the event of a minor impact or bump on the side of the vehicle or if the vehicle rolls over, the air bag may not be triggered.

The air bag is not triggered in the event of a rear or front collision.

### Operating fault



If this warning light comes on on the instrument panel, accompanied by an audible signal and a message on the display, consult a PEUGEOT dealer to have the system checked. The air bags may no longer be triggered in the event of a serious impact.

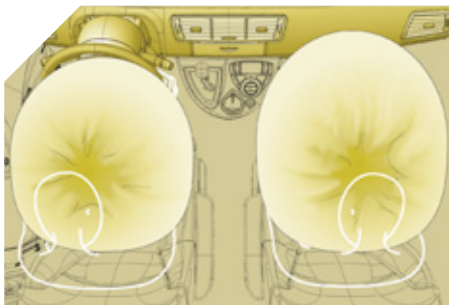

### Front air bags

The front air bags are incorporated in the centre of the steering wheel for the driver and in the fascia for the front passenger.

### Activation

They are deployed simultaneously, unless the passenger's front air bag has been disarmed, in the event of a serious front impact applied to all or part of the front impact zone **A** in the longitudinal centreline of the vehicle on a horizontal plane directed from the front towards the rear of the vehicle.

The front air bag inflates between the front occupant of the vehicle and the fascia to cushion his forward movement.




### Disarming

The passenger's front air bag alone can be disarmed:

- **With the ignition switched off**, insert the key into the passenger air bag disarming switch,
- turn it to the **"OFF"** position,
- then remove the key keeping the slot in this position.



The air bag warning light on the instrument panel is lit throughout the period of disarming.

 To ensure the safety of your child, it is essential to disarm the passenger air bag when you install a rear-facing child seat on the front passenger seat. Otherwise, the child would risk being killed or seriously injured if the air bag were to inflate.

### Reactivation


In the **"OFF"** position, the passenger air bag will not be triggered in the event of an impact.

As soon as the child seat is removed, turn the air bag slot to the **"ON"** position to re-activate the air bag and thus ensure the safety of your passenger in the event of an impact.

### Front air bag fault



If this warning light comes on, accompanied by an audible signal and a message on the display, consult a PEUGEOT dealer to have the system checked.

 If the two air bag warning lights are lit continuously, do not install a rear-facing child seat. Consult a PEUGEOT dealer.


## CHILD SAFETY

### GENERAL POINTS RELATING TO CHILD SEATS

Although one of PEUGEOT's main criteria when designing your vehicle, the safety of your children also depends on you.

For maximum safety, please follow these precautions:

- all children under the age of 12 or less than one metre fifty tall must travel in approved child seats suited to their weight, on seats fitted with a seat belt or ISOFIX mountings,
- statistically, the safest seats in your vehicle for the transportation of children are the rear seats,
- a child weighing less than 9 kg must travel in the "rearwards-facing" position both in the front and in the rear,
- the passenger must not travel with a child on his lap.

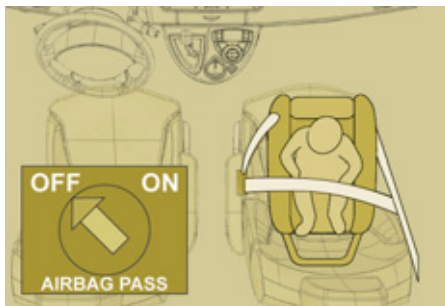

#### CHILD SEAT IN THE FRONT

##### "Rearwards-facing"


Recommended on the rear seats up to the age of 2.

When a "rearwards-facing" child seat is installed on the front passenger seat, it is essential that the passenger airbag is deactivated. Otherwise, the child would risk being seriously injured or killed if the airbag were to inflate.

The child seats function and the passenger's airbag deactivation function are common to the entire PEUGEOT range.

**i** If the passenger's airbag is not deactivated, the installation of a "rearwards-facing" child seat in the front is strictly prohibited.

**e** Refer to chapter 4, "Airbags" section.

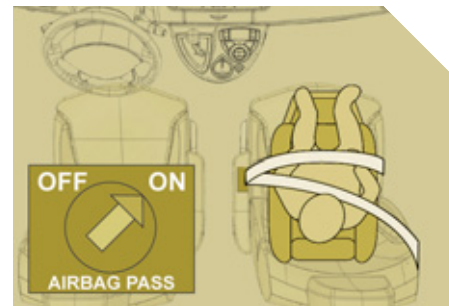

##### "Forwards-facing"

Recommended on the rear seats over the age of 2.

When a "forwards-facing" child seat is installed on the front passenger seat, leave the passenger airbag activated.

The rules for carrying children are specific to each country. Consult the current legislation in your country.

Please consult the list of seats approved in your country. The Isofix mountings, the rear seats, the passenger airbag and the deactivation of this airbag depend on the version sold.




### "ISOFIX" MOUNTINGS

These seats are fitted with ISOFIX mountings.

These are two rings located between the seat back and the seat cushion. The **ISOFIX child seats** are fitted with two locks which are secured easily on these rings.

This ISOFIX mounting system guarantees reliable, safe and fast fitting of the child seat in your vehicle.

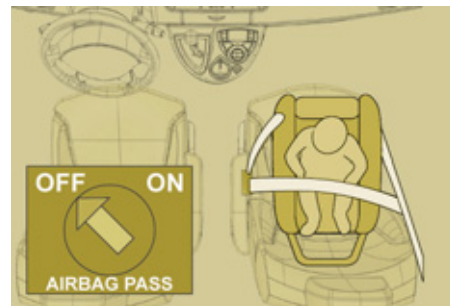



### Passenger airbag OFF

Refer to the advice given on the label present on both sides of the passenger's sun visor.

- i** To assure the safety of your child, you must deactivate the passenger's front airbag when you install a child seat in the rearwards facing position on the front passenger's seat. Otherwise, there is a risk that the child could be seriously injured or killed if the airbag were deployed.

## ISOFIX CHILD SEATS RECOMMENDED BY PEUGEOT AND APPROVED FOR YOUR VEHICLE

ISOFIX KIDDY		ISOFIX RÖMER Duo Plus
Group 0+: from birth to 13 kg	Group 1: from 9 to 18 kg	Group 1: from 9 to 18 kg
 <p>The ISOFIX KIDDY seat is installed in row 2 only.</p>		
Installed in the rear facing position.	Installed in the forwards facing position.	Installed in the forwards facing position only.
The body of the child seat must be in contact with the back of the vehicle's front seat.	It is essential that the vehicle's front seat is adjusted to the intermediate longitudinal position.	Secured without the top strap. Three child seat body angles: sitting, reclining and lying positions. Adjust the vehicle's front seat so that the child's feet do not touch the seat back.

These child seats can also be used on seats which are not fitted with ISOFIX mountings. In this case, it is essential that they are secured to the vehicle's seat by means of the three-point seat belt.

Follow the instructions for fitting the child seat indicated in the seat manufacturer's installation guide.

## CHILD SEATS RECOMMENDED BY PEUGEOT

PEUGEOT offers a complete range of recommended child seats which are secured using a three point seat belt:

**Group 0: from birth to 10 kg**  
**Group 0+: from birth to 13 kg**



**L1**  
 "ROMER Baby-Safe Plus"  
 Installed in the rear-facing position

**Groups 1, 2 and 3: from 9 to 36 kg**



**L2**  
 "KIDDY Life"  
 The use of the restraining cushion is compulsory for transporting young children (from 9 to 18 kg).

**Groups 2 and 3: from 15 to 36 kg**




 
 
 



**L3**  
 "RECARO Start"



**L4**  
 "KLIPPAN Optima"  
 From the age of 6 years (approximately 22 kg), the booster is used on its own.

## INSTALLING CHILD SEATS ATTACHED USING THE SEAT BELT

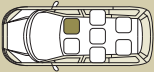The table presented on the following page indicates the options for installing child seats secured using a seat belt and universally approved in accordance with the weight of the child and the seat in the vehicle.

Seat		Weight of the child and indicative age			
		Under 13 kg (groups 0 (a) and 0+) Up to approx 1 year	From 9 to 18 kg (group 1) 1 to 3 years approx	From 15 to 25 kg (group 2) 3 to 6 years approx	From 22 to 36 kg (group 3) 6 to 10 years approx
Front passenger seat (b)		U	U	U	U
Side seats of row 2		U	U	U	U
Centre seat of row 2		U	U	U	U
Side seats of row 2, placed in row 3		L1	L2	L2, L3, L4	L2, L3, L4
Centre seat of row 2, placed in row 3		U	U	U	U
3-seat bench seat, placed in row 3		L1	L2	L2, L3, L4	L2, L3, L4
		X	L2	L2, L3, L4	L2, L3, L4

**a:** Group 0: from birth to 10 kg. Infant car seats and "car cots" cannot be installed on the front passenger seat.

**b:** consult the legislation in force in your country before installing your child on this seat.

**U:** seat suitable for the installation of a child seat secured using a seat belt and universally approved, "rear facing" and/or "forward facing".

**L-:** only the child seats indicated can be installed on the seat concerned (according to country).

**X:** seat not suitable for the installation of a child seat of the weight group indicated.

## Child safety

### ADVICE ON CHILD SEATS

The incorrect installation of a child seat in a vehicle compromises the child's protection in the event of an accident.

Remember to fasten the seat belts or the child seat harnesses **keeping the slack** in relation to the child's body **to a minimum**, even for short journeys.

For optimum installation of the "forward facing" child seat, ensure that the back of the child seat is in contact with the back of the vehicle's seat and that the head restraint does not cause any discomfort.

If the head restraint has to be removed, ensure that it is stored or attached securely to prevent it from being thrown around the vehicle in the event of sharp braking.

Children under the age of 10 must not travel in the "forward facing" position on the front passenger seat, unless the rear seats are already occupied by other children, cannot be used or are absent.

Deactivate the passenger airbag when a "rear facing" child seat is installed on the front seat.

Otherwise, the child would risk being seriously injured or killed if the airbag were to inflate.

As a safety precaution, do not leave:

- one or more children alone and unsupervised in a vehicle,
- a child or an animal in a vehicle which is exposed to the sun, with the windows closed,
- the keys within reach of children inside the vehicle.

To prevent accidental opening of the doors, use the "Child Lock".

Take care not to open the rear windows by more than one third.




To protect young children from the rays of the sun, fit side blinds to the rear windows.

### Installing a booster seat

The chest part of the seat belt must be positioned on the child's shoulder without touching the neck.

Ensure that the lap part of the seat belt passes correctly over the child's thighs. PEUGEOT recommends the use of a booster seat which has a back, fitted with a seat belt guide at shoulder level.

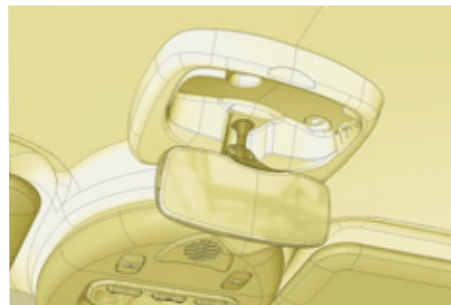


### CHILD MONITORING MIRROR

This mirror enables the driver or front passenger to observe all the rear seats.

Fitted on its own ball joint and able to retract into its housing in the roof, it provides a panoramic view of the rear interior of the vehicle.



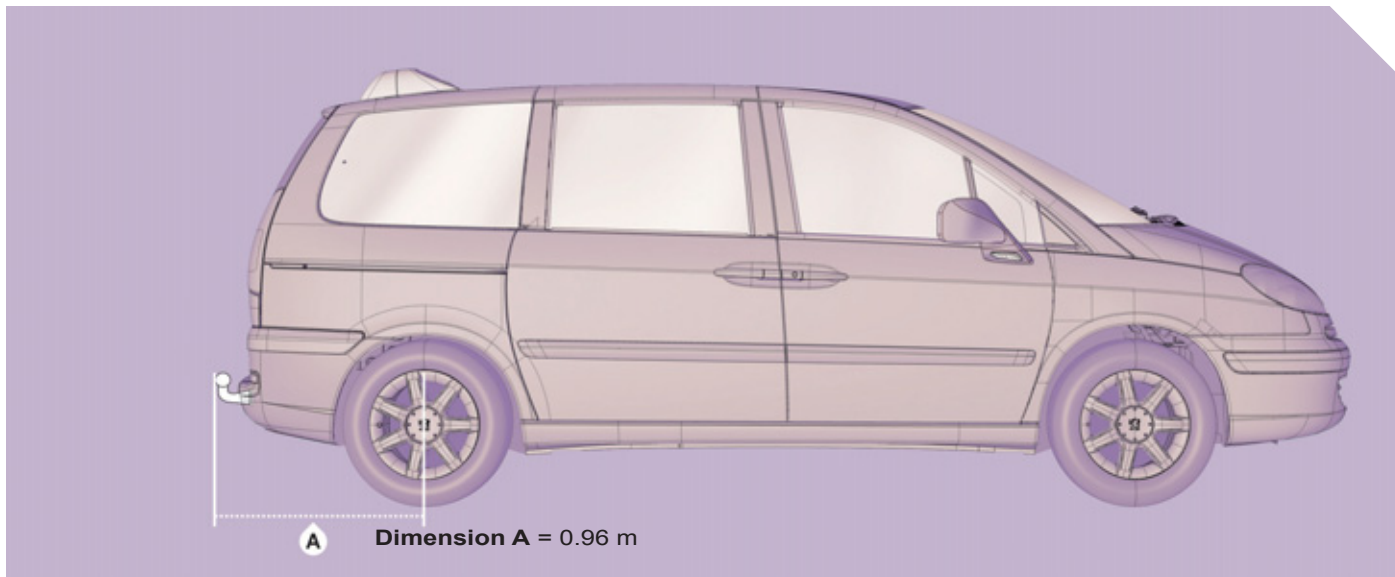

## TOWING A TRAILER, CARAVAN, BOAT, ETC...

**+** Refer to the administrative documents (V5, ...) or to the Diesel "Dimensions, weights and towed loads" section of chapter 8.

**Distribution of loads:** distribute the load in the trailer so that the heaviest loads are as close as possible to the axle and the nose weight is close to the maximum authorised without, however, exceeding it.

**Cooling:** towing a trailer on a slope increases the coolant temperature. As the fan is electrically controlled, its cooling capacity is not dependent on the engine speed.

### Driving advice

A towed vehicle must free wheel:  
gearbox in neutral.

## Towing a trailer

On the contrary, use a high gear to lower the engine speed and reduce your speed.

In all cases, pay attention to the coolant temperature.

**i** In certain cases of particularly arduous use (towing the maximum load up a steep slope in high temperatures), the engine automatically limits its power. In this case, cutting off the air conditioning allows the engine power to be recovered, and therefore the towing speed to be significantly increased (approximately 12 mph [20 km/h] more). Sequential control of the gearbox may also become unavailable.

If the coolant temperature warning light comes on, stop the vehicle and switch off the engine as soon as possible.

**Tyres:** check the tyre pressures of the towing vehicle and of the trailer, observing the recommended pressure.

**+** Refer to the "Identification features" section of chapter 8.

**Brakes:** towing increases the braking distance. Drive at a moderate speed, change down early and brake gradually.

**Side wind:** sensitivity to side wind is increased. Drive smoothly and at a moderate speed.

## Towbar

We recommend the use of original PEUGEOT towbars, which have been tested for endurance from the design stage of your vehicle.

Towing equipment must be fitted in accordance with the manufacturer's instructions, with particular attention to the towing capacities of your vehicle, the load towed, the nose weight and the electrical connection. As this fitting should be carried out by a professional, we recommend that you entrust the fitting of this equipment to a PEUGEOT dealer.

In accordance with the general instructions referred to above, we draw your attention to the risk connected with fitting a towbar or other electrical accessory which is not recommended by the PEUGEOT network. Fitting such equipment could result in a failure of your vehicle's electronic system.

Please contact a PEUGEOT dealer first for further information.

**+** When using a trailer connection, you must add a fuse. Refer to the "Changing a fuse" section of chapter 7.

## Lighting

### Manual adjustment

Adjust your headlamps so as not to dazzle other road users. Check the electrical signalling of the trailer.

**+** Refer to the "Steering wheel controls" section of chapter 3.


## Bicycle carrier



If you fit a bicycle carrier on the tailgate, deactivate the rear wiper from the display's configuration menu.

### Automatic adjustment

For vehicles with Xenon bulbs, and if the change in load makes it necessary, this system automatically corrects the height of the beam after approximately 2 minutes. The driver is then assured of having optimum lighting and not causing a nuisance to other road users.

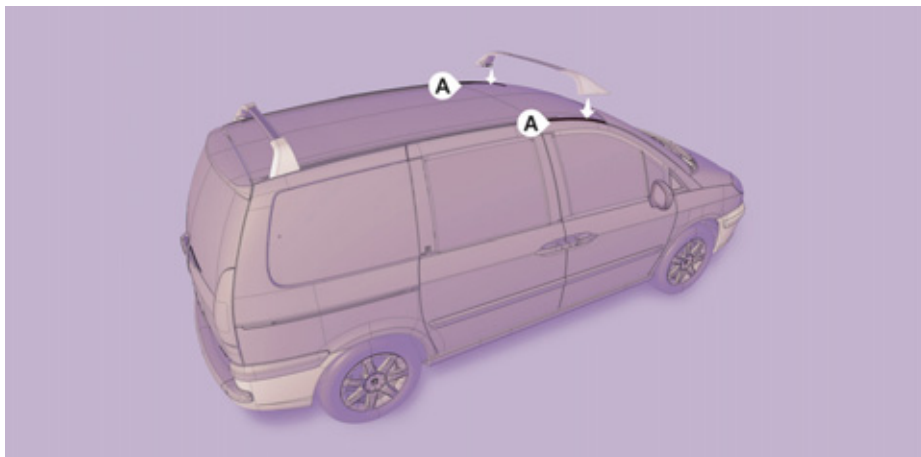

## USING ROOF BARS

To use the transverse roof bars, release the four locking levers located at the base of the feet of each bar.

From the left-hand side, slide them in their rails to the required notch, supporting the foot of the bar with two hands to slide it correctly.


**i** Lock the four locking levers.

For greater ease, it is recommended that two people carry out these operations.

When the roof bars are not in use, position them at the rear stop to avoid excess consumption.

Use accessories recommended by Automobiles PEUGEOT and follow the fitting instructions in the manual provided by the manufacturer of the load-carrying roof bars.


**Maximum authorised weight on the roof rack: 220 lbs. (100 kg)**

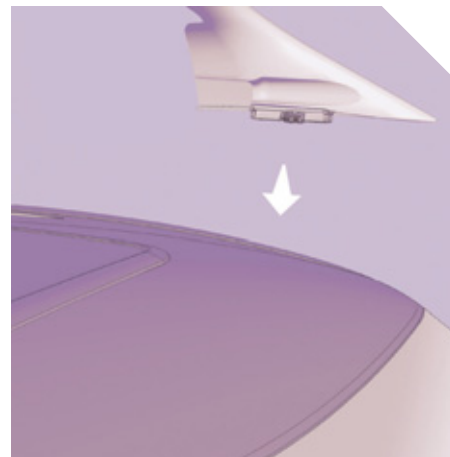

## Removal and refitting of the roof bars

- Remove the bolt, the stop and the two washers at each location **A**.
- Move the bars to the locations **A**.
- Lift the two bars to remove them.
- **Imperative:** refit the bolt, the stop and the two washers at each location **A**.


To refit, proceed in the reverse order.

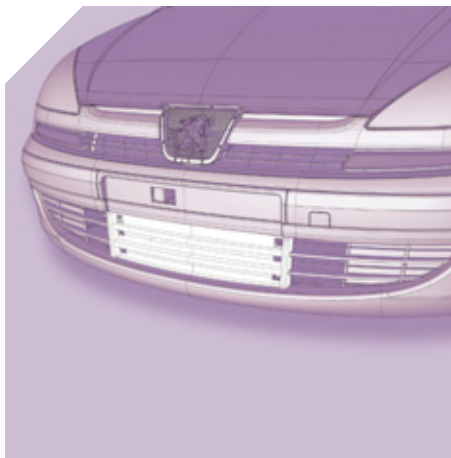

### VERY COLD CLIMATE SCREEN

If fitted on your vehicle, this is a removable part which permits complete or partial covering of the front air intake (grille, ...) to favour the increase in the engine temperature when driving in very low temperatures and to prevent the entry of snow into the engine compartment.

When the snow has cleared, do not forget to remove the very cold climate screen.

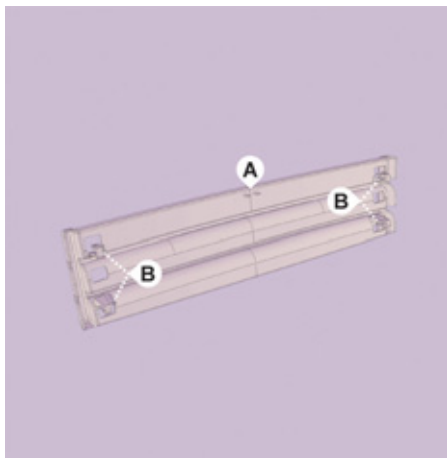

### FITTING

- Offer up the screen facing its centring pin **A** on the front bumper.
- Put it in place by pressing at each clip **B** located in the four corners.

### REMOVAL

- Pass a screwdriver into the hole located near each of the clips.
- Use the screwdriver as a lever to unclip the four clips **B** in turn.

## OTHER ACCESSORIES

These accessories and parts, after being tested and approved for reliability and safety, are all adapted to your vehicle. A wide choice of recommended accessories and original parts is offered by the PEUGEOT Marque.

A further range is also available, structured around comfort, leisure and maintenance:



Anti-theft alarm, window engraving, first aid kit, safety jacket, rear parking assistance, warning triangle, ...



Seat covers compatible with side airbags, mats, boot tray, sunroof, luggage net, door deflectors, cool box secured on the slides, clip armrest, load carrying roof bars, roof box, snow chains, ski carrier, tailgate bicycle carrier, interior bicycle carrier, booster seats and child seats, Isofix seats, side sun blinds and rear blind, ...  
Trailer towbar which must be fitted by a PEUGEOT dealer.



To avoid any jamming under the pedals:

- ensure that the mat and its fixings are positioned correctly,
- never place one mat on top of another.



Audio systems, telephone, hands-free kit, speakers, CD changer, navigation system, DVD player, ...



### Compatible portable equipment

For the hands-free kit audio equipment, the fitting of an RCA auxiliary socket is offered specifically by the Network.

The audio cable for connection to the auxiliary socket (RCA yellow-red located in the glove box) is also offered by the network.

Following connection of the cable and selection of the AUX mode, via the source button, your portable equipment is ready to operate.

Set the portable equipment to half volume to avoid saturating the audio system sound. Then use the audio system volume button.



Alloy wheels, trims, aluminium interior trim kit, mud flaps, ...



Screenwash, interior and exterior maintenance and cleaning products, replacement bulbs, ...



The fitting of electrical equipment or accessories which are not recommended by PEUGEOT may result in a failure of your vehicle's electronic system.

Please note this specific warning. You are advised to contact a representative of the Marque to be shown the range of recommended equipment or accessories.

Depending on the country in which the vehicle is sold, it is compulsory to have a safety jacket, warning triangle and replacement bulbs available in the vehicle.



When using a tailgate bicycle carrier, deactivate the rear wiper from the display configuration menu.

Before installing a radiocommunication transmitter with aerial, contact a PEUGEOT dealer who will inform you of the specifications of the transmitters which can be fitted, in accordance with the Motor Vehicle Electromagnetic Compatibility Directive (2004/104/EC).

## PEUGEOT & TOTAL

### Partners in performance and protection of the environment

#### Innovation at the service of performance

The TOTAL Research and Development teams develop lubricants for PEUGEOT which satisfy the requirements of the latest technical innovations incorporated in PEUGEOT vehicles.

This ensures that you obtain the best performance and the maximum engine life.


#### Reduced exhaust emissions

TOTAL lubricants are formulated to optimise the efficiency of engines and the protection of the emissions post-treatment systems. It is crucial to observe the servicing recommendations made by PEUGEOT to ensure correct operation.



PEUGEOT RECOMMENDS TOTAL



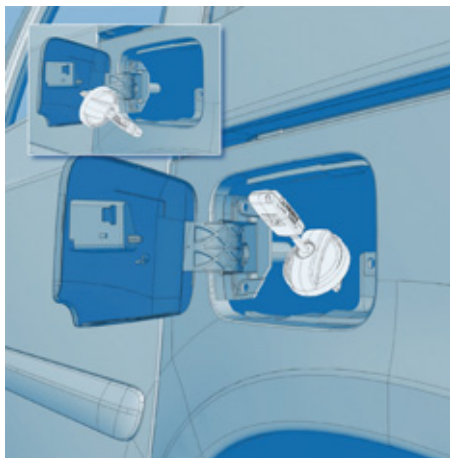

## FILLING THE FUEL TANK

### Filling with fuel

The tank must be filled with fuel with **the engine off.**

- Open the fuel filler flap.
- Insert the key then turn it to the left.
- Remove the cap and attach it to the clip located on the inside of the flap.

It is usual to hear an air intake noise when opening the cap as there is a vacuum linked with the sealing of the fuel circuit.

A label on the inside of the flap indicates which type of fuel to use.

More than 5 litres of fuel must be added in order to be registered by the fuel gauge.

If you fill your tank, do not continue after the third cut-off of the pump nozzle. This could result in vehicle malfunctions.

**i** When the fuel filler flap is open, a system limits the opening of the rear left sliding side door.

The key cannot be removed from the cap's lock until the cap is refitted on the tank.

If the warning light flashes, this indicates a fuel gauge malfunction.

Consult a PEUGEOT dealer.

## LOW FUEL LEVEL



When the tank's minimum level is reached, this warning light comes on, accompanied by the message "**Fuel level low**" on the display. When

this warning light first comes on, you have **approximately 8 litres** left, depending on driving conditions and the engine.

Fill up with fuel as soon as possible to avoid running out.

Never continue to drive until you run out of fuel as this could damage the emission control and injection systems.

The capacity of the tank is approximately 18 gallons (**80** litres).

- After filling the tank, lock the cap and close the flap.

## Quality of the fuel used for Diesel engines

The Diesel engines are perfectly compatible with biofuels which conform to current and future European standards (Diesel fuel which complies with standard EN 590 mixed with a biofuel which complies with standard EN 14214) available at the pumps (containing up to 7 % Fatty Acid Methyl Ester).

The B30 biofuel can be used in certain Diesel engines; however, this use is subject to strict application of the special servicing conditions. Consult a PEUGEOT dealer.

The use of any other type of (bio)fuel (vegetable or animal oils, pure or diluted, domestic fuel...) is strictly prohibited (risk of damage to the engine and fuel system).



**DIESEL**

## FUEL CIRCUIT DISARMED

In a serious collision, a mechanism automatically prevents fuel from reaching the engine.



The flashing of this warning light is accompanied by a message on the display.

Check that there is no odour or leakage of fuel outside the vehicle and re-establish the fuel supply:


- switch off the ignition (STOP position).
- remove the key.
- put the key back in the ignition.
- switch on the ignition and start.

## DIESEL REPRIMING PUMP

If you should run out of fuel, it is necessary to re-prime the circuit:

- fill the fuel tank with at least five litres of diesel,
- squeeze and release the manual re-priming pump, under the bonnet under the protective cover, until fuel appears in the transparent pipe,
- operate the starter until the engine starts.




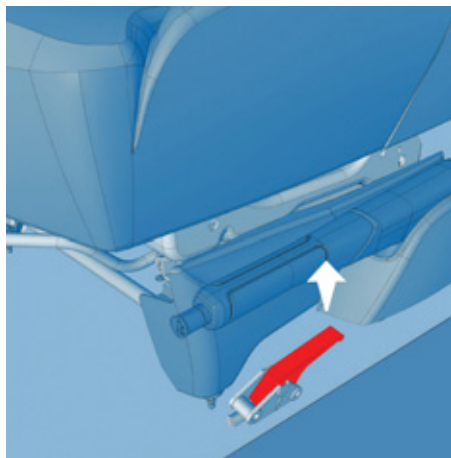

## OPENING THE BONNET

### From inside:

- lift the cover located at the left foot of the driver's seat.
- pull the control upwards.

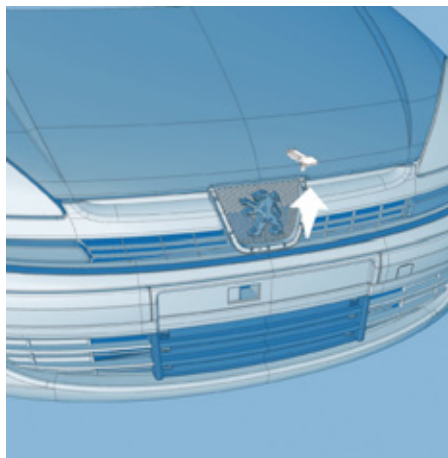

### From outside:

- lift the catch and raise the bonnet.


### Bonnet strut

Secure the strut to hold the bonnet open.

Before closing the bonnet, replace the strut in its housing.

### To close


Lower the bonnet and release it at the end of its travel. Check that the bonnet is properly locked.

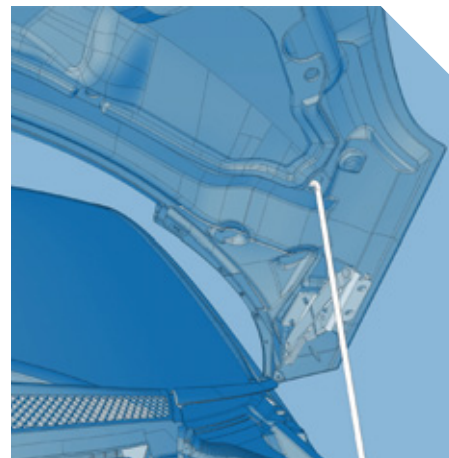

### "Bonnet open" warning

This warning is linked to the **alarm option** only.

With the engine running or the vehicle moving, a diagram on the display accompanied by an audible signal, warns you that the bonnet is not properly closed.

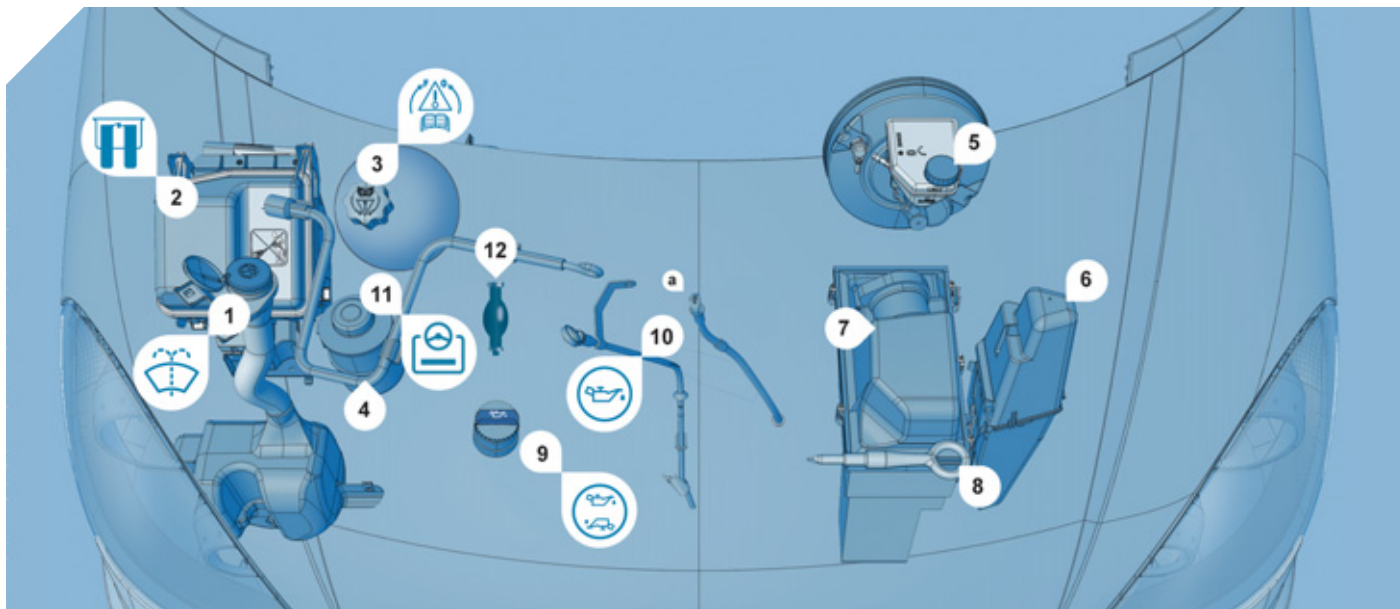

## UNDER-BONNET LAYOUT DIESEL ENGINES

- |  |                                      |                               |
|--|--------------------------------------|-------------------------------|
| 1. Windscreen/headlamp wash reservoir. | 4. Wheelbrace.                       | 8. Removable towing eye.      |
| 2. Fuse box.                           | 5. Brake and clutch fluid reservoir. | 9. Engine oil filler cap.     |
| 3. Coolant reservoir.                  | 6. Jack housing.                     | 10. Dipstick<br>(a: 2.0 HDi). |
|  | 7. Air filter.                       | 11. Power steering reservoir. |
|  |                                      | 12. Repriming pump.           |

## LEVELS

**i** These regular maintenance operations will keep your vehicle in good running order. Consult the instructions at PEUGEOT dealerships or in the servicing booklet enclosed in the handbook pack.


**👁️** If you have to remove/refit the engine style cover, handle it with care to avoid damaging the fixing clips.

### Oil level

Check the level regularly and top up between changes. The maximum consumption is 0.5 litre per 600 miles (1 000 km).

Check the level with the vehicle level, engine cold, using the dipstick.

### Dipstick

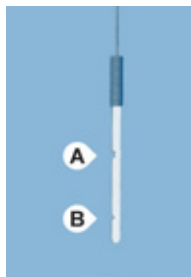

There are two marks on the dipstick:

**A** = maximum

If you fill past this mark, contact a PEUGEOT dealer.

**B** = minimum

Never allow the level to fall below this mark.

To maintain the reliability of engines and emission control systems, the use of additives in engine oil is prohibited.

### Oil change

It is imperative that this is carried out at the intervals specified and the viscosity grade of the oil selected must fulfil the requirements in accordance with the manufacturer's servicing schedule. Consult the instructions at PEUGEOT dealerships.

Remove the dipstick before filling.

Check the level after filling (never exceed the max mark).

Screw the cap back onto the sump before closing the bonnet.

### Viscosity selection

In all cases, the oil selected must meet the manufacturer's requirements.

### Changing the brake fluid

The brake fluid must be changed at the intervals stated, according to the manufacturer's servicing schedule.

Use fluids recommended by the manufacturer, which fulfil DOT4 standards.

The level must be between the MIN and MAX marks on the reservoir.

If fluid has to be added frequently, this indicates a failure which must be checked by a PEUGEOT dealer as soon as possible.

### Warning lights

**+** Checking by means of the warning lights on the instrument panel is described in chapter 2, "Instruments and controls" section.

## Levels

### Cooling system

Only use the fluid recommended by the manufacturer.

Otherwise, you risk seriously damaging your engine.

When the engine is warm, the temperature of the coolant is controlled by the engine fan. As this fan can operate with the ignition key removed and because the cooling system is pressurised, wait for at least one hour after the engine has stopped before carrying out any work.

Slacken the cap by 1/4 of a turn to release the pressure to prevent any risk of scalding. When the pressure has dropped, remove the cap and top up the level with coolant.

If fluid has to be added frequently, this indicates a failure which must be checked by a PEUGEOT dealer as soon as possible.

### Topping up

The level must be between the MIN and MAX marks on the expansion bottle. If more than 1 litre of fluid is required to top up the level, have the system checked by a PEUGEOT dealer.

### Power steering fluid level

The vehicle must be parked on level ground with the engine cold. Unscrew the cap integrated with the gauge and check the level which must be between the MIN and MAX marks.

### Windscreen wash and headlamp wash level

For best quality cleaning and for your safety, we would advise that you use products of the PEUGEOT range.

To avoid ice forming, do not use water.

### Diesel additive level (Diesel with particle emission filter)



The minimum level of this additive is indicated by lighting of the service warning light, accompanied by an audible signal and a message on the display.

When this occurs with the engine running, this is due to the start of saturation of the particle emission filter (exceptionally prolonged urban driving conditions: low speed, long traffic jams, ...).

In order to regenerate the filter, you are advised to drive at a speed of more than 40 mph (60 km/h) as soon as possible, when traffic conditions permit, for at least five minutes (until the message disappears and the service warning light is switched off).

During regeneration of the particle emission filter, relay noise may be heard under the fascia.

If the message is still displayed and the service warning light remains on, contact a PEUGEOT dealer.

### Topping up

It is imperative that this additive is topped up by a PEUGEOT dealer without delay.

### Used oil

Avoid prolonged contact of used oil with the skin.

Brake fluid is harmful to health and very corrosive.

Do not dispose of used oil, brake fluid or coolant into drains or onto the ground but into the containers dedicated to this use at PEUGEOT dealerships.

## CHECKS

### Battery

At the start of winter, have your battery checked by a PEUGEOT dealer.

### Brake pads

Brake pad wear depends on the style of driving, in particular for vehicles which are used in town, over short distances. It may be necessary to check the thickness of the pads, even between services.

Unless there is a leak on the circuit, a drop in the brake fluid level indicates that the brake pads are worn.

### Brake disc/drum wear status

For any information relating to checking the brake disc/drum wear status, contact a PEUGEOT dealer.

### Handbrake

Where the handbrake travel is too great or there is a reduction in the performance of the system, the handbrake should be adjusted, even between services.

Have the system checked by a PEUGEOT dealer.

### Oil filter

Change the filter regularly, in accordance with the servicing schedule.

### Carbon filter and passenger compartment filter

The carbon filter permits continuous and effective filtering of dust.

If the passenger compartment filter becomes clogged, this may reduce the performance of the air conditioning system and generate unpleasant odours.

We recommend the use of a combined passenger compartment filter. By means of its second special active filter, it contributes to the purification of the air breathed by the occupants and to the cleanness of the passenger compartment (reduction of allergic symptoms, unpleasant odours and greasy deposits).

 Refer to the servicing booklet to find out the replacement interval for these components.

Depending on the environment (dusty atmosphere...) and the use of the vehicle (urban driving...), change them twice as often if necessary.

Refer to the "Under the bonnet" section of chapter 6.


### Particle emission filter (Diesel)


It is imperative that particle emission filter maintenance is carried out by a PEUGEOT dealer.

On acceleration after the vehicle has been running for a prolonged period at very low speed or at idle, you may, in exceptional circumstances, notice the emission of water vapour at the exhaust. This water vapour does not have any adverse effect on vehicle handling or the environment.

### Manual gearbox

Have the level checked in accordance with the manufacturer's servicing schedule.

 To check the main levels and certain components, in accordance with the manufacturer's servicing schedule, refer to the pages of the servicing booklet which correspond to your vehicle's engine.

 Only use products recommended by PEUGEOT or products of equivalent quality and specification.

In order to optimise the operation of units as important as the braking system, PEUGEOT selects and offers specific products.

In order to avoid damaging the electrical units, high pressure washing to clean the engine compartment is strictly prohibited.

## Battery

### BATTERY


This is housed in a compartment located underneath the floor, in front of the driver's seat.

#### To charge the battery using a battery charger

- disconnect the battery,
- follow the instructions for use given by the battery charger manufacturer,
- reconnect starting with the negative (-) terminal,
- check that the terminals and connectors are clean. If they are covered with sulphate (white or greenish deposit), disconnect them and clean them.

#### To start the vehicle from another battery

- connect the red cable to the positive (+) terminals of the two batteries,
- connect one end of the green or black cable to the negative (-) terminal of the slave battery,
- connect the other end of the green or black cable to an earth point on the broken down vehicle as far as possible from the battery,
- operate the starter, let the engine run,
- wait for the engine to return to idle, then disconnect the cables.

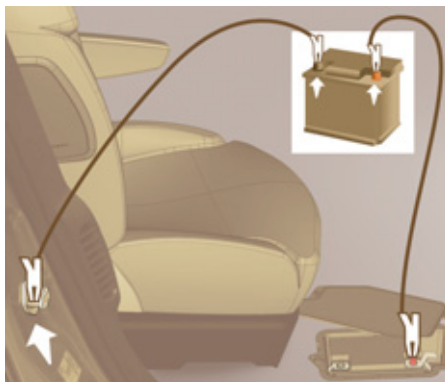

**i** It is advisable to disconnect the battery if the vehicle is not to be used for a period of more than one month.

Before disconnecting the battery, you must wait for 2 minutes after switching off the ignition.

Never disconnect a terminal when the engine is running.

Never charge a battery without first disconnecting the terminals.

Close the sunroof and the windows before disconnecting the battery. If they do not operate normally following reconnection of the battery, they must be reinitialised.

**+** For the sunroofs safety auto-reverse, refer to the "Accesses" section of chapter 2.

**+** For the electric windows safety auto-reverse, refer to the "Mirrors and windows" section of chapter 3.

After every reconnection of the battery, switch on the ignition and wait 1 minute before starting to allow the electronic systems to be initialised. If slight difficulties are experienced after this, please contact a PEUGEOT dealer.

The door open monitoring electrical system consumes power, remember to close the sliding doors when your vehicle is parked for long periods.


### ECONOMY MODE FUNCTION

After the engine has stopped, with the key in the ignition position, certain functions (windscreen wiper, electric windows, courtesy lights, audio equipment, etc.) can only be used for a cumulative duration of thirty minutes, to prevent discharging the battery.

Once the thirty minutes are over, the message "**Economy mode active**" appears on the display and the active functions are put on standby.

To resume the use of these functions immediately, start the engine and let it run for a few seconds.

A flat battery will prevent the engine from starting.

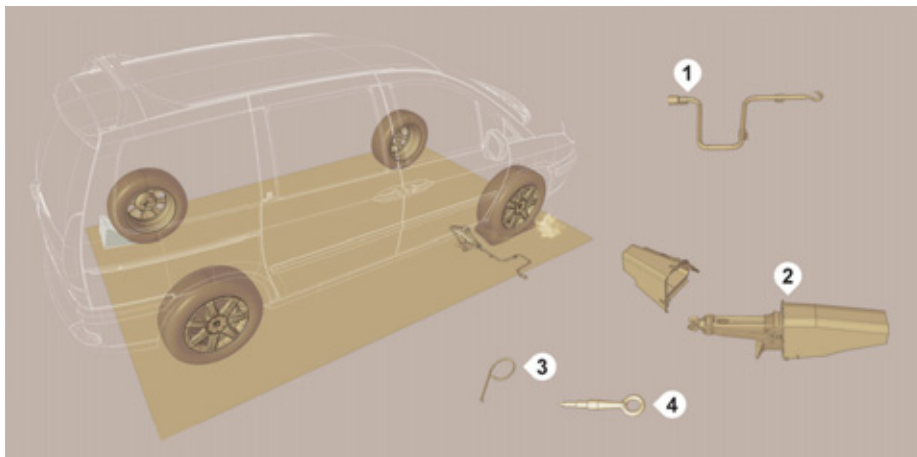

## CHANGING A WHEEL

### 1. PARKING THE VEHICLE


- If possible, park the vehicle on level, stable and non-slippery ground.
- It is imperative that you ensure that the occupants get out of the vehicle and wait in a safe location. Depending on the country of sale and for your own safety, use the safety jackets and warning triangles.
- Apply the handbrake, switch off the ignition and engage first or reverse gear (position **P** for the automatic gearbox).
- If possible, place a chock under the wheel diagonally opposite the one to be changed.

### 2. TOOLS

**+** Refer to the location of the tools (situated in the engine compartment) in the "Under the bonnet" section of chapter 6.

1. Wheelbrace.
2. Jack housing.
3. Alloy wheel embellisher remover.
4. Removable towing eye.

The jack and the tools are specific to your vehicle. Do not use them for other purposes.

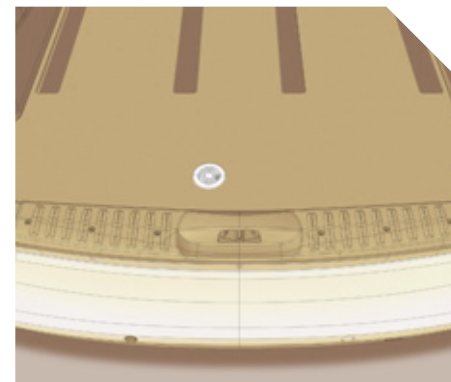

### 3. SPARE WHEEL

- Gain access to the spare wheel from the boot.


**i** You can switch on the row 3 courtesy light to increase the light in the boot.




- Open the cover to release the winch and access its bolt.

## Changing a wheel

118

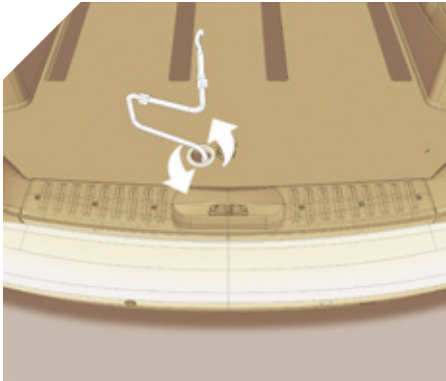

- Unwind the winch cable by unscrewing the bolt using the wheelbrace.

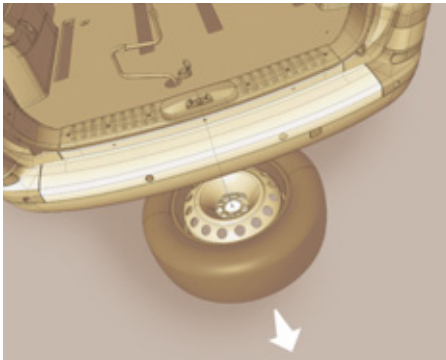


- Detach the spare wheel from the rear of the vehicle and place it near the wheel to be changed.




### 4. OPERATING PROCEDURE

- Remove the trim pulling at the valve passage hole. Use the flat end of the towing eye as a lever.
- Loosen the wheel bolts and start unscrewing them.




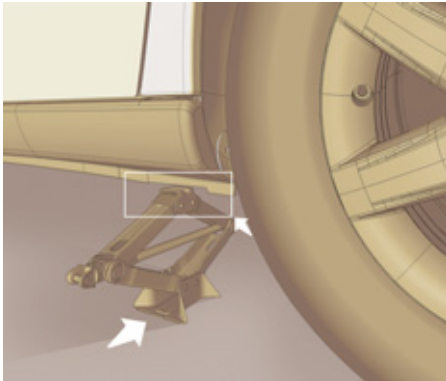

- Place the jack in contact with the locating point provided, the one which is closest to the wheel to be changed. Ensure that the base of the jack is in contact with the ground, and straight above.

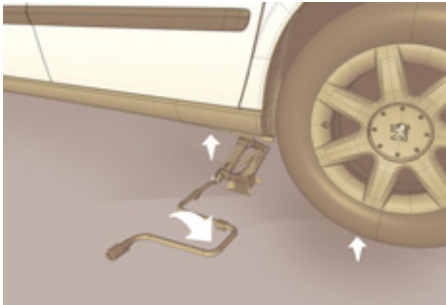


- Extend the jack to lift the wheel clear of the ground.

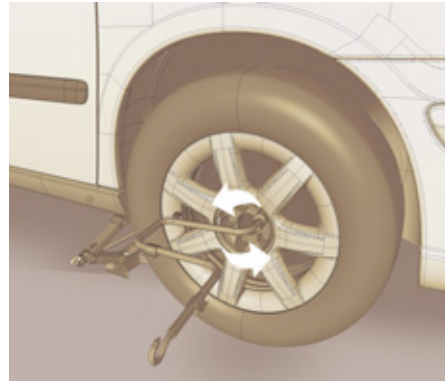


- Resume and complete the unscrewing of the wheel bolts.
- Remove the bolts and remove the wheel.

**i** Do not extend the jack until you have started unscrewing the bolts on the wheel to be changed and have placed the chock under the wheel diagonally opposite.

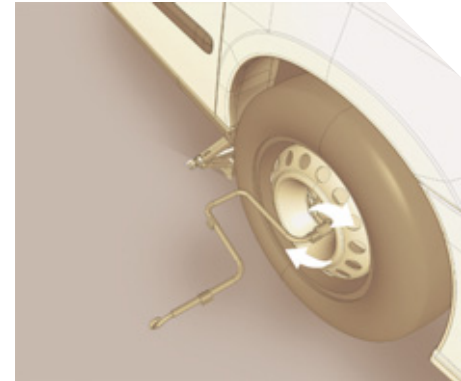

## 5. FITTING THE SPARE WHEEL


- Position the wheel on the hub and start tightening the bolts by hand.
- Initially tighten the bolts using the wheelbrace.

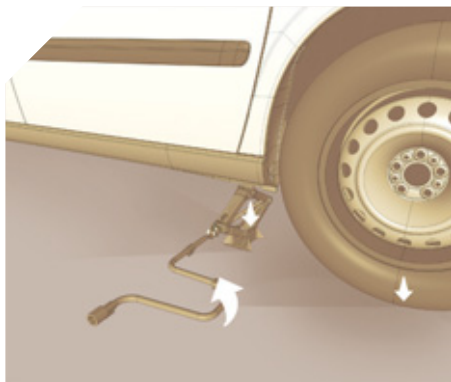

- Lower the vehicle completely by folding the jack, then remove the jack.




- Tighten the bolts again using the wheelbraces, tighten them fully without forcing them.

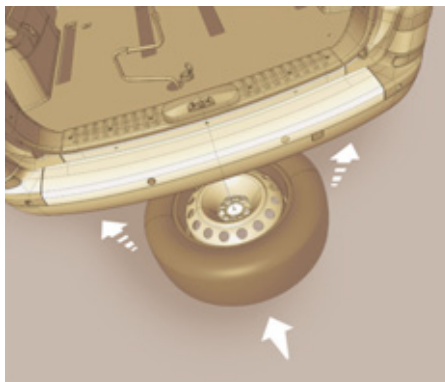


- Place the wheel to be repaired in the boot well, with the valve uppermost and the locating tab in place.
- Raise the winch cable using the wheelbrace and tighten fully. Check that the wheel is horizontal and flush against the rear floor to ensure that it is retained correctly while driving.
- Remember to close the flap, located in the boot, it permits securing of the winch.
- Store the trim in the boot.




 Never go underneath a vehicle that is supported only by a jack (use a ramp). Never use a screwdriver in place of the wheelbrace to unwind or wind the winch cable.

## 6. REFITTING THE REPAIRED WHEEL


The wheel is refitted as described in step 5, not forgetting to refit the wheel trim.

 The spare wheel is not designed to be used over long distances. Have the tightening of the bolts and the tyre pressure checked by a PEUGEOT dealer as soon as possible. Also, have the original wheel repaired and refitted by a PEUGEOT dealer as soon as possible.

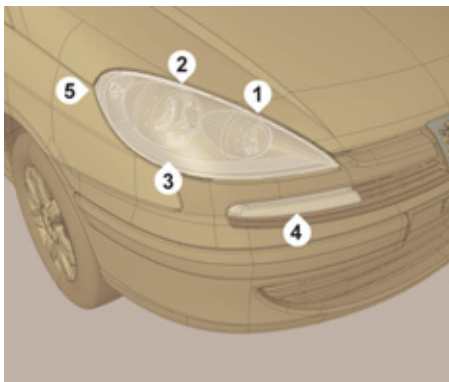


## CHANGING A BULB FRONT LIGHTS

1. Dipped headlamps
2. Main beam headlamps
3. Fog lamps
4. Side lights
5. Direction indicators

 Handle the bulbs with a dry cloth.

Make access easier on the right-hand side by removing the wash-wipe pipe and the fuse box cover.

High pressure washing: when using this type of washing on stubborn dirt, do not persist on the headlamps, the lights and their surrounds to avoid damaging their coating and their seal.

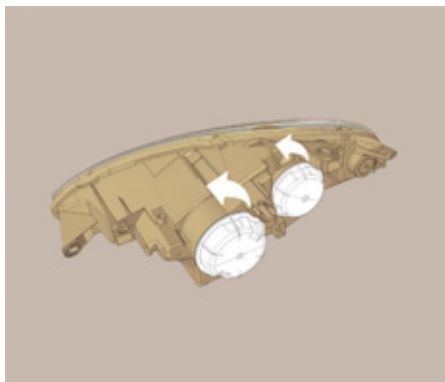

### 1 - Dipped beam headlamps

H7-55 W or xenon bulb.

### 2 - Main beam headlamps

H7-55 W or xenon bulb.


### 3 - Fog lamps

H1-55 3W.

- Turn the protective cover corresponding to the faulty bulb a quarter of a turn to the left and remove it.
- Disconnect the connector.
- Press the end of the securing clip to free it. Change the bulb.

When fitting the new bulb, ensure that the direction notches are positioned correctly and the securing clip is fixed properly.

- Reconnect the connector.
- Refit the protective cover, then turn it a quarter of a turn to the right.

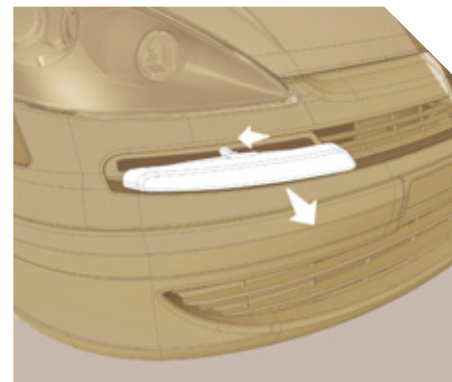

### 4 - Side lights


W 5 W.

- Push the light from the inside towards the outside of the bumper.
- Pull the light forwards.
- Turn the bulb holder a quarter of a turn to the left and remove it.
- Turn the bulb a quarter of a turn to the left, remove it and change it.

When refitting, engage the light towards the outside and move it towards the inside of the bumper.

### WARNING: RISK OF ELECTROCUTION


Xenon bulbs must be changed by a PEUGEOT dealer.

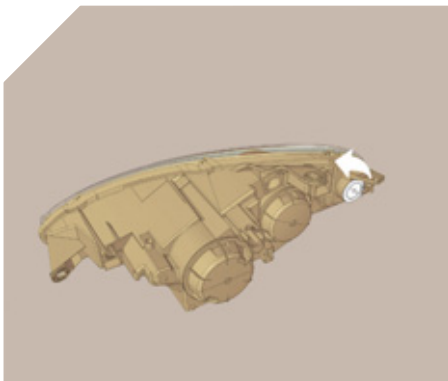

### 5 - Direction indicators

PY 21 W (amber).

- Turn the bulb holder a quarter of a turn to the left and remove it.
- Change the bulb.

 The headlamps are fitted with polycarbonate glass with a protective coating. Do not clean them with a dry or abrasive cloth, nor with a detergent or solvent product. Use a sponge and soapy water.

In certain climatic conditions (low temperature, humidity), condensation inside the headlamp glass is normal; it disappears a few minutes after the lights are switched on.




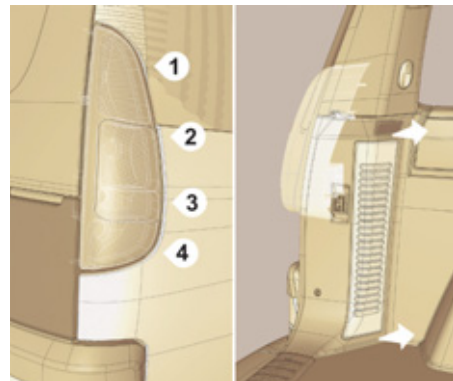
### Direction indicator side repeaters

WY 5 W (amber).

- Push the repeater rearwards and release it from the mirror.
- Hold the connector and turn the bulb holder a quarter of a turn to the left.
- Turn the bulb a quarter of a turn to the left, remove it and change it.

When refitting, engage the repeater towards the rear and move it towards the front of the mirror.

 Amber coloured bulbs (direction indicators and side repeaters) must be changed for bulbs of identical specification and colour.



### Rear lights

#### 1. Direction indicators

PY 21 W (amber).

#### 2. Brake/side lights

P 21 W/5 W.

#### 3. Reversing lights

P 21 W.

#### 4. Fog lamps

P 21 W.

These 4 bulbs are changed from inside the vehicle:


- open the tailgate,
- remove the air extraction grille on the side concerned,
- unclip the light harness,



- unscrew the two interior nuts and remove the light,
- unscrew the bulb holder concerned an eighth of a turn to the left and remove it,
- unscrew the faulty bulb an eighth of a turn to the left and change it.

When refitting:


- take care to position the bulb correctly and press on it to engage it,
- take care to position the bulb holder correctly and screw it in an eighth of a turn to the right,
- take care to position and secure the light correctly.

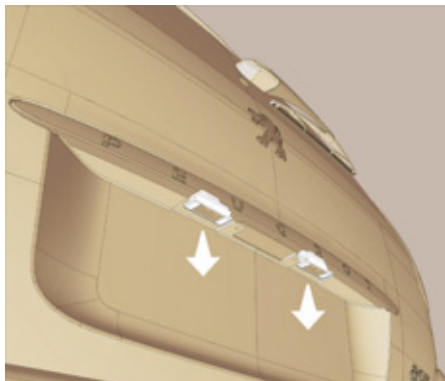

### NUMBER PLATE LIGHTS

W 5 W.

- Remove the lens.
- Change the faulty bulb.

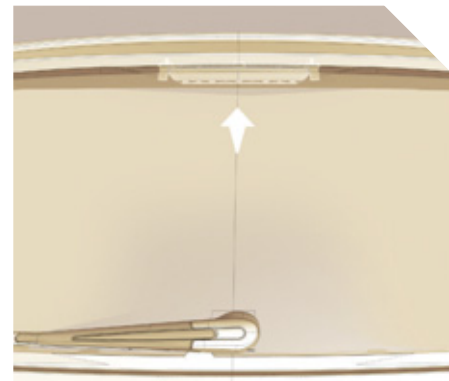

### THIRD BRAKE LIGHT


5 W 5 W bulbs.

- ☞ Remove the tailgate upper trim by unclipping it on each side.
- ☞ Squeeze the two tabs **1** to release the bulb holder.
- ☞ Change the faulty bulb.
- ☞ When refitting, ensure that the tailgate upper trim has been put back in place correctly.



When two or more bulbs are faulty, you must replace them immediately.

## Changing a fuse


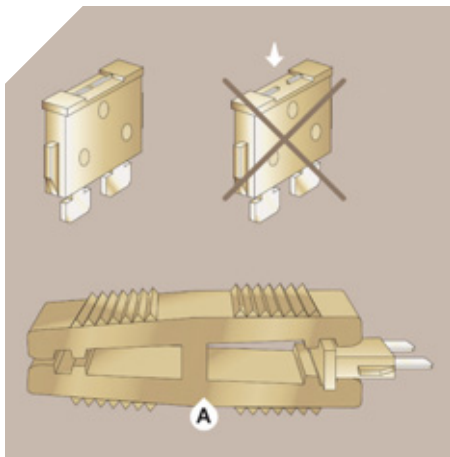


### CHANGING A FUSE

The fuse boxes are located in:

- the instrument panel lower glove box (right-hand side),
- the battery compartment (right-hand side floor),
- the engine compartment.

The spare fuses and special pliers **A** are fixed to the inside of the lid of the instrument panel fuse box.

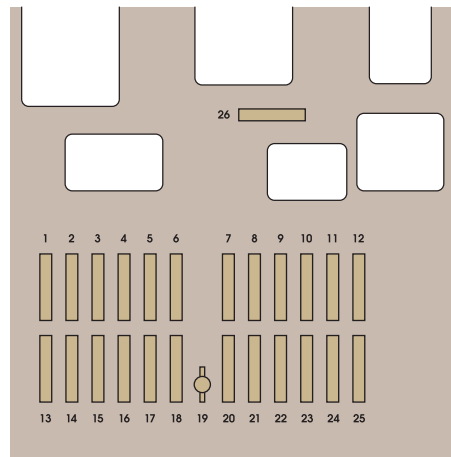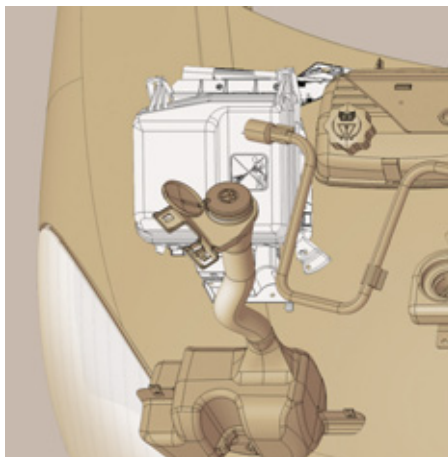

### Removing and changing a fuse

Before changing a fuse you must establish the cause of the fault and have it corrected. The fuse box numbers are indicated on the fuse box.

- Use the special pliers **A**.

**Always change a faulty fuse for one of the same rating.**

PEUGEOT will not accept responsibility for the cost incurred in repairing your vehicle or for rectifying the malfunctions resulting from the installation of accessories not supplied and not recommended by PEUGEOT and not installed in accordance with its instructions, in particular when the combined consumption of all of the additional equipment connected exceeds 10 milliamperes.

**INSTRUMENT PANEL FUSES**

- Open the lower glove box on the right-hand side.
- Pull the handle to open the cover and access the fuses.

<b>N°</b>	<b>Rating (Amps)</b>	<b>Functions</b>
1	15	Rear wiper.
2	-	Not used.
3	5	Airbag control unit.
4	10	Steering wheel angle sensor, Diagnostic socket, ESP sensor, Manual air conditioning, Clutch switch, Headlamp beam height, Particle emission filter pump, Electrochromatic interior mirror.
5	30	Electric mirrors, Passenger's electric window motor, Sunroof row 1.
6	30	Front electric windows supply.
7	5	Courtesy lights, Glove box light, Courtesy mirror lights, Entertainment screen lights row 2.
8	20	Multifunction display, Anti-theft alarm siren, Audio equipment, Compact disc changer, Audio/telephone, Diesel additive control unit, Tyre under-inflation detection control unit, Sliding doors module control unit.
9	30	Lighter.
10	15	Steering wheel switching, Trailer fuse box.
11	15	Diagnostic socket, Ignition switch, Automatic gearbox (4-speed).
12	15	Driver's seat memory unit, Passenger's electric seat, Airbag control unit, Parking assistance control unit, Sliding side door buttons, Hands-free kit, Automatic gearbox (6-speed).
13	5	Engine fuse box, Trailer fuse box.
14	15	Rain sensor, Automatic air conditioning, Instrument panel, Sunroofs, Odometer warning lights unit, Audio-telematics control.
15	30	Passenger's lock locking.
16	30	Locking/unlocking of the accesses.
17	40	Heated rear screen.

## Changing a fuse



### BATTERY COMPARTMENT FUSES

#### Fuse box

The fuses are located in the battery compartment, housed underneath the floor in front of the seat on the right-hand side:

- unclip the cover.

**Carefully close the cover when you have finished.**

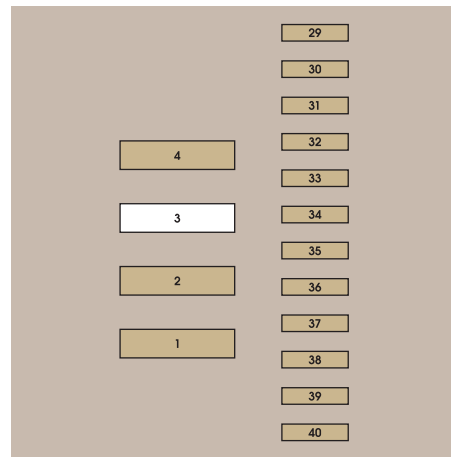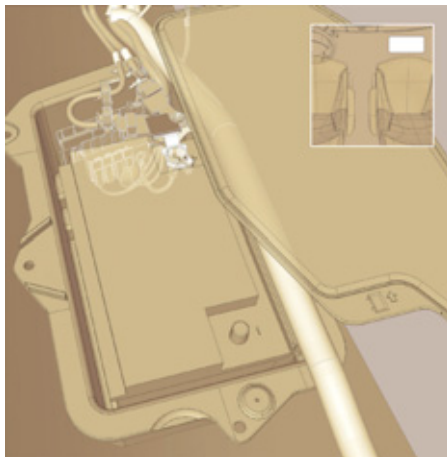



N°	Rating (Amps)	Functions
1*	40	Electric sliding side door.
2*	40	Electric sliding side door.
3*	-	Not used.
4*	40	Trailer fuse box.
31	5	Main brake switch.
32	25	Driver's seat memorisation.
33	25	Passenger's seat memorisation.
34	20	Sunroof row 3.
35	20	Sunroof row 2.
36	10	Passenger's heated seat.
37	10	Driver's heated seat.
38	15	Not used.
39	20	12 V accessories socket row 3.
40	20	12 V accessories socket row 2.

\* The maxi-fuses provide additional protection for the electrical systems. All work must be carried out by a PEUGEOT dealer.

## Changing a fuse

### ENGINE COMPARTMENT FUSES

#### Fuse box

To access the fuses located in the engine compartment (to the left of the coolant reservoir):

- unclip the cover.

#### Carefully close the cover when you have finished.


The electrical system of your vehicle is designed to operate with standard or optional equipment.

Before installing other electrical equipment or accessories on your vehicle, consult a PEUGEOT dealer.

PEUGEOT will not accept responsibility for the cost incurred in repairing your vehicle or for rectifying the malfunctions resulting from the installation of accessories not supplied and not recommended by PEUGEOT and not installed in accordance with its instructions, in particular where the equipment in question consumes more than 10 milliamperes.




**i** The designations communicated only relate to the fuses which can be changed by the user using the pliers and spare fuses, located in the glove box behind the instrument panel fuse box, on the right-hand side. For any other work, visit a PEUGEOT dealer.

Intended for professionals: for full fuse and relay information, consult the "Methods" diagram via the PEUGEOT network.

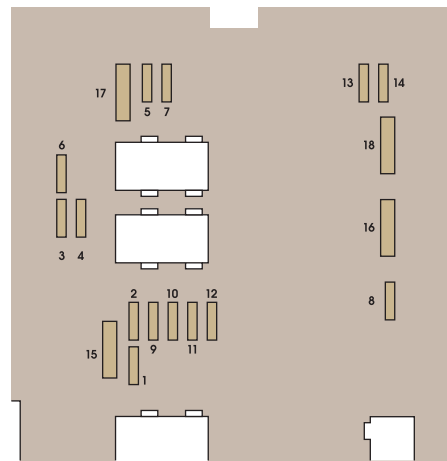

N°	Rating (Amps)	Functions
1	20	Engine control unit, Fuel supply and air supply systems, Fan assembly.
2	15	Horn.
3	10	Front and rear wash-wipe pump.
4	20	Headlamp wash pump.
5	15	Fuel supply system.
6	10	Power steering, Secondary brake pedal switch, Automatic gearbox control unit, Air flow sensor, Automatic beam corrector with xenon bulbs.
7	10	Braking system (ABS/ESP).
8	20	Starter control.
9	10	Main brake switch.
10	30	Fuel supply and air supply systems, Emission control systems.
11	40	Front air conditioning.
12	30	Windscreen wipers.
13	40	Built-in systems interface.
14	30	Not used.
15	30	Child lock locking/unlocking/deadlocking control.

## Changing a wiper blade

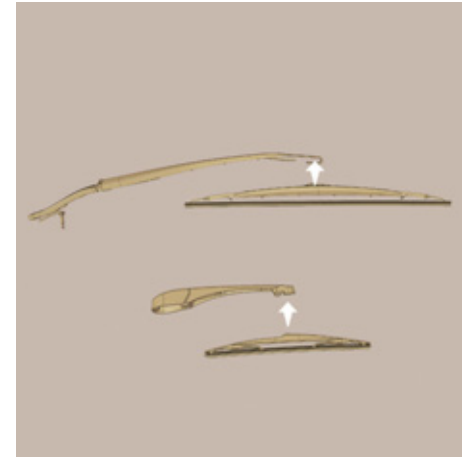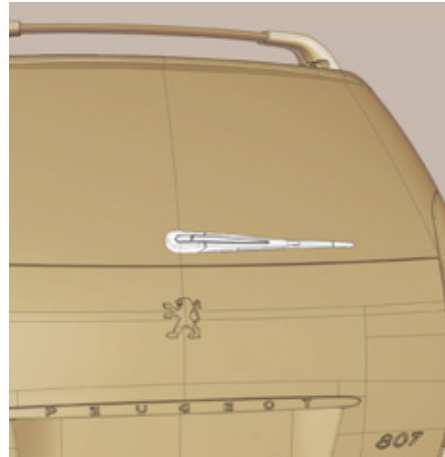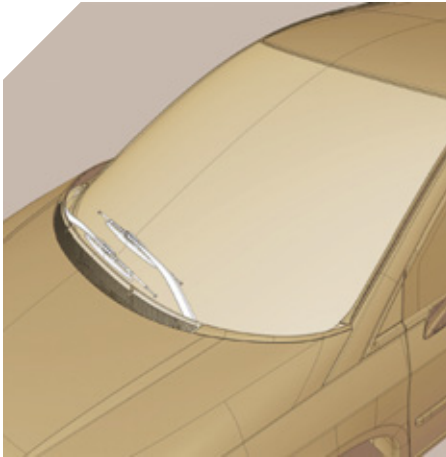

### CHANGING A WINDSCREEN WIPER BLADE

#### Placing the wiper blades in the special position

- Less than a minute after switching off the ignition, operate the wipers stalk to position the wiper blades along the windscreen uprights (special position).

#### Changing a windscreen wiper blade


- Lift the wiper arm, then disconnect the windscreen-wash pipe.
- Unclip the blade and remove it.
- Fit the new blade.

- Reconnect the windscreen-wash pipe and push back the wiper arm.

**To return the windscreen wipers to their normal position, switch on the ignition and operate the wipers stalk.**

#### Changing the rear wiper blade

- Lift the wiper arm, then unclip the blade and remove it.
- Fit the new blade and push back the wiper arm.

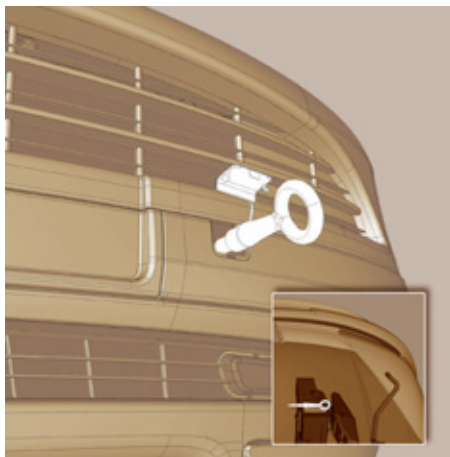


## TOWING YOUR VEHICLE

### Without lifting (4 wheels on the road)

You should always use a towbar. The removable towing eye is inside the engine compartment.

### From the front

- unclip the cover by pressing the bottom part,
- screw in the removable towing eye until it locks.

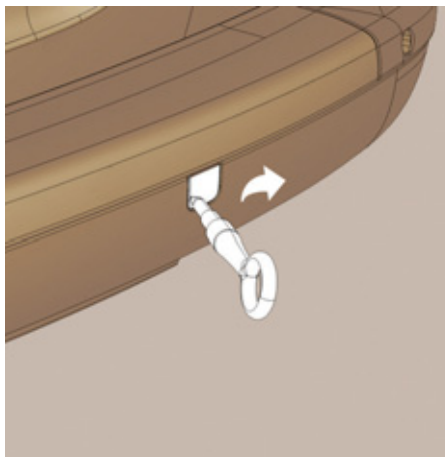


### From the rear

- unclip the top of the cover using a coin,
- screw in the removable towing eye until it locks.

### Lifting (2 wheels on the road only)

It is preferable to raise the vehicle using professional lifting equipment.

- i** Put the gear lever in neutral. Failure to observe this rule may result in damage to certain components.

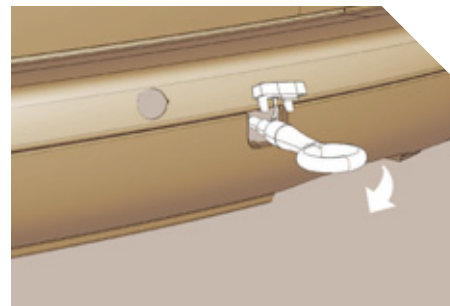

### Special features of the automatic gearbox

When being towed with four wheels on the road, it is essential to observe the following rules:

- selector lever in position **N**,
- tow the vehicle at a speed below 30 mph (50 km/h) over a distance limited to 30 miles (50 km) maximum,
- do not add oil to the gearbox.

When towing with the engine switched off, there is no braking or steering assistance.

### VEHICLES FITTED WITH A MANUAL GEARBOX (diesel version)

In the case of vehicles fitted with a manual gearbox, the gear lever must be in the neutral position. Failure to observe this special condition may result in damage to certain braking components and the absence of braking assistance the next time the engine is started.

This table presents the Model Codes

<b>Engine, __xxx__</b>	Diesel	2.0 HDi PEF	<b>__RHR__</b>
<b>Number of seats, xx_____</b> Base model: 5 individual seats		7 seats maximum 8 seats maximum	<b>EA_____</b> <b>EB_____</b>
<b>Type of gearbox, _____xx</b>		Manual (6-speed) Automatic (6-speed)	<b>_____H</b> <b>_____J</b>
Category and type of towing device	A 50 X		
Part number, instructions concerning fitting	R 06-0049		

<b>DIESEL ENGINE</b>			
<b>Model codes</b>	<b>E_RHRH</b>	<b>E___H</b>	<b>E___J</b>
<b>Engine</b>	<b>2.0 HDi PEF</b>	<b>2.0 HDi PEF</b>	
	Manual (6-speed)	Manual (6-speed)	Automatic (6-speed)
Power (bhp)	140	163	
Max. power: EU standard (KW)	100	120	
Capacity (cm <sup>3</sup> )	1 997	1 997	
Bore x stroke (mm)	85 x 88	85 x 88	
Number of valves	16	16	
Max. power engine speed (rpm)	4 000	4 000	
Max. torque: EU standard (Nm)	320	320	
Max. torque engine speed (rpm)	2 000	2 000	
Fuel	Diesel	Diesel	
Catalytic converter	Yes	Yes	
Particle emission filter (PEF)	Yes	Yes	
Electronic injection	Yes	Yes	
<b>Oil capacities (in litres)</b>			
Engines (with filter replacement)	5	5	

**DIESEL DIMENSIONS, WEIGHTS AND TOWING LOADS (in mm - in kg)**

Model codes	EARHRH	EBRHRH	EA__H EA__J	EB__H EB__J
	7 seats	8 seats	7 seats	8 seats
<b>Engine</b>	<b>2.0 HDi PEF</b>		<b>2.0 HDi PEF</b>	
Wheelbase(s) (at full load)	2 823		-	-
on Axle 1	1 570		-	-
on Axle 2	1 548		-	-
Length		4 727		
Width		1 850		
Height at kerb weight				
without roof bars		1 745 to 1 759		
with fixed roof bars		1 854 to 1 863		
<b>Kerb weight</b>	<b>1 854 to 1 957</b>	<b>1 818 to 1 983</b>	<b>-</b>	<b>-</b>
on Axle 1	1 121 to 1 157	1 117 to 1 161	-	-
on Axle 2	733 to 800	701 to 822	-	-




Model codes	EARHRH	EBRHRH	EA__H EA__J	EB__H EB__J
	7 seats	8 seats	7 seats	8 seats
Engine	2.0 HDi PEF		2.0 HDi PEF	
Gross train weight (GTW)	3 945		-	-
Gross vehicle weight (GVW)	2 530		-	-
on Axle 1	1 256	1 263	-	-
on Axle 2	1 274	1 267	-	-
Gross weight				
on Axle 1	1 270		-	-
on Axle 2	1 300		-	-
Gross towed weight	1 850		-	-
Gross weight of unbraked trailer	750		-	-
Gross weight on towing attachment	76		-	-



The GTW and towing load values indicated are valid up to a maximum altitude of 1 000 metres; the towing load mentioned must be reduced by 10 % for each additional 1 000 metres of altitude.



The speed of a towing vehicle must not exceed 60 mph (100 km/h) (comply with the legislation in force in your country).


High exterior temperatures may result in a reduction in the performance of the vehicle in order to protect the engine; when the exterior temperature is above 45 °C, restrict the towed weight.

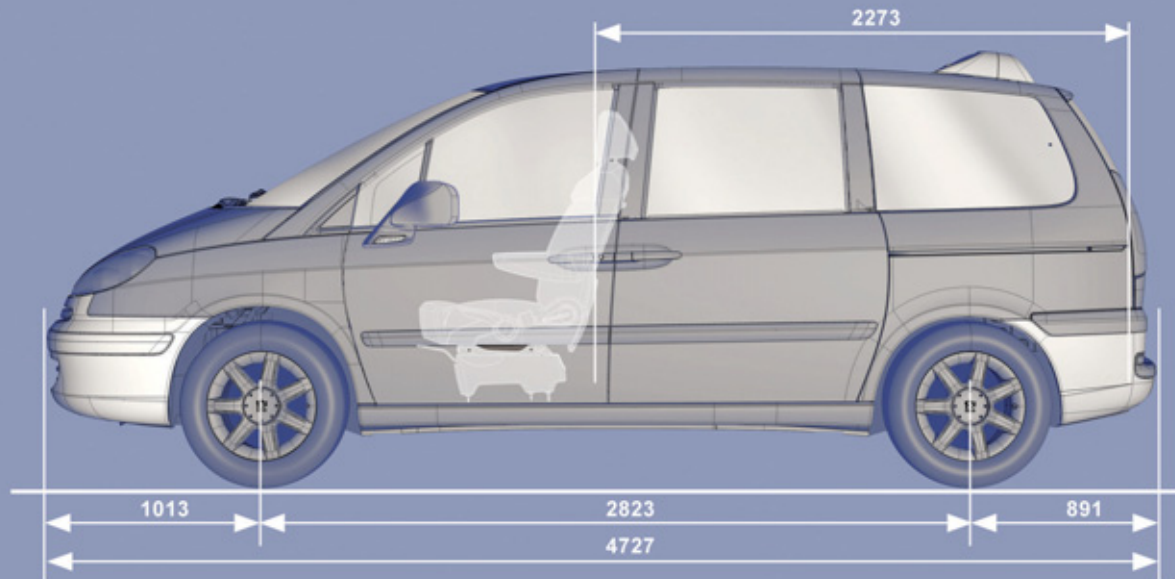**DIMENSIONS (IN MM)**

**+** To find out more about dimensions: refer to the "Dimensions, weights and towing loads" section for diesel engines in chapter 8.

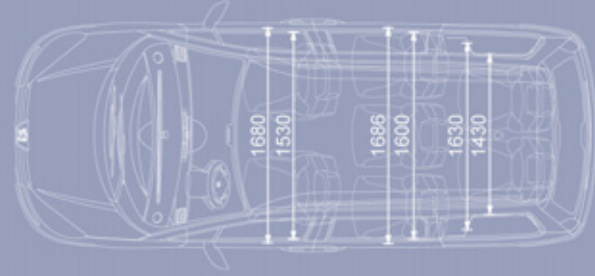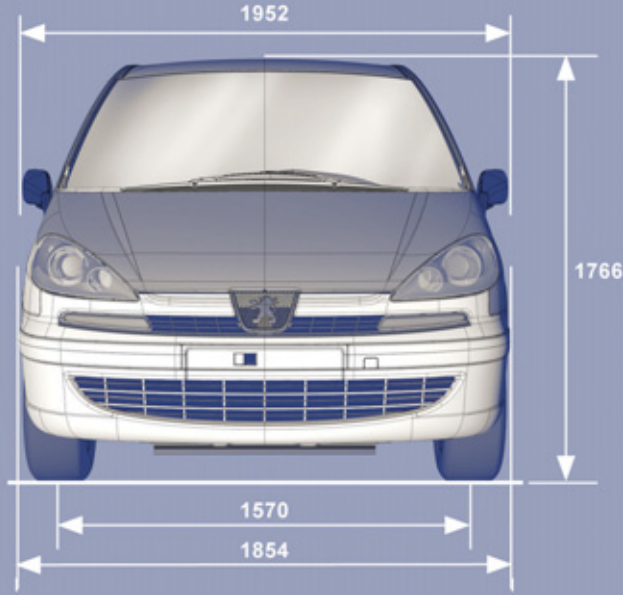

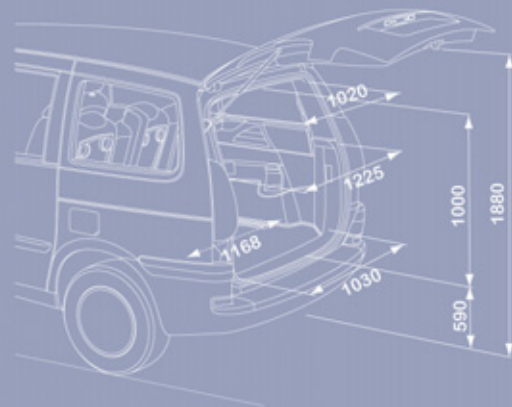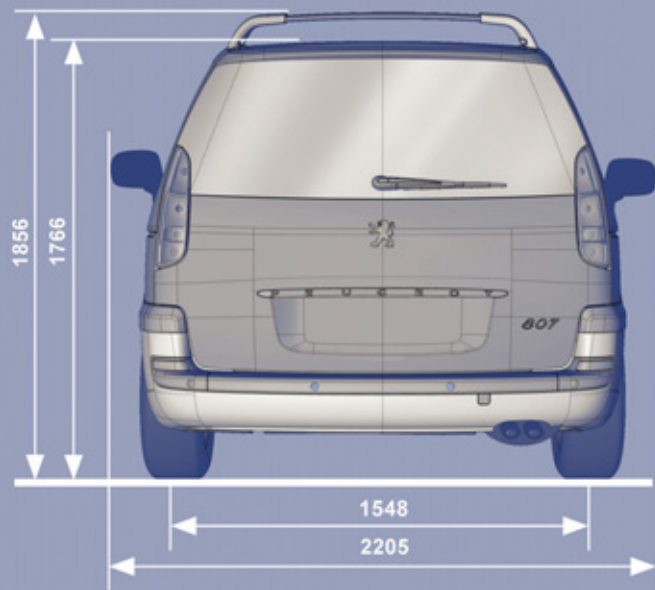

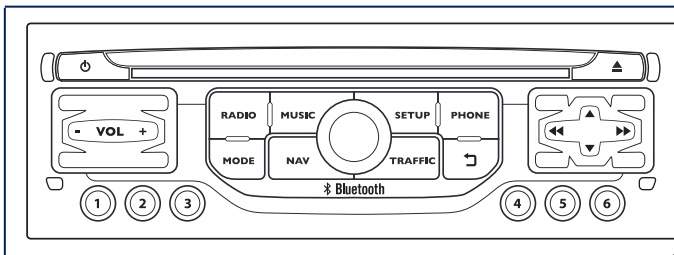

# PEUGEOT CONNECT NAVIGATION (RT6)

## SATELLITE NAVIGATION SYSTEM

### MULTIMEDIA BLUETOOTH TELEPHONE AUDIO SYSTEM



The system is protected in such a way that it will only operate in your vehicle.



For safety reasons, the driver must carry out operations which require prolonged attention while the vehicle is stationary.

When the engine is switched off and to prevent discharging of the battery, the system switches off following the activation of the energy economy mode.

## CONTENTS

<b>01</b>	<b>First steps - Control panel</b>	<b>p.</b>	<b>9.2</b>
<b>02</b>	<b>General operation</b>	<b>p.</b>	<b>9.4</b>
<b>03</b>	<b>Steering mounted controls</b>	<b>p.</b>	<b>9.6</b>
<b>04</b>	<b>Audio settings</b>	<b>p.</b>	<b>9.7</b>
<b>05</b>	<b>Navigation - Guidance</b>	<b>p.</b>	<b>9.8</b>
<b>06</b>	<b>Traffic information</b>	<b>p.</b>	<b>9.21</b>
<b>07</b>	<b>Using the telephone</b>	<b>p.</b>	<b>9.25</b>
<b>08</b>	<b>Radio</b>	<b>p.</b>	<b>9.36</b>
<b>09</b>	<b>Music media players</b>	<b>p.</b>	<b>9.40</b>
<b>10</b>	<b>Configuration</b>	<b>p.</b>	<b>9.46</b>
<b>11</b>	<b>Trip computer</b>	<b>p.</b>	<b>9.49</b>
<b>12</b>	<b>Screen menu map</b>	<b>p.</b>	<b>9.50</b>
	<b>Frequently asked questions</b>	<b>p.</b>	<b>9.54</b>

# 01 FIRST STEPS

Long press: open the **"Audio settings"** menu: music ambience, bass, treble, loudness, left/right balance, front/rear fader, automatic volume adjustment.

Selection and confirmation OK dial:

Selection of an item on the screen or in a list or a menu, then confirmation with a short press.

Other than for menus and lists, a short press displays a contextual menu depending on the current screen.

Rotation with map displayed: zoom the map scale in and out.

Access to the **"RADIO"** menu and display the list of stations received.

Access to the **"MUSIC"** menu, and display of the CD/MP3/Apple® tracks and folders.


Long press: display the audio settings screen for the radio tuner source.

Long press: display the audio settings screen for the **"MEDIA (CD/USB/iPod/Streaming/AUX)"** sources.

Short press without the engine running: on / off.

Short press with the engine running: audio source off / restore.

Volume adjustment (each source is independent, including TA messages and navigation instructions).

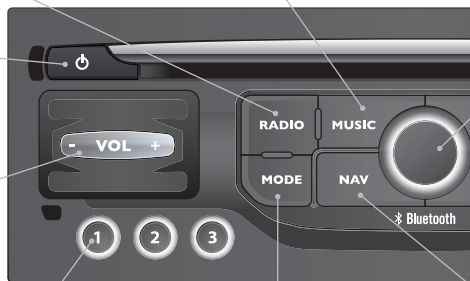

Short press: select pre-set radio station.

Long press: pre-set the current station.

**MODE** button: Selection of the type of permanent display.

Long press: black screen (DARK).

Access to the **"Navigation - guidance"** menu and display the recent destinations.

# 01 FIRST STEPS

Open the **"Configuration"** menu.


Long press: access to the GPS coverage and the navigation demonstration mode.

Open the **"Telephone"** menu and display the list of recent calls or accept an incoming call.

Select:

- the previous/next line in a list or menu.
- the previous / next media folder.
- step by step selection of the previous/next radio frequency.
- the previous / next MP3 folder.

Move up/down, in **"Move the map"** mode.

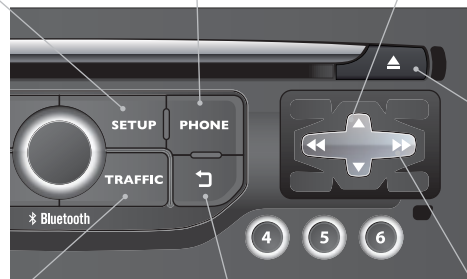

Continuous press: reinitialisation of the system.

Open the **"Traffic information"** menu and display the current traffic alerts.

Abandon the current operation, up one level in the menu.  
Long press: return to the permanent display.

Select:

- the next lower / higher radio frequency automatically.
- the previous / next CD track, MP3 track or media.
- the left / right of the screen when a menu is displayed.

Move left / right in **"Move the map"** mode.

## 02 GENERAL OPERATION

**MODE**


Press the **MODE** button several times in succession for access to the following displays:

"**RADIO**"



"**TELEPHONE**"

(If conversation in progress)

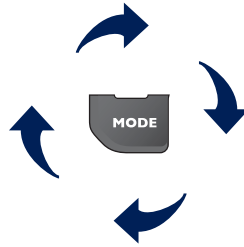

"**MAP IN WINDOW**"

(If navigation guidance in progress)



"**FULL SCREEN MAP**"

**SETUP**

**SETUP: PARAMETERS**

date and time, display configuration, sound.

**RADIO**

**MUSIC**

Changing the audio source:

**RADIO:** RADIO broadcasts.

**MUSIC:** playing MUSIC.



For cleaning the screen, the use of a soft, non-abrasive cloth (spectacles cloth) is recommended, with no additional product.



For a detailed global view of the menus available, refer to the "Screen menu map" section.



## 02 GENERAL OPERATION

### DISPLAY ACCORDING TO CONTEXT



A press on the dial gives access to short-cut menus according to the display in the screen.

#### RADIO:

- 1 Activate / Deactivate TA
- 1 Activate / Deactivate RDS
- 1 Change waveband
- 1 TA
- 2 FM
- 2 AM

#### TELEPHONE (call in progress):

- 1 Private mode
- 1 Put call on hold

1 DTMF ring tones

1 Hang up

#### MUSIC MEDIA PLAYERS, CD or USB (according to media):

Play modes:

- 1 Normal
- 1 Random
- 1 Random on all media
- 1 Repetition

#### FULL SCREEN MAP OR IN A NEW WINDOW:

1 Stop / Restore guidance

1 Select destination

2 Enter an address

2 Directory

2 GPS coordinates

1 Divert route

1 Move the map

2 Info. on location

2 Select as destination

2 Select as stage

2 Save this place (contacts)


2 Quit map mode

1 Guidance criteria

# 03 STEERING MOUNTED CONTROLS

RADIO: select the previous/next preset station.  
Select the next entry in the address book.

RADIO: change to the next radio station in the list.  
Long press: automatic search for a higher frequency.  
CD: select the next track.  
CD: continuous press: fast forward play.

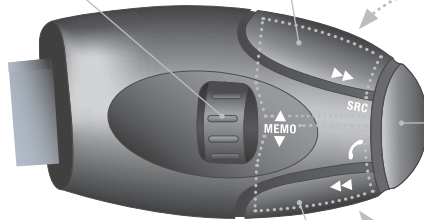

Volume increase.

Change the audio source.  
Start a call from the address book.  
Call/End call on the telephone.  
Press for more than 2 seconds:  
access to the address book.

Mute: press the volume increase and decrease buttons simultaneously.  
Restore the sound by pressing one of the two volume buttons.

Volume decrease.


RADIO: change to the previous radio station in the list.  
Long press: automatic search for a lower frequency.  
CD: select the previous track.  
CD: continuous press: fast reverse.

# 04 AUDIO SETTINGS

1



They are accessible by the **MUSIC** button in the control panel or by a long press on **RADIO** according to the source in use.

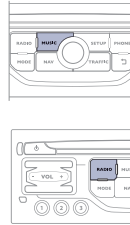

!

The distribution (or spatialisation using the Arkamys® system) of sound is an audio process that allows the audio quality to be adapted to the number of listeners in the vehicle.

2

- "Equalizer" (choice of 6 musical ambiances)
- "Bass"
- "Treble"
- "Loudness" (Activate/Deactivate)
- "Distribution" ("Driver", "All passengers")
- "Le-Ri balance" (Left/Right)
- "Fr-Re balance" (Front/Rear)
- "Auto. Volume" depending on road speed (Activate/Deactivate)

!

The audio settings (**Equalizer**, **Bass**, **Treble** and **Loudness**) are different and independent for each sound source.  
The settings for distribution and balance are common to all sources.

# 05 NAVIGATION - GUIDANCE

## Access to the "NAVIGATION" menu



Press **NAV**.

A short press on the end of the lighting control stalk repeats the last navigation message.

To delete the list of recent destinations, select "**Guidance options**" in the navigation menu then select "**Delete last destinations**" and confirm. Select "**Yes**" then confirm. Deleting just one destination is not possible.



Contact a PEUGEOT dealer for mapping updates.

Go from the list to the menu (left/right).




 

 

 

 

 
or

 

 

 


 

 


# 05 NAVIGATION - GUIDANCE

## SELECTING A DESTINATION

### TOWARDS A NEW DESTINATION

1	 <p>Press NAV to display the "Navigation - guidance" menu.</p>	
2	 <p>Select "Select destination" and confirm, then select "Enter an address" and confirm.</p>	
3	 <p>Select the "Country" function then confirm.</p>	
4	 <p>Select "Town" function then confirm to enter the destination town.</p>	
5	 <p>Select the letters in the name of the town one at a time, confirming each one with the dial.</p>	

6	<p>Select the town from the list offered, then confirm A pre-set list (by entering the first few letters) of the towns in the country selected can be accessed directly by selecting and confirming "List" on the screen.</p>	
7	 <p>Turn the dial and select "OK" then confirm.</p>	
8	 <p>If possible, enter the "Road" and "N°/X" information in the same way.</p>	
	<p>Select "Archive" to save the address entered in a contact file. The system allows up to 400 contact files to be recorded.</p>	
9	 <p>Confirm "OK" to start guidance.</p>	
10	 <p>Select the guidance criteria: "Fastest route", "Shortest route" or optimised "Distance/Time", then select the desired restriction criteria: "With tolls", "With Ferry", or "Traffic info" then confirm "OK".</p>	

# 05 NAVIGATION - GUIDANCE

 
## SELECTING A DESTINATION

### TO ONE OF THE RECENT DESTINATIONS

1




Press **NAV** to display the "**Navigation - guidance**" menu.



2



 Select the desired destination and confirm to start guidance.




i

Navigation towards a contact imported from your telephone is only possible if the address is compatible with the system.

1



 
Press **NAV** to display the "**Navigation - guidance**" menu.



2



 
Select "**Select destination**" and confirm, then select "**Directory**" and confirm.



3



 Selection the desired destination from your contacts and confirm "**OK**" to start the guidance.




# 05 NAVIGATION - GUIDANCE

## TOWARDS GPS COORDINATES

1



 
Press **NAV** to display the "Navigation - guidance" menu.



2



 
Select "**Select destination**" and confirm, then select "**GPS coordinates**" and confirm.



3



 Enter the GPS coordinates and confirm "**OK**" to start the guidance.




## TOWARDS A POINT ON THE MAP

1



 
With the map displayed, press **OK** to display the contextual menu. Select "**Move the map**" and confirm.



2



 
Move the cursor using the control to identify the desired destination.



3



 
Press **OK** to display the contextual menu for "**Move the map**" mode.



4



 Select "**Select as destination**" or "**Select as stage**" and confirm.




# 05 NAVIGATION - GUIDANCE


## TOWARDS POINTS OF INTEREST (POI)

The points of interest (POI) indicate all of the service locations in the vicinity (hotels, various businesses, airports...).

 1



 
Press **NAV** to display the "Navigation - guidance" menu.



2



 Select the "**Enter an address**" function and confirm, then select **Select destination** and confirm.



3



To select a POI close to your current location, select "**POI**" and confirm, then select "**Around the current place**" and confirm.

To select a POI as a stage on the route, select "**POI**" and confirm, then select "**On the route**" and confirm.

To select a POI as a destination, first enter the country and town (see "Towards a new destination"), select "**POI**" and confirm, finally select "**Near**" and confirm.

 


Select "**Search by Name**" to search for POIs by name and not by proximity.

4




Search for POIs in the categories suggested in the following pages.



5



 Select the POI and confirm "**OK**" to start the guidance.





























# 05 NAVIGATION - GUIDANCE











This icon appears when several POIs are grouped together in the same area. Zooming in on this icon shows details of the POIs.



## LIST OF PRINCIPAL POINTS OF INTEREST (POI)

-  Service station
-  Garage
-  PEUGEOT
-  Motor racing circuit
-  Covered car park
-  Car park
-  Rest area
-  Hotel
-  Restaurant
-  Cafeteria
-  Bed and breakfast
-  Airport

-  Railway station
-  Bus station
-  Port
-  Industrial estate
-  Supermarket
-  Bank
-  Vending machine
-  Sports complex, sports centre, sports ground
-  Swimming pool
-  Winter sports resort
-  Entertainment, show
-  Cinema

-  Theme parks
-  Hospital, Chemist, Vet
-  Police station
-  School
-  University
-  Town hall
-  Post office
-  Museum, Culture, Theatre, Historic monument
-  Tourist information, Tourist attraction
-  Risk area\*

The detailed procedure for updating POIs can be found at "<http://peugeot.navigation.com>".

\* According to availability in the country.

 
# 05 NAVIGATION - GUIDANCE

## ALERT PARAMETERS RISK AREAS

1




Press **NAV** to display the "**Navigation - guidance**" menu.



2



 Select "**Guidance options**" and confirm, then select "**Set parameters for risk areas**" and confirm.



3

 


Select:

- "Visual alert"
- "Audible alert"
- "Alert only in guidance"
- "Overspeed alarm only".

The choice of time of notification defines how long in advance that Risk area warnings are given.

Select "**OK**" to confirm the screen.



These functions are only available if risk areas have been downloaded and installed on the system.  
The detailed procedure for updating risk area POIs can be found at [www.peugeot.com](http://www.peugeot.com).


# 05 NAVIGATION - GUIDANCE
 
## ADDING A STAGE

1




Press **NAV** to display the "Navigation - guidance" menu.



2



 
Select "**Journey leg and route**" then confirm.



3



 
Select "**Add a stage**" then confirm  
The address of the stage is entered as a destination, by "**Enter an address**", a contact in "**Directory**", or "**Previous destinations**".



4



 Select "**Close to**" a route passing close to the stage or "**Strict**" for a route passing through the stage.  
Confirm "**OK**" to start the guidance, and give a general indication of the guidance route.




## ORGANISING STAGES

1



 
To organise stages, carry out operations 1 to 2 again, then select "**Order/delete journey legs**" and confirm.



2



 
Select the stage that you want to move in the order.



3



 Select and confirm to save the modifications.



Select "**Delete**" to delete the stage.

# 05 NAVIGATION - GUIDANCE

 
## ROUTE OPTIONS

### CALCULATION CRITERIA

1




Press **NAV** to display the "Navigation - guidance" menu.



2



 Select "**Guidance options**" and confirm.




3



Select "**Define calculation criteria**" and confirm.

This function allows modification of:

 - the guidance criteria: ("**Fastest route**", "**Shortest route**", "**Distance/Time**"),
- the exclusion criteria: ("**With tolls**" or "**With Ferry**"),
- traffic avoidance: ("**Traffic info**").




i

If traffic avoidance (Traffic info) is selected, the system suggests an alternative route if there is a delay on the guidance route.

4



 Select "**OK**" and confirm to save the modifications.



# 05 NAVIGATION - GUIDANCE

 
## MAP MANAGEMENT

### SELECTING THE POINTS OF INTEREST DISPLAYED ON THE MAP

1




Press **NAV** to display the "Navigation - guidance" menu.



2



 
Select "**Map management**" and confirm.



3



 
Select "**Map details**" and confirm.



4



 Select from the various categories the ones that you want to display on the screen.




Select "**By default**" to have only "**Oil stations, garages**" and "**Accident-prone area**" appear on the map (if installed in the system).

5



 
Select "**OK**" then confirm and select "**OK**" again then confirm to save the modifications.




# 05 NAVIGATION - GUIDANCE

## MAP ORIENTATION

 1



 
Press **NAV** to display the "Navigation - guidance" menu.



2



 
Select "**Map management**" and confirm.



3



 Select "**Map orientation**" and confirm.




4



Select:

 - "**Vehicle direction**" to have the map follow the direction of travel,
- "**North direction**" to keep the map always North up,
- "**Perspective view**" to display a perspective view.



The colour of the map, different from the day and night mode, is configured in the "**SETUP**" menu.



Street names are visible on the map from the 100 m scale.

# 05 NAVIGATION - GUIDANCE

## ADJUSTING THE GUIDANCE SPEECH SYNTHESIS

### ADJUSTING THE VOLUME/DEACTIVATION

The volume setting of guidance messages is also accessible via the "SETUP" / "Voice synthesis" menu.

 


The volume of messages can be adjusted during the transmission of the message using the volume adjustment control.

1




Press **NAV** to display the "Navigation - guidance" menu.



2



 
Select "**Guidance options**" and confirm.



3



 
Select "**Set speech synthesis**" and confirm.



4



 
Select the volume graph and confirm.



5



 Adjust the volume to the desired level and confirm.




Select "**Deactivate**" to deactivate voice messages.

6



 Select "**OK**" and press the dial to confirm.




# 05 NAVIGATION - GUIDANCE

## MALE VOICE / FEMALE VOICE

1



 
Press **SETUP** to display the configuration menu.



2



 
Select "**Voice synthesis**" and confirm.



3



 Select "**Select male voice**" or "**Select female voice**" then confirm "**Yes**" to activate a male or female voice. The system restarts.





# 06 TRAFFIC INFORMATION

Access to the "TRAFFIC INFORMATION" menu



Press "TRAFFIC".

"Traffic information"

List of TMC messages in order of distance from the vehicle.

"Geographic filter"  
"Select TMC station"  
(automatic, manual)  
"Display/Do not display messages"

A diagram of a screen titled "Traffic information". It features a scrollable list on the left and a menu on the right. A blue arrow points from the list to the menu, and another blue arrow points from the menu back to the list.

Go from the list to the menu (left/right).



or



# 06 TRAFFIC INFORMATION

## CONFIGURE THE FILTERING AND DISPLAY OF TMC MESSAGES

 
TMC (Traffic Message Channel) messages contain information on traffic and weather conditions, received in real time and transmitted to the driver in the form of audible announcements and symbols on the navigation map.

The navigation system can then suggest an alternative route to avoid a traffic problem.

1




Press the **TRAFFIC** button to display the **Traffic information** menu.



2



 Select the **"Geographic filter"** function and confirm.



i

We recommend:

 
- a filter on the route and
- a filter around the vehicle of:
  - 12 miles (20 km) in urban areas,
  - 30 miles (50 km) on motorways.

3



The system offers a choice of:


- **"Retain all the messages"**,
- or
- **"Retain the messages"**
  - **"Around the vehicle"**, (confirm the mileage to modify and select the distance),
  - **"On the route"**.



4



 Confirm **"OK"** to save the modifications.



# 06 TRAFFIC INFORMATION

## PRINCIPAL TMC SYMBOLS

1 Black and blue triangle: general information, for example:



Weather reports



Traffic reports



Wind



Fog



Parking



Snow / ice

2 Red and yellow triangle: traffic information, for example:



Modified signage



Narrow carriageway



Slippery surface



Accident



Delay



Roadworks



Risk of explosion



Road closed



Demonstration



Danger



No entry

 



Traffic jam


## RECEIVING TA MESSAGES


! The TA (Traffic Announcement) function gives priority to TA alert messages. To operate, this function needs good reception of a radio station transmitting this type of message. When a traffic report is transmitted, the current audio source (Radio, CD, USB, ...) is interrupted automatically to play the TA message. Normal playback of the audio source resumes at the end of the transmission of the message.


1  Press **RADIO** to display the "FM / AM band" menu.



 
2  Select "**Guidance options**" then confirm.




 3  Activate or deactivate "**TA**" then confirm.



! The volume setting for TA messages can be adjusted only during the transmission of this type of alert.

 Activate or deactivate the function at any time by pressing the button. During a message, press the button to interrupt it.

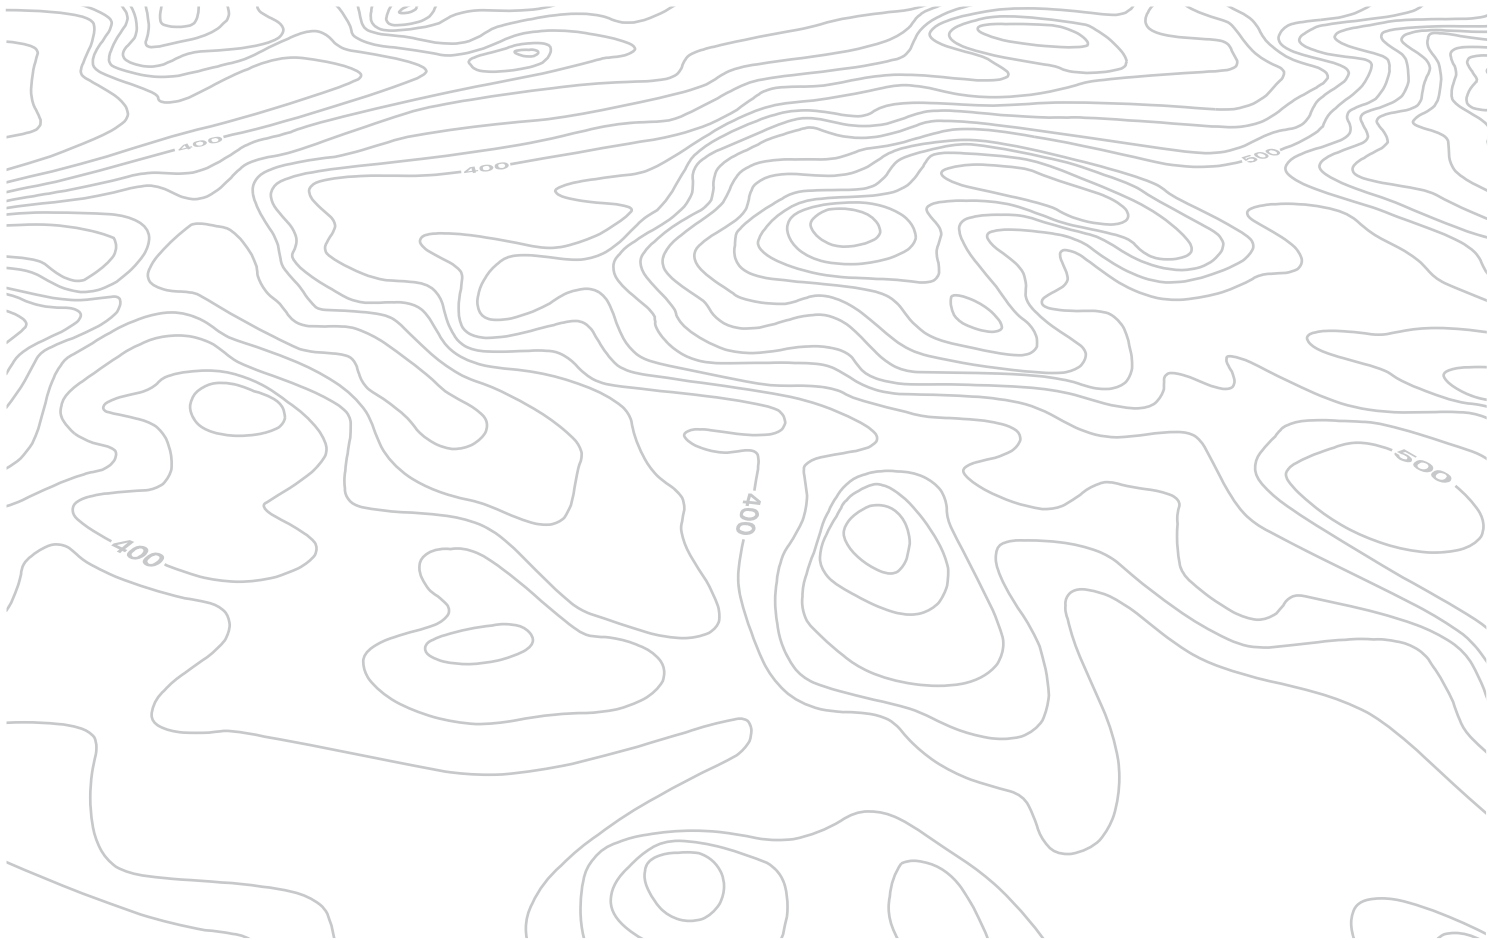

# 07 USING THE TELEPHONE

## Access to the "TELEPHONE" menu



Press **PHONE**.

**"Telephone"**

List of recent calls sent and received with the telephone connected to the system.

"Dial"  
"Directory of contacts"  
"Telephone options"  
"Bluetooth functions"  
"Hang up"  
(call in progress)

In the top bar of the permanent display



No telephone connected.



Telephone connected.



Incoming call.



Outgoing call.



Synchronisation of address book in progress.



Telephone call in progress.

To make a call, select a number in the list and confirm **"OK"** to start the call.



Connecting a different telephone deletes the list of recent calls.

Go from the list to the menu (left/right).




or



# 07 USING THE TELEPHONE

## PAIRING A BLUETOOTH TELEPHONE FIRST CONNECTION

 Visit [www.peugeot.co.uk](http://www.peugeot.co.uk) for more information (compatibility, additional help, ...).

1



 
Activate the telephone's Bluetooth function and ensure that it is "shown to all" (telephone configuration).



2




Press this button.



3



 Select "**Bluetooth functions**" and confirm.




!

For reasons of safety and because they require prolonged attention on the part of the driver, the operations for pairing the Bluetooth mobile telephone to the hands-free system of the audio unit must be carried out with the **vehicle stationary**.

4



 
Select "**Peripherals search**" and confirm.  
The list of peripherals detected is displayed. Wait until the "**Connect**" button is available.



5



 Select the name of the desired peripheral from the list of devices detected then select "**Connect**" and confirm.




6



The system offers to connect the telephone:

- in "**Hands-free mode**" (telephone only),
- in "**Audio**" mode (streaming: playing music files on the telephone),
- or "**All**" (for selection of both modes).

 Select "**OK**" and confirm.



# 07 USING THE TELEPHONE



The services available depend on the network, the SIM card and the compatibility of the Bluetooth telephone used. Check the telephone manual and with your network provider for details of the services available to you.



The "**Hands-free mode**" should be used in preference if "Streaming" is not desired.

 


The ability of the system to connect in only one mode depends on the telephone. The two modes may both connect by default.

7



Select a code for the connection then confirm "**OK**".



8

Enter the same code on the telephone then accept the connection.



Then accept automatic connection on the telephone to allow the telephone to reconnect automatically every time the vehicle is started.




 

 

 
 

 

 

 

Depending on the type of telephone, the system will ask you to accept or not the transfer of your contacts.



On return to the vehicle, the last telephone connected automatically reconnects, within around 30 seconds after switching on the ignition (Bluetooth activated and visible). To modify the automatic connection mode, remove the pairing and pair the telephone again with the desired mode.

# 07 USING THE TELEPHONE


 

 

 

 

 


 

 
## DIRECTORY / SYNCHRONIZING CONTACTS

<p><b>1</b></p>  <p>Press <b>PHONE</b> then select "<b>Contacts management</b>" and confirm.</p>		<p><b>2d</b></p>  <p>Select "<b>Import all the entries</b>" to import all the contacts in the telephone and save them in the system. Once imported, a contact remains visible whatever telephone is connected.</p>	
<p><b>2a</b></p>  <p>Select "<b>New contact</b>" to enter a new contact.</p>		<p><b>2e</b></p> <p>Selection "<b>Synchronization options</b>":</p> <ul style="list-style-type: none"><li>- No synchronization: only the contacts saved in the system (always present).</li><li>- Display telephone contacts: only the contacts saved in the telephone.</li><li>- Display SIM card contacts: only the contacts saved on the SIM card.</li><li>- Display all phone contacts: contacts on the SIM card and in the telephone.</li></ul>	
<p><b>2b</b></p>  <p>Select "<b>Sort by Name/First name</b>" to choose the order in which they appear.</p>		<p><b>2f</b></p>  <p>Select "<b>Contact mem. status</b>" to see the number of contacts saved in the system or imported, and the free memory.</p>	
<p><b>2c</b></p>  <p>Select "<b>Delete all contacts</b>" to delete the contacts saved in the system.</p>			



# 07 USING THE TELEPHONE

## MANAGING CONTACTS

<p>1</p>  <p>Press <b>PHONE</b> then select "<b>Directory of contacts</b>" and confirm.</p>		<p>5</p>  <p>Select "<b>Import</b>" to copy one contact to the system.</p>		
<p>2</p>  <p>Select the desired contact and confirm.</p>		<p>6</p>  <p>Select "<b>Delete</b>" to delete a contact saved in the system.</p>		
<p>3</p>  <p>Select "<b>Call</b>" to start the call.</p>		<p>7</p>  <p>Select <b>OK</b></p> <p>or</p>  <p>press the back button to exit this menu.</p>		
<p>4</p>  <p>Select "<b>Open</b>" to view an external contact or modify a contact saved in the system.</p>				
<p><b>i</b> It is necessary to import an external contact to modify the record. It will be saved in the system. It is not possible to modify or delete contacts in the telephone or the SIM card via the Bluetooth connection.</p>				

# 07 USING THE TELEPHONE

## MAKING A CALL

 
Use of the telephone is not recommended while driving. We recommended that you park safely or make use of the steering mounted controls.

### CALLING A NEW NUMBER

1




Press **PHONE** twice.



2



 
Select "**Dial**" then confirm.



3



 Dial the telephone number using the virtual keypad selecting each number in turn.  
Confirm "**OK**" to make the call.




### CALLING A CONTACT

1




Press **TEL** or twice on **PHONE**.

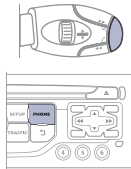

2




Select "**Directory of contacts**" then confirm.

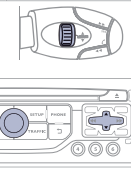

3




Select the desired contact and confirm.  
If access was via the **PHONE** button, select "**Call**" and confirm.

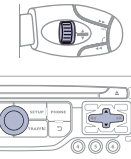

4



Select the number and confirm to start the call.

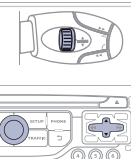


# 07 USING THE TELEPHONE

## CALLING A RECENTLY ENTERED NUMBER

1



 
Press **TEL**, select "Call list" and confirm,



or



 
press **PHONE** to display the calls log.



2



 Select the desired number and confirm.




To erase the calls log, press **PHONE** twice, select "**Phone functions**" and confirm then select "**Delete calls log**" and confirm.

## ENDING A CALL

 1a




Press **PHONE** then select "OK" to end the call.



1b



 Or make a long press on **TEL** at the steering mounted controls.



1c



 
Or make two short presses on **TEL** at the steering mounted controls.




1d



Or press the **MODE** button, as many times as necessary, until the telephone screen is displayed.



 Press "OK" to display the contextual menu then select "**Hang up**" and confirm.



# 07 USING THE TELEPHONE

## RECEIVING A CALL

 
1

An incoming call is announced by a ring and a superimposed display on the screen.

2



"Yes" to accept the call is selected by default.  
Press "**OK**" to accept the call.  
Select "**No**" and confirm to reject the call.



A short press on **TEL** accepts an incoming call.  
A long press on **TEL** rejects an incoming call.





# 07 USING THE TELEPHONE
  
## OPTIONS DURING A CALL \*


1



During a call, press the **MODE** button several times to select display of the telephone screen, then press **"OK"** to open the contextual menu.




Or make a short press on this button.

 

2a



 
Select **"Private mode"** and confirm to take the call on the handset.  
Or select **"Hands-free mode"** and confirm to take the call via the vehicle's speakers.



2b



 
Select **"Put call on hold"** and confirm to put the current call on hold.  
Or select **"Resume the call"** and confirm to resume the call on hold.



2c



 
Select **"DTMF ring tones"** to use the numerical keypad, so as to navigate through the menu of an interactive vocal server.



2d



  
Select **"Hang up"** to end the call.








 

 

 
it is possible to hold a 3-way conference call by making 2 calls in succession\*. Select **"Conference mode call"** in the contextual menu accessible using this button.




 

 

 

 

 
\* Depending on the compatibility of the phone and your service plan.


# 07 USING THE TELEPHONE

## MANAGING PAIRED TELEPHONES

<p>1</p>  <p>Press <b>PHONE</b> twice.</p>	
<p>2</p>  <p>Select <b>"Bluetooth functions"</b>.</p>	
<p>3</p>  <p>Select <b>"List of the paired peripherals"</b> and confirm.</p> <p>It is possible to:</p> <ul style="list-style-type: none"><li>- <b>"Connect"</b> or <b>"Disconnect"</b> the selected telephone,</li><li>- delete the pairing of the selected telephone.</li></ul> <p>It is also possible to select all pairings.</p>	

## CHANGING THE RING TONE

<p>1</p>  <p>Press <b>PHONE</b> twice.</p>	
<p>2</p>  <p>Select <b>"Phone functions"</b> and confirm.</p>	
<p>3</p>  <p>Select <b>"Ring options"</b> and confirm.</p>	
<p>4</p>  <p>You can adjust the volume and the type of ring tone.</p>	
<p>5</p>  <p>Select <b>"OK"</b> and confirm to save the changes.</p>	

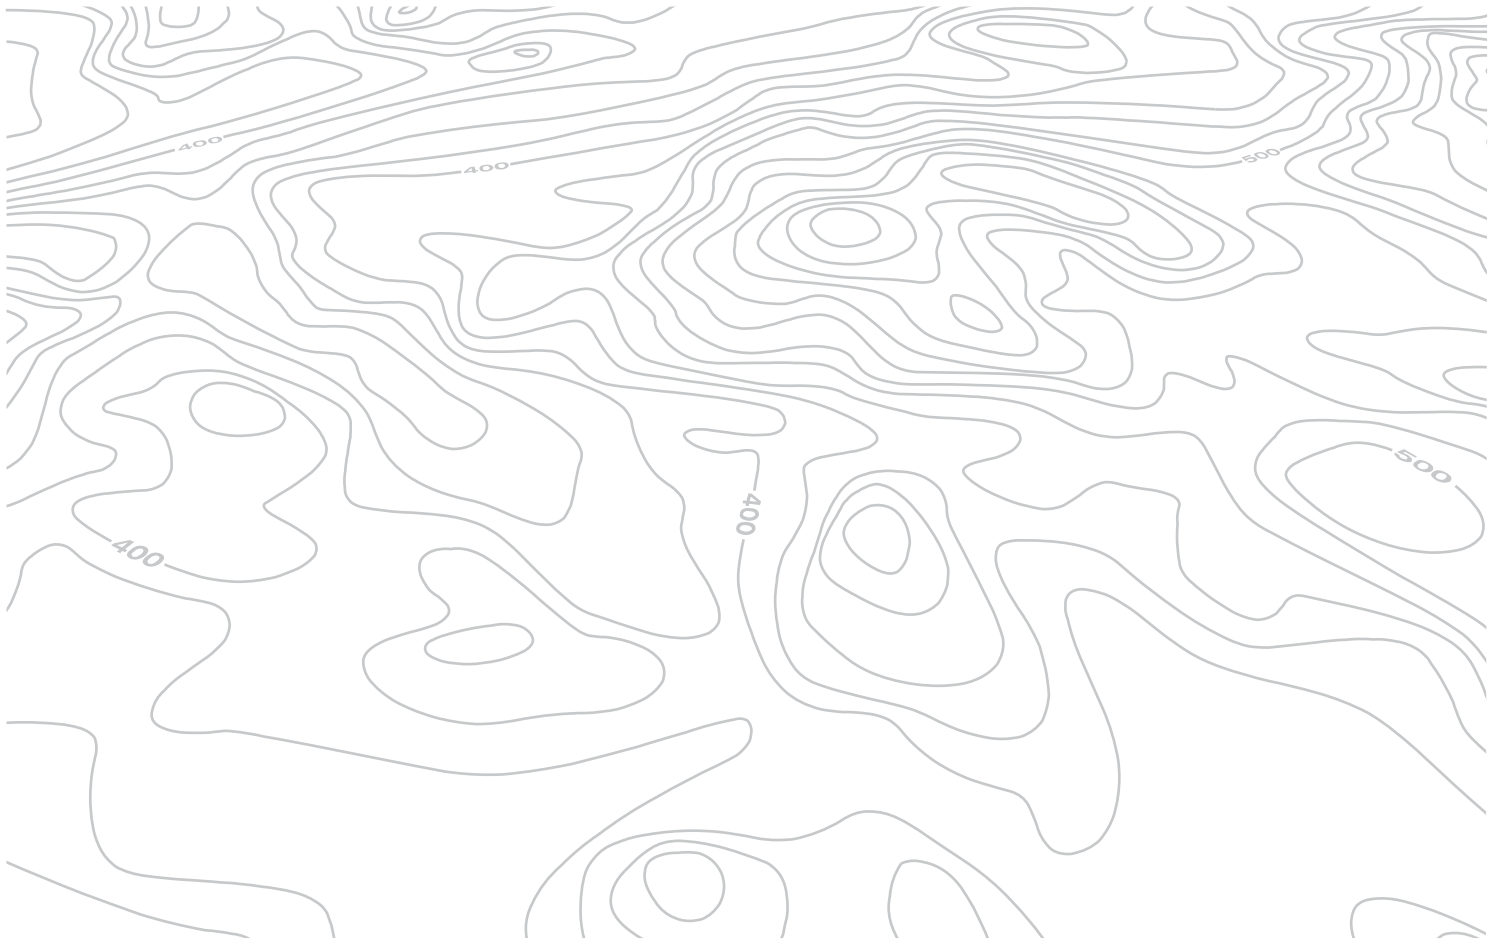

# 08 RADIO

## Access to the "RADIO" menu

 


Press **RADIO**.

**"FM / AM band"**

Alphabetical list of stations received.

"Change Waveband" ("AM / FM")  
"Guidance options" ("TA, RDS")  
"Audio settings" (see this section)  
"Update radio list"



Press **▲** or **▼** or use the rotary control to select the previous or next station in the list.

Go from the list to the menu (left/right).



or





# 08 RADIO

## CHANGING WAVEBAND

 


The external environment (hill, building, tunnel, underground car park...) may interfere with the reception, including in RDS station tracking mode. This phenomenon is a normal result of the way in which radio waves are transmitted and does not in any way indicate a fault with the audio system.

1




Press **RADIO** or **OK** to display the contextual menu.



2



 
Select **"Change waveband"**.



3



 Select **"AM / FM"** and confirm.



## SELECTING A STATION



 
The quality of reception is represented by the number of active waves in this symbol.

1a



**By alphabetical list**

Press **RADIO**, select the station of your choice and confirm.





1b



**By automatic frequency search**

  Press **◀** or **▶** for the automatic search for a lower or higher radio frequency. Or turn the thumb wheel at the steering mounted controls.




1c



**By manual frequency search**

 Press **▲** or **▼** to adjust the radio frequency step by step.




# 08 RADIO

## PRESETTING A STATION

1




 
After selecting a station, press one of the buttons on the numerical keypad for 2 seconds to preset the current station.  
An audible signal confirms that the station has been preset.



2



  Press the button on the numerical keypad to recall a preset station.  
Or press then turn the thumb wheel at the steering mounted controls.



## ACTIVATE / DEACTIVATE RDS

 


RDS, if activated, allows you to continue listening to the same station by automatic retuning to alternative frequencies. However, in certain conditions, coverage of an RDS station may not be assured throughout the entire country as radio stations do not cover 100 % of the territory. This explains the loss of reception of the station during a journey.

1




Press **RADIO**.



2



 
Select "**Guidance options**" then confirm.




3



 Activate or deactivate "**RDS**" then confirm.



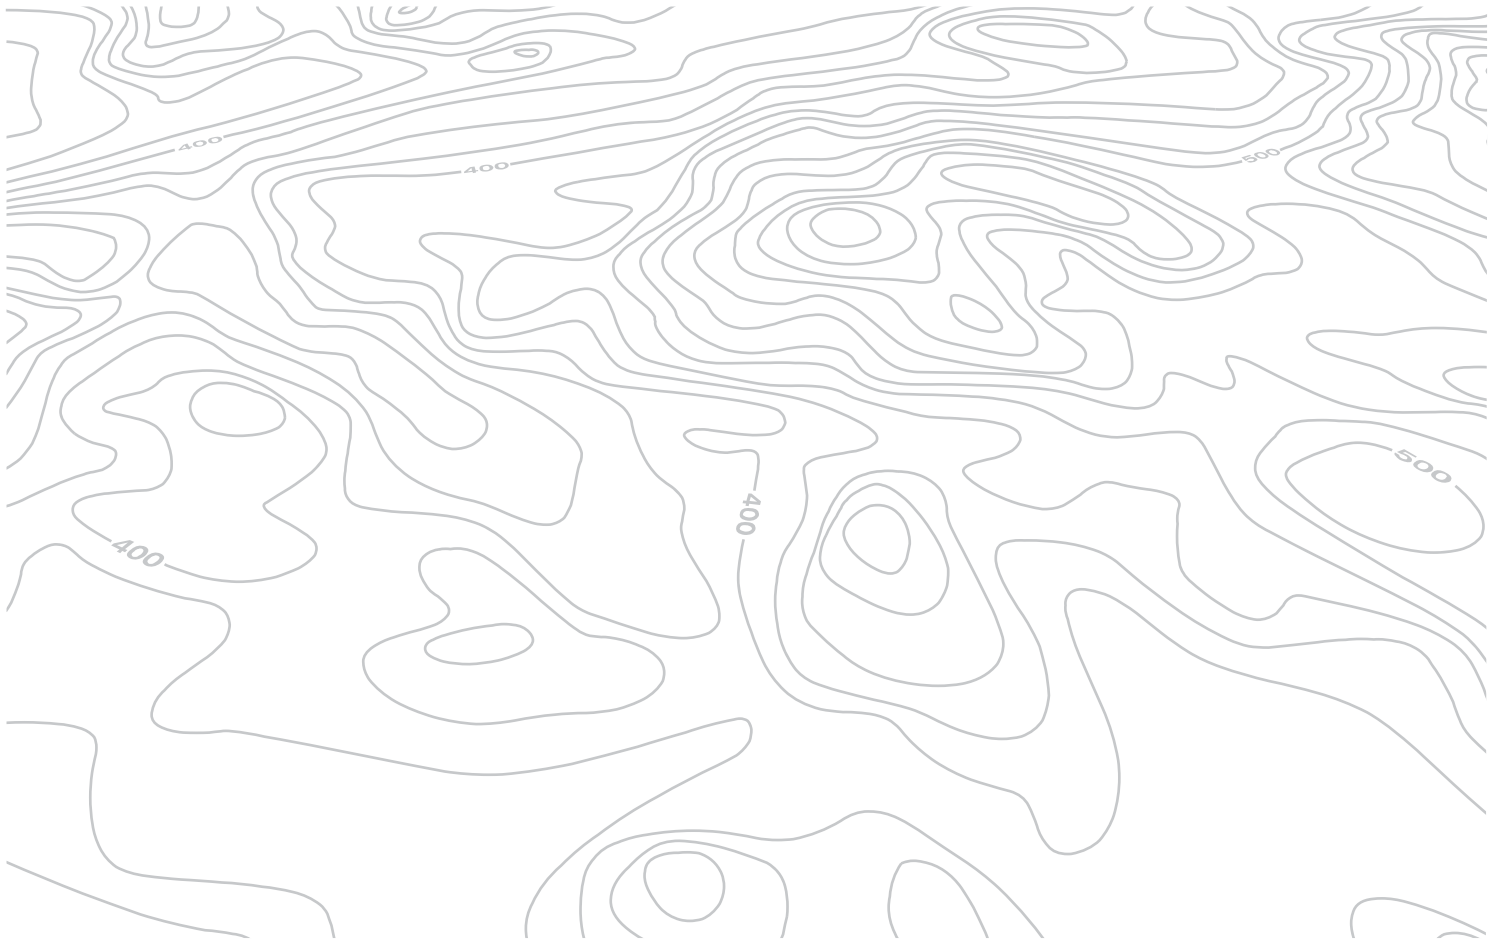


# 09 MUSIC MEDIA PLAYERS

Access to the "MUSIC MEDIA PLAYER" menu



Press **MUSIC**.

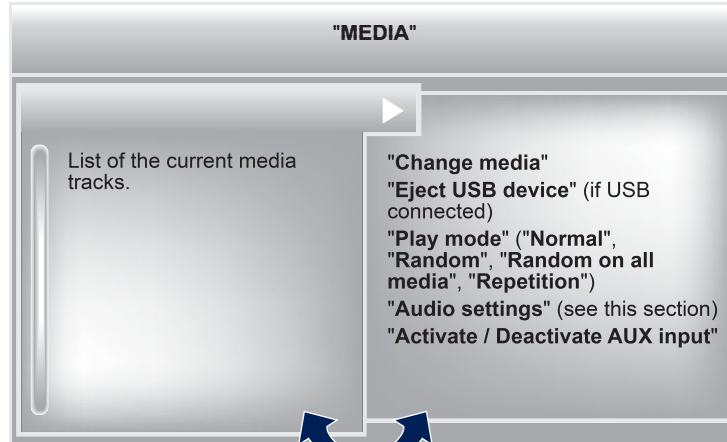

Go from the list to the menu (left/right).



or



# 09 MUSIC MEDIA PLAYERS

## CD, MP3 CD / USB PLAYER

### INFORMATION AND ADVICE



The audio equipment will only play audio files with ".wma, .aac, .flac, .ogg and .mp3" file extensions and with a bit rate of between 32 Kbps and 320 Kbps.

It also supports VBR (Variable Bit Rate) mode.

No other type of file (.mp4, .m3u...) can be played.

WMA files must be of the standard wma 9 type.

The sampling rates supported are 11, 22, 44 and 48 KHz.



It is advisable to restrict file names to 20 characters, without using of special characters (e.g.: " ? ; ù) to avoid any playing and displaying problems.



In order to be able to play a recorded CDR or CDRW, when recording it is preferable to select the ISO 9660 level 1, 2 or Joliet standard.

If the disc is recorded in another format it may not be played correctly.

It is recommended that the same recording standard is always used for an individual disc, with as low a speed as possible (4x maximum) for optimum sound quality.

In the particular case of a multi-session CD, the Joliet standard is recommended.



The system supports USB mass storage or iPod devices via the USB port (suitable cable not supplied).

If a partitioned USB memory key is connected to the system, only the first partition is recognised.

Control of the peripheral device is with the audio system controls.

The number of tracks is limited to 2000 maximum, 999 tracks per folder.

If the current consumption at the USB port exceeds 500 mA, the system goes into protection mode and deactivates the port.

Other peripherals, not recognised on connection, must be connected to the auxiliary socket using a Jack cable (not supplied).



In order to be read, a USB memory stick must be formatted FAT 16 or 32.



The system does not support the operation of an Apple® player and a USB memory stick connected at the same time.



It is recommended that official Apple® USB cables are used to ensure correct operation.

# 09 MUSIC MEDIA PLAYERS

## SOURCES



Insert the CD in the player, insert the USB memory stick in the USB player or connect the USB peripheral to the USB port using a suitable cable (not supplied)



The system builds playlists (in temporary memory), an operation which can take from a few seconds to several minutes at the first connection.

Reduce the number of non-music files and the number of folders to reduce the waiting time.

The playlists are updated every time the ignition is switched off or connection of a USB memory stick. However, the system memorises these lists and if they are not modified, the loading time will be shorter.


Play starts automatically after a period which depends on the capacity of the USB memory stick.



## SELECTION OF SOURCE




The **SOURCE** button on the steering mounted controls allows a direct change to the next media source.

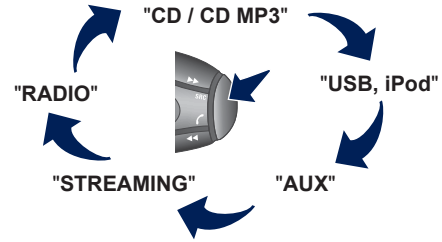

1



 
Press **MUSIC** to display the "MEDIA" menu.



2





 








Select "**Following media source**" and confirm.














Repeat the operation as many times as necessary to obtain the desired media source (except for radio which is accessible either with **SOURCE** or **RADIO**).

# 09 MUSIC MEDIA PLAYERS

## SELECTING A TRACK

Previous track.	 / 
Next track.	 / 
Previous folder.	
Next folder.	
Fast forward.	Long press  / 
Fast backward.	Long press  / 
Pause: long press on <b>SRC</b> .	

<b>MUSIC: List of USB or CD tracks or folders</b>	
Up or down in the list.	 /  / 
Confirm, next menu level.	 /  / 
Up one menu level.	 +  /  / 

# 09 MUSIC MEDIA PLAYERS

## CONNECTING APPLE® PLAYERS

**1** Connect the Apple® player to the USB port using a suitable cable (not supplied).  
Play starts automatically.

**2** Control is via the audio system.

**i** The classifications available are those of the portable device connected (artists / albums / genres / playlists / audiobooks / podcasts).

The default classification used is by artist. To modify the classification used, return to the first level of the menu then select the desired classification (playlists for example) and confirm to go down through the menu to the desired track.

The "Shuffle tracks" mode on an iPod® corresponds to the "Random" mode on the audio system.

The "Shuffle albums" mode on an iPod® corresponds to the "Random all" on the audio system.

"Shuffle tracks" is restored by default on each connection.

**i** The version of software in the audio system may not be compatible with the generation of your Apple® player.  
The list of devices compatible with software versions is available from PEUGEOT dealers.

## AUDIO STREAMING



Streaming allows audio files on your telephone to be played via the vehicle's speakers.

**1**

Connect the telephone: see "USING THE TELEPHONE".  
Select "**Audio**" or "**All**" profile.

**2**

If play does not start automatically, it may be necessary to start the audio playback from the telephone.

Control is from the peripheral device or by using the audio system buttons.



Once connected in streaming mode, the telephone is considered to be a media source.

It is recommended that you activate "**Repeat**" on the Bluetooth peripheral.



# 09 MUSIC MEDIA PLAYERS

## USING THE AUXILIARY INPUT (AUX) JACK AUDIO/USB CABLE NOT SUPPLIED

 
1

Connect the portable device (MP3, WMA player...) to the JACK auxiliary audio socket or USB port using a suitable cable.

2



Press **MUSIC** to display the "**MUSIC**" menu.




3



Select "**Activate / Deactivate AUX input**" and confirm.

 First adjust the volume of your portable device (to a high level). Then adjust the volume of your audio system.



!

Display and management of the controls are via the portable device.


# 10 CONFIGURATION
 
## DISPLAY CONFIGURATION

1




Press **SETUP** to display the "Configuration" menu.



2



 Select "**Display configuration**" and confirm.




3a



Select "**Choose colour**" and confirm to select the screen colour harmony and the map presentation mode:

 
- day mode,
- night mode,
- automatic day/night mode, according to whether the headlamps are on.



3b



 Select "**Adjust luminosity**" and confirm to adjust the screen brightness. Press "**OK**" to save the changes. The settings for day and night are independent.




# 10 CONFIGURATION

## SETTING THE DATE AND TIME

1



 
Press **SETUP** to display the "Configuration" menu.



2



 
Select "**Display configuration**" and confirm.



3



 Select "**Set date and time**" and confirm.




Select "**Synchronize the minutes with GPS**" so that setting the minutes is done automatically by satellite reception.


4




 Select the setting to adjust.  
Confirm by pressing **OK**, then adjust the setting and confirm again to save the modification.



 Adjust the settings one by one.  
Then select "**OK**" on the screen and confirm to save the settings.



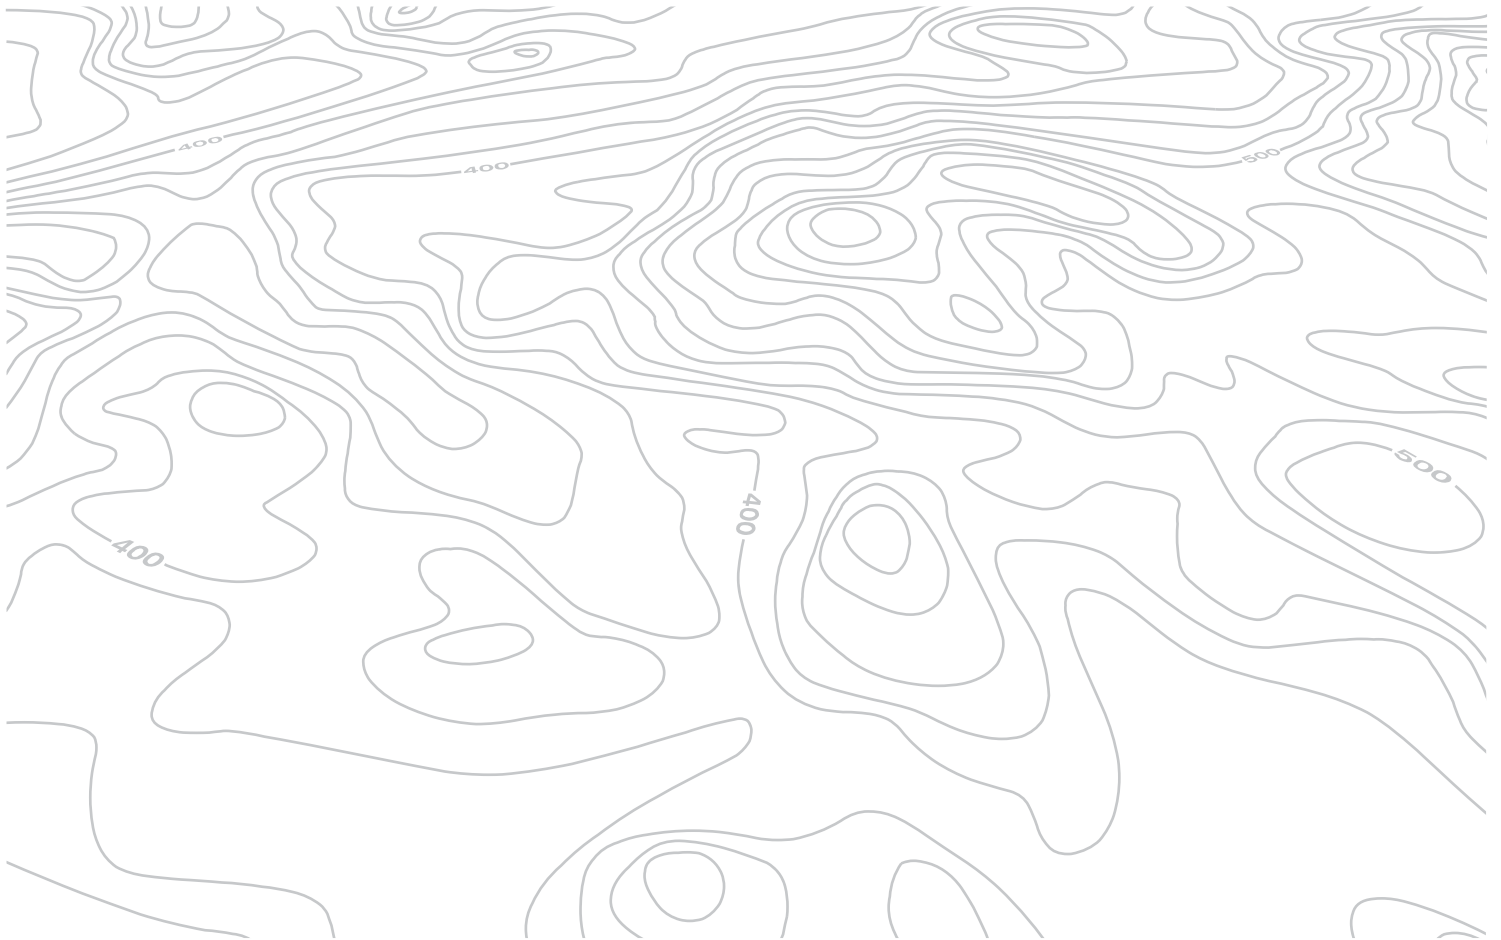

# 11 TRIP COMPUTER

 
## TRIP COMPUTER

1

Press the MODE button several times in succession until the trip computer is displayed.



- The "vehicle" tab:  
The range, the current fuel consumption and the distance remaining.
- The "1" (trip 1) tab with:  
The average speed, the average fuel consumption and the distance travelled calculated over route "1".
- The "2" (trip 2) tab with the same functions for a second route.



Each press of the button at the end of the wiper stalk displays the different trip computer information in succession, according to the screen.

## A FEW DEFINITIONS

i

**Range:** displays the distance which can be travelled with the remaining fuel detected in the tank, based on the average consumption over the last few miles (kilometres).

This displayed value may vary significantly following a change in the vehicle speed or the relief of the route.

When the range falls below 20 miles (30 km), dashes are displayed. After filling with at least 10 litres of fuel, the range is recalculated and is displayed when it exceeds 60 miles (100 km).

If, whilst driving, dashes are displayed continuously in place of the digits, contact a PEUGEOT dealer.

**Current fuel consumption:** only calculated and displayed above 20 mph (30 km/h).

**Average fuel consumption:** this is the average fuel consumption since the last trip computer zero reset.

**Distance travelled:** calculated since the last trip computer zero reset.

**Distance remaining to the destination:** calculated with reference to the final destination, entered by the user. If guidance is activated, the navigation system calculates it as a current value.

**Average speed:** this is the average speed calculated since the last trip computer zero reset (ignition on).

# 12 SCREEN MENU MAP



## MAIN FUNCTION

- 1 OPTION A
  - 2 option A1
  - 3 option A2
- 1 OPTION B...

## "Navigation - guidance" MENU

- 1 **Select destination**
  - 2 Enter an address
  - 2 Directory
  - 2 GPS coordinates
- 1 **Journey leg and route**
  - 2 Add a stage
    - 3 Enter an address
    - 3 Directory

- 3 Previous destinations
- 2 Order/delete journey legs
- 2 Divert route
- 2 Chosen destination

## Guidance options

- 1 Define calculation criteria
  - 2 Fastest route
  - 3 Shortest route
  - 3 Distance/Time
  - 3 With tolls
  - 3 With Ferry
  - 3 Traffic info
- 2 Set speech synthesis
- 2 Delete last destinations
- 2 Set parameters for risk areas

## Map management

- 1 Map orientation
  - 2 Vehicle direction
  - 3 North direction
  - 3 Perspective view
- 2 Map details
  - 2 Move the map
  - 2 Mapping and updating
  - 2 Description of risk areas database
- 1 **Stop / Restore guidance**
  - 2 Fastest route
  - 2 Shortest route
  - 2 Distance/Time
  - 2 With tolls
  - 2 With Ferry
  - 2 Traffic info

# 12 SCREEN MENU MAP

## "TRAFFIC" MENU

### 1 Geographic filter

2 Retain all the messages

2 Retain the messages

3 Around the vehicle

3 On the route

### 1 Select TMC station

2 Automatic TMC

2 Manual TMC

2 List of TMC stations

### 1 Display / Do not display messages

## Phone MENU

### 1 Dial

### 1 Directory of contacts

2 Call

2 Open

2 Import

2 Delete

2 Cancel

### 1 Contacts management

2 New contact

2 Sort by First name/Name

2 Delete all contacts

2 Import all the entries

2 Synchronization options

3 No synchronization

3 Display telephone contacts

3 Display SIM card contacts

3 Display all phone contacts

2 Contact mem. status

### 1 Phone functions

2 Ring options

2 Delete calls log

### 1 Bluetooth functions

2 List of the paired peripherals

3 Connect

3 Disconnect

3 Delete

3 Delete all

3 Cancel

2 Peripherals search

2 Rename radiotelephone

### 1 Hang up

# 12 SCREEN MENU MAP

## "RADIO" MENU

1 **Change Waveband**

2 AM / FM

1 **Guidance options**

2 TA

2 RDS

1 **Audio settings**

2 Equalizer

3 None

3 Classical

3 Jazz

3 Rock

3 Techno

3 Vocal

2 Bass

2 Treble

2 Loudness

3 Activated / Deactivated

2 Distribution

3 Driver

3 All passengers

2 Le-Ri balance

2 Fr-Re balance

2 Auto. Volume

3 Activated / Deactivated

1 **Update radio list**

## "MUSIC" MENU

1 **Change Media**

2 CD

2 BT Streaming

2 USB/iPod

2 AUX

1 **Read mode**

2 Normal

2 Random

2 Random on all media

2 Repetition

1 **Audio settings**

1 **Activate / Deactivate AUX input**



# 12 SCREEN MENU MAP

## "SETUP" MENU

### 1 Display configuration

2 Choose colour

3 Harmony

3 Cartography

4 Day mode

4 Night mode

4 Auto Day/Night

2 Adjust luminosity

2 Set date and time

2 Select units

### 1 Speech synthesis setting

2 Guidance instructions volume

2 Select male voice / Select female voice

### 1 Select language

2 Français

2 English

2 Italiano

2 Portuguese

2 Español

2 Deutsch

2 Nederlands

2 Turkish

2 Polski

2 Русский

### 1 Define vehicle parameters\*

2 Parking assistance

2 Operation of wipers

3 Engage rear wiper in REVERSE

2 Lighting configuration

3 Duration of guide-me home lighting

3 Directional headlamps

3 Mood lighting

3 Daytime running lamps

### 1 Trip computer

2 Alert log

2 Status of functions

\* The parameters vary according to the vehicle.

# FREQUENTLY ASKED QUESTIONS

The following table groups together the answers to the most frequently asked questions concerning your audio system.

QUESTION	ANSWER	SOLUTION
The route calculation is not successful.	The guidance criteria may conflict with the current location (exclusion of toll roads on a toll motorway).	Check the guidance criteria on the Navigation Menu, "Guidance options" \ "Define calculation criteria".
Select the POIs in the list of POIs.	The POIs do not appear.	The POIs have not been selected.
	The POIs have not been downloaded.	Download the POIs from the website: " <a href="http://peugeot.navigation.com">http://peugeot.navigation.com</a> ".
The risk areas audible warning does not work.	The audible warning is not active.	Activate audible warnings in the Guidance options menu, "Navigation - guidance", "Set parameters for risk areas".
The system does not suggest a detour around an incident on the route.	The guidance criteria do not take account of TMC messages.	Select the "Traffic info" function in the list of guidance criteria.
I receive a Risk area alert which is not on my route.	Other than guidance, the system announces all Risk areas positioned in a cone located in front of the vehicle. It may provide an alert for a Risk area located on nearby or parallel roads.	Zoom in on the map to view the exact position of the Risk area. Select "On the route" to no longer receive alerts other than guidance or to reduce the time for the announcement.

# FREQUENTLY ASKED QUESTIONS

QUESTION	ANSWER	SOLUTION
Certain traffic jams along the route are not indicated in real time.	On starting, it is several minutes before the system begins to receive the traffic information.	Wait until the traffic information is being received correctly (display of the traffic information icons on the map).
	The filters are too restrictive.	Modify the "Geographic filter" settings.
	In certain countries, only major routes (motorways...) are listed for the traffic information.	This phenomenon is normal. The system is dependent on the traffic information available.
The altitude is not displayed.	On starting, the initialisation of the GPS may take up to 3 minutes to receive more than 4 satellites correctly.	Wait until the system has started up completely. Check that there is a GPS coverage of at least 4 satellites (long press on the SETUP button, then select "GPS coverage").
	Depending on the geographical environment (tunnel...) or the weather, the conditions of reception of the GPS signal may vary.	This phenomenon is normal. The system is dependent on the GPS signal reception conditions.
I cannot connect my Bluetooth telephone.	The telephone's Bluetooth function may be switched off or the telephone may not be visible.	<ul style="list-style-type: none"> <li>- Check that your telephone's Bluetooth function is switched on.</li> <li>- Check in the telephone settings that it is "visible to all".</li> </ul>
	The Bluetooth telephone is not compatible with the system.	A list of compatible Bluetooth mobile telephones is available from the dealer network.
The volume of the telephone connected in Bluetooth mode is inaudible.	The volume depends both on the system and on the telephone.	Increase the volume of the audio system, to maximum if required, and increase the volume of the telephone if necessary.
	The ambient noise level has an influence on the quality of telephone communication.	Reduce the ambient noise level (close the windows, reduce the booster fan speed, slow down, ...).

# FREQUENTLY ASKED QUESTIONS

QUESTION	ANSWER	SOLUTION
Some contacts are duplicated in the list.	The options for synchronizing contacts are synchronizing the contacts on the SIM card, the contacts on the telephone, or both. When both synchronizations are selected, some contacts may be duplicated.	Select "Display SIM card contacts" or "Display telephone contacts".
Contacts are not shown in alphabetical order.	Some telephones offer display options. Depending on the settings chosen, contacts can be transferred in a specific order.	Modify the display setting in the telephone directory.
The system does not receive SMS text messages.	The Bluetooth mode does not permit sending SMS text messages to the system.	
The CD is ejected automatically or is not played by the player.	<p>The CD is inserted upside down, is unplayable, does not contain any audio data or contains an audio format which the player cannot play.</p> <p>Le CD has been recorded in a format that is not compatible with the player.</p> <p>The CD is protected by an anti-pirating protection system which is not recognised by the audio system.</p>	<ul style="list-style-type: none"> <li>- Check that the CD is inserted in the player the right way up.</li> <li>- Check the condition of the CD: the CD cannot be played if it is too damaged.</li> <li>- Check the content in the case of a recorded CD: refer to the advice in the "AUDIO" section.</li> <li>- The audio system's CD player does not play DVDs.</li> <li>- Some recorded CDs will not be played by the audio system because they are not of the correct quality.</li> </ul>
There is a long waiting period following the insertion of a CD or connection of a USB memory stick.	When a new medium is inserted, the system reads a certain amount of data (directory, title, artist, etc.). This may take from a few seconds to a few minutes.	This phenomenon is normal.
The CD player sound is poor.	The CD used is scratched or of poor quality.	Insert good quality CDs and store them in suitable conditions.
	The audio equipment settings (bass, treble, ambiances) are unsuitable.	Set the treble or bass level to 0, without selecting an ambience.

# FREQUENTLY ASKED QUESTIONS


QUESTION	ANSWER	SOLUTION
Some characters in the media information are not displayed correctly while playing.	The audio system does not display some types of characters.	Use standard characters to name tracks and folders.
Playing of streaming files does not start.	The peripheral device connected does not support automatic play.	Start the playback from the device.
The names of tracks and the track length are not displayed on the screen when streaming audio.	The Bluetooth profile does not allow the transfer of this information.	
The quality of reception of the radio station listened to gradually deteriorates or the stored stations do not function (no sound, 87.5 Mhz is displayed...).	The vehicle is too far from the transmitter used by the station listened to or there is no transmitter in the geographical area through which the vehicle is travelling.	Activate the "RDS" function by means of the short-cut menu to enable the system to check whether there is a more powerful transmitter in the geographical area.
	The environment (hills, buildings, tunnels, basement car parks...) block reception, including in RDS mode.	This phenomenon is normal and does not indicate a fault with the audio system.
	The aerial is absent or has been damaged (for example when going through a car wash or into an underground car park).	Have the aerial checked by a PEUGEOT dealer.
I cannot find some radio stations in the list of stations received.	The station is not received or its name has changed in the list.	
	Some radio stations send other information in place of their name (the title of the song for example).	
The name of the radio station changes.	The system interprets this information as the name of the station.	

# FREQUENTLY ASKED QUESTIONS


QUESTION	ANSWER	SOLUTION
In changing the setting of treble and bass the equalizer setting is deselected.	The selection of an equalizer setting imposes the balance settings. Modifying one without the other is not possible.	Modify the balance or equalizer settings to obtain the desired musical ambience.
In changing the equalizer setting, treble and bass return to zero.		
When changing the balance settings, the distribution setting is deselected.	The selection of a distribution setting imposes the balance settings. Modifying one without the other is not possible.	Modify the balance or distribution settings to obtain the desired musical ambience.
When changing an distribution setting, the balance setting is deselected.		
There is a difference in sound quality between the different audio sources (radio, CD...).	For optimum sound quality, the audio settings for Volume, Bass, Treble, Equalizer and Loudness can be adapted to the different sound sources, which may result in audible differences when changing source (radio, CD...).	Check that the audio settings for (Volume, Bass, Treble, Equalizer, Loudness) are adapted to the sources listened to. It is advisable to set the AUDIO functions (Bass, Treble, Fr-Re balance, Le-Ri balance) to the middle position, select the "None", musical ambience and set the loudness correction to the "Active" position in CD mode or to the "Inactive" position in radio mode.

# FREQUENTLY ASKED QUESTIONS

QUESTION	ANSWER	SOLUTION
With the engine off, the system switches off after a few minutes of use.	When the engine is switched off, the system's operating time depends on the battery charge. The switch-off is normal: the system switches to economy mode and switches off to prevent discharging of the vehicle's battery.	Start the vehicle's engine to increase the battery charge.
Playback of my USB memory stick starts only after a very long wait (around 2 to 3 minutes).	Some files supplied with the memory stick may greatly slow down access to reading the memory stick (multiplication by 10 of the catalogue time).	Delete the files supplied with the memory stick and limit the number of sub-folders in the file structure on the memory stick.
When I connect my iPhone as telephone and to the USB port at the same time, I am unable to play the music files.	When the iPhone connects automatically as a telephone, it forces the streaming function. The streaming function takes the place of the USB function which is then not useable, there is a period without sound of the track being played with Apple® players.	Disconnect and reconnect to the USB port (the USB function takes priority over streaming).

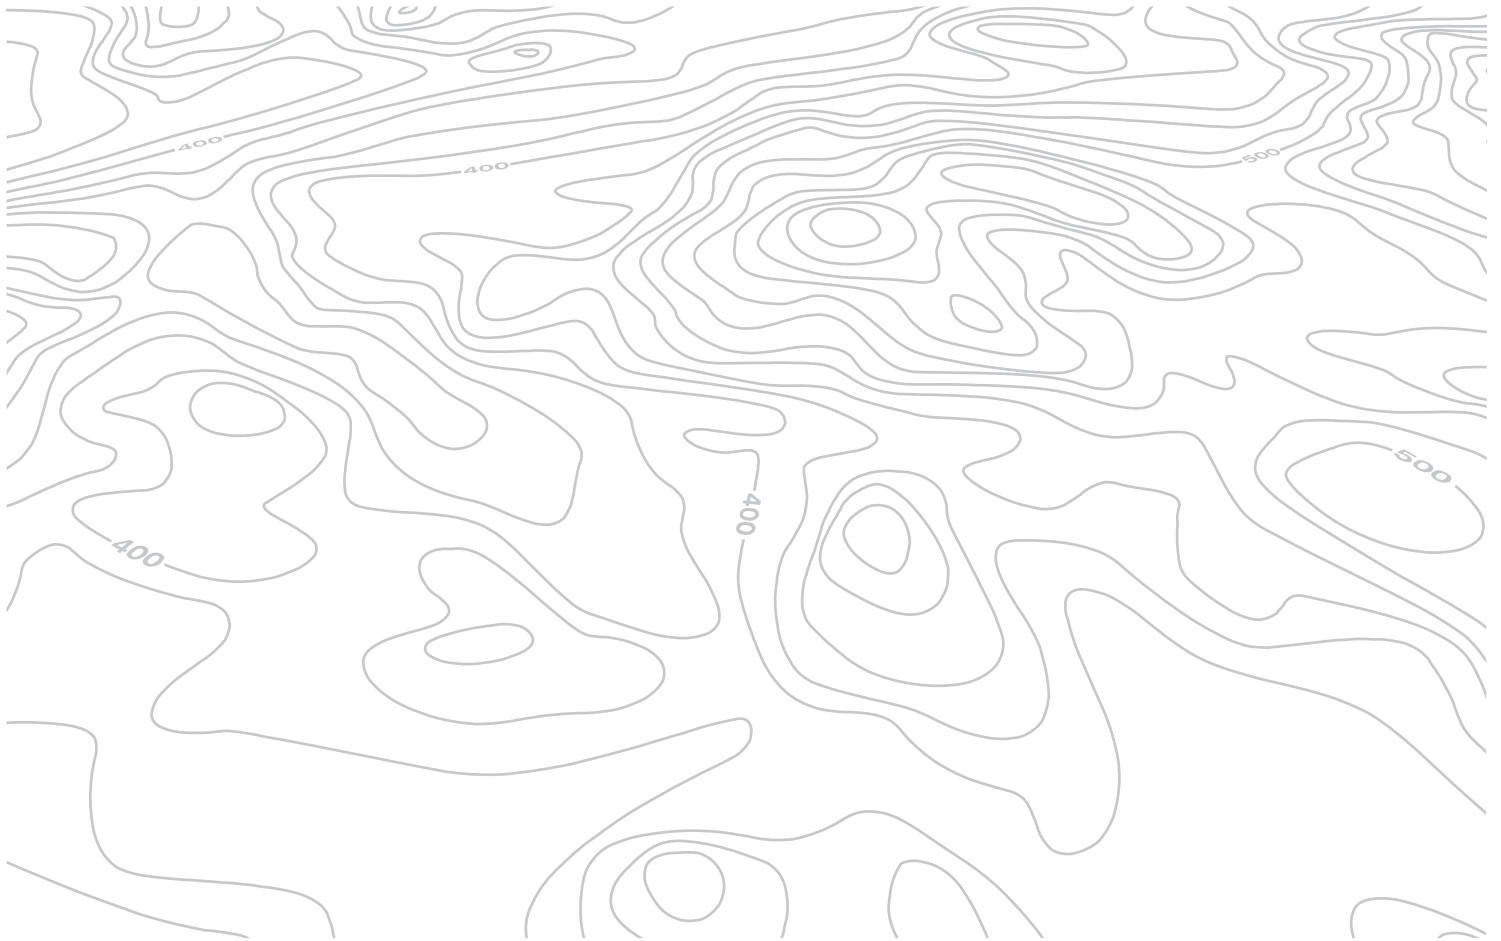



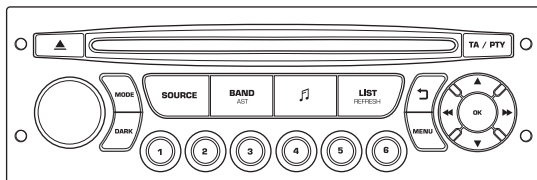

# Peugeot Connect Sound

## AUDIO SYSTEM / BLUETOOTH



Your Peugeot Connect Sound is coded in such a way that it will only operate in your vehicle.



For safety reasons, the driver must carry out operations which require prolonged attention while the vehicle is stationary.

When the engine is switched off and to prevent discharging of the battery, the audio equipment may switch off after a few minutes.

## CONTENTS

<b>01 First steps</b>	<b>p. 9.62</b>
<b>02 Steering mounted controls</b>	<b>p. 9.63</b>
<b>03 Main menu</b>	<b>p. 9.64</b>
<b>04 Audio</b>	<b>p. 9.65</b>
<b>05 Peugeot Connect USB</b>	<b>p. 9.68</b>
<b>06 Bluetooth</b>	<b>p. 9.71</b>
<b>07 Configuration</b>	<b>p. 9.74</b>
<b>08 Trip computer</b>	<b>p. 9.75</b>
<b>09 Screen menu map</b>	<b>p. 9.76</b>
<b>Frequently asked questions</b>	<b>p. 9.81</b>

# 01 FIRST STEPS

Select source:  
radio, audio CD / MP3 CD, USB,  
Jack connection, Streaming,  
AUX.

Select wavebands  
FM1, FM2, FMast and  
AM.

Audio settings: front/  
rear fader, left/right  
balance, bass/treble,  
loudness, audio  
ambiances.

Display the list of  
local stations.  
Long press: CD  
tracks or MP3 folders  
(CD / USB).

Abandon the current  
operation.

Eject CD.

Select the screen display  
mode:  
Date, audio functions, trip  
computer, telephone.

On/off, volume setting.

The DARK button changes the screen display  
for improved driving comfort at night.  
1<sup>st</sup> press: upper bar only illuminated.  
2<sup>nd</sup> press: black screen.  
3<sup>rd</sup> press: return to standard display.

Buttons 1 to 6 :  
Select a pre-set radio station.  
Long press: pre-set a station.


Display main menu.

TA (Traffic Announcements)  
on/off.  
Long press: PTY\* (radio  
Programme Type) mode.

Automatic frequency search  
down/up.  
Select previous/next CD,  
MP3 or USB track.

Confirm.

Select next frequency down/up.  
Select previous/next MP3 folder.  
Select previous/next folder / genre /  
artist / playlist (USB).

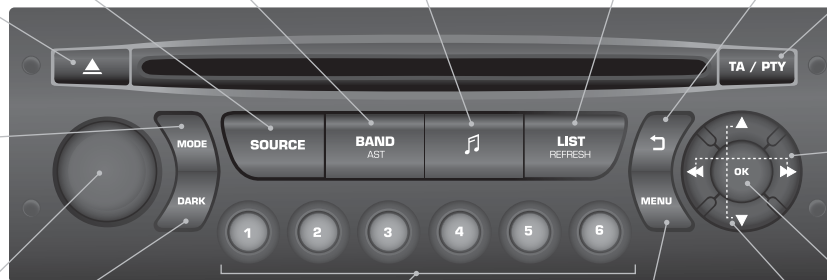

\* Available according to version.

## 02 STEERING MOUNTED CONTROLS

Radio: select the previous/next pre-set station.

USB: select genre / artist / folder from the classification list.


Select the previous/next item in a menu.

Radio: automatic search for a higher frequency.

CD / MP3 / USB: selection of the next track.

CD / USB: continuous press: fast forwards play.

Move in the list.

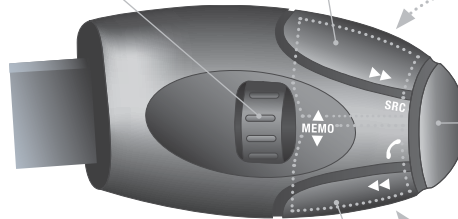

Volume increase.

Change audio source.

Confirm a selection.

Call/end call on the telephone.

Press for more than 2 seconds:  
telephone main menu.

Mute: press the volume increase and decrease buttons simultaneously.  
The sound is restored by pressing one of the two volume buttons.

Volume decrease.

Radio: automatic search for a lower frequency.

CD / MP3 / USB: selection of the previous track.

CD / USB: continuous press: fast reverse.


Move in the list.

# 03 MAIN MENU

> MONOCHROME SCREEN C

**AUDIO FUNCTIONS:**  
radio, CD, USB, options.

**TELEPHONE:**  
Bluetooth hands-free,  
pairing, management  
of a call.

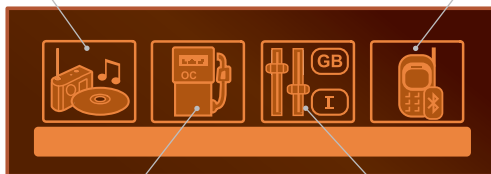

**TRIP COMPUTER:** entering  
of distances, alerts, status of  
functions.

**PERSONALISATION-  
CONFIGURATION:**  
vehicle parameters,  
display, languages.

> MONOCHROME SCREEN A


 



 

 





For a detailed global view of the menus available, refer to the "Screen menu map" in this section.

# 04 AUDIO

 
 

 

 

 




## RADIO SELECTING A STATION

1		Press the SOURCE button several times in succession and select the radio.	
2		Press the BAND AST button to select a waveband: FM1, FM2, FMast, AM.	
3		Briefly press one of the buttons to carry out an automatic search of the radio stations.	
4		Press one of the buttons to carry out a manual search up / down for radio frequencies.	
		Press the LIST REFRESH button to display the list of stations received locally (30 stations maximum). To update this list, press for more than two seconds.	

The external environment (hills, buildings, tunnels, basement car parks, ...) may block reception, including in RDS mode. This is a normal effect of the way in which radio waves are transmitted and does not indicate any failure of the audio system.

## RDS

1		Press the MENU button.	
2		Select AUDIO FUNCTIONS then press OK.	
3		Select the FM WAVEBAND PREFERENCES function then press OK.	
4		Select ACTIVATE RDS then press OK. RDS appears on the screen.	
		In radio mode, press OK directly to activate / deactivate RDS mode.	
		The RDS, if displayed, enables you to continue listening to the same station by automatic retuning to alternative frequencies. However, in certain conditions, coverage of an RDS station may not be assured throughout the country as radio stations do not cover 100 % of the territory. Under conditions of very weak reception, the system may change to a regional station.	

# 04 AUDIO

## RECEIVING TA MESSAGES



 
The TA (Traffic Announcement) function gives priority to TA alert messages. To operate, this function needs good reception of a radio station transmitting this type of message. When a traffic report is transmitted, the current audio source (Radio, CD, ...) is interrupted automatically to play the TA message. Normal playback of the audio source resumes at the end of the transmission of the message.

1

TA / PTY



Press the TA button to activate or deactivate traffic messages.



## CD PLAYING A CD



Insert circular compact discs only.

 
Some anti-pirating systems, on original discs or CDs copied using a personal recorder, may cause faults which are no reflection on the quality of the original player.

Without pressing the EJECT button, insert a CD in the player, play begins automatically.

1




To play a disc which has already been inserted, press the SOURCE button several times in succession and select CD.



2



 Press one of the buttons to select a track on the CD.




Press the LIST REFRESH button to display the list of tracks on the CD.

3



 Press and hold one of the buttons for fast forwards or fast backwards.



# 04 AUDIO

## MP3 CD PLAYING AN MP3 COMPILATION



Insert an MP3 compilation in the player.

The audio equipment searches for all of the music tracks, which may take anything between a few seconds and several tens of seconds, before play begins.



 
On a single disc, the CD player can read up to 255 MP3 files spread over 8 folder levels. However, it is advisable to keep to a limit of two levels to reduce the access time before the CD is played.

While the CD is being played, the folder structure is not followed. All of the files are displayed on a single level.

1



To play a disc which has already been inserted, press the SOURCE button several times in succession and select CD.




2



Press one of the buttons to select a folder on the CD.

 Press one of the buttons to select a track on the CD.



Press the LIST REFRESH button to display the list of directories of the MP3 compilation.

3



Press and hold one of the buttons for fast forward or backward play.



## MP3 CD INFORMATION AND ADVICE



The MP3 format, an abbreviation of MPEG 1.2 & 2.5 Audio Layer 3, is an audio compression standard which permits the recording of several tens of music files on a single disc.



In order to be able to play a recorded CDR or CDRW, when recording, the ISO 9660 level 1.2 or Joliet file format is recommended.

If the disc is recorded in another format, it may not be played correctly.

It is recommended that the same recording format is always used for an individual disc, with as low a speed as possible (4x maximum) for optimum sound quality.

In the particular case of a multi-session CD, the Joliet format is recommended.



The audio system will only play files with the extension ".mp3" with a sampling rate of 22.05 KHz or 44.1 KHz. No other type of file (.wma, .mp4, .m3u...) can be played.



It is advisable to restrict file names to 20 characters without using special characters (e.g. " ? ; ù) to avoid any playing or displaying problems.



Empty CDs are not recognised and may damage the system.

# 05 USB PLAYER

## USING THE PEUGEOT CONNECT USB

The list of compatible equipment and the compression rates supported are available from PEUGEOT dealers.

1

This unit consists of a USB port and an auxiliary Jack socket\*. The audio files are transmitted from a portable device - digital player or a USB memory stick - to your Peugeot Connect Sound (RD5) and heard via the vehicle's speakers.



2

USB memory stick (1.1, 1.2 and 2.0) or Apple® player of generation 5 or later:

- USB memory sticks should be formatted FAT or FAT 32 (NTFS not supported),
- the Apple® player lead is essential,
- navigation through the file database is also possible by means of the steering mounted controls.



3

Other Apple® players of earlier generations and players using the MTP protocol\*:

 
- play via Jack-Jack lead only (not supplied),
- navigation through the file database is from the portable device.



## CONNECTING A USB MEMORY STICK

1

Connect the memory stick to the port, directly or using a lead. If the audio equipment is switched on, the USB source is detected as soon as it is connected. Play begins automatically after a delay which depends on the capacity of the USB memory stick.



The file formats supported are .mp3 (mpeg1 layer 3 only) and .wma (standard 9 only, 128 kbits/sec compression).

Certain playlist formats are supported (.m3u, ...)

On reconnection of the previous memory stick used, play is resumed automatically with the last track played.

!

The system puts together playlists (temporary memory) created over a period which depends on the capacity of the USB device. The other sources are available during this time.

The playlists are updated each time the ignition is switched off or each time a USB memory stick is connected.

When connecting for the first time, the classification suggested is by folder. When you reconnect, the classification selected previously is retained.

\* According to vehicle.



# 05 USB PLAYER

 
## USING THE PEUGEOT CONNECT USB

2


Press and hold LIST to display the different classifications.  
Select by Folder / Artist / Genre / Playlist, press OK to select the classification required, then press OK again to confirm.



- by Folder: all folders containing audio files recognised on the peripheral device.
- by Artist: all of the artist names defined in the ID3 Tags, classified in alphabetical order.
- by Genre: all of the genres defined in the ID3 Tags.
- by Playlist: in accordance with the playlists recorded on the USB device.



 
Press LIST briefly to display the previously selected classification.  
Navigate through the list using the left/right and up/down buttons.  
Confirm the selection by pressing OK.



3



 
Press one of these buttons to gain access to the previous / next track on the classification list currently being played.  
Press and hold one of the buttons for fast forward or backward play.



4



 Press one of these buttons to gain access to the previous / next Genre, Folder, Artist or Playlist on the classification list currently being played.



## CONNECTING AN APPLE® PLAYER VIA THE USB PORT

1

The lists available are Artist, Genre and Playlist (as defined in the Apple® player).  
Selection and Navigation are described in steps 1 to 4 above.



Do not connect a hard disk or USB connection device other than audio equipment to the USB port. This could damage your installation.

# 05 USB PLAYER

## USING THE AUXILIARY INPUT (AUX)

JACK socket or USB port (according to vehicle)



The auxiliary input, JACK or USB, allows the connection of a portable device (MP3 player...).



Do not connect a device to both the JACK socket and the USB port at the same time.

1

 
Connect the portable device (MP3 player...) to the JACK socket or to the USB port, using a suitable cable (not supplied).



2



Press the SOURCE button several times in succession and select AUX.



## ADJUSTING THE VOLUME OF THE AUXILIARY SOURCE

1

 
First adjust the volume of your portable device.



2



Then adjust the volume of your audio system.



The display and control is via the portable device.



# 06 BLUETOOTH



## BLUETOOTH TELEPHONE SCREEN C

(Available according to model and version)

The services offered depend on the network, the SIM card and the compatibility of the Bluetooth equipment used.

Consult your telephone's manual and your operator to find out which services are available to you.

### PAIRING A TELEPHONE / FIRST CONNECTION




 
**!** For safety reasons and because they require prolonged attention on the part of the driver, the operations for pairing of the Bluetooth mobile telephone with the Bluetooth hands-free system of your audio equipment must be carried out with the vehicle stationary and the ignition on.


**☀** Go to [www.peugeot.co.uk](http://www.peugeot.co.uk) for more information (compatibility, more help, ...).

**1** Activate the telephone's Bluetooth function and ensure that it is "visible to all" (telephone configuration).

 


**2**  Press the MENU button.



**3**  In the menu, select:

- Bluetooth telephone function - Audio
- Bluetooth configuration
- Perform a Bluetooth search



**4** A window is displayed with a message that a search is in progress.

**5** The first 4 telephones recognised are displayed in this window.

**!** The TELEPHONE menu permits access to the following functions in particular: Directory\*, Call list, Pairing management.

\* If your telephone is fully compatible.

**6** Select the telephone to be connected from the list. Only one telephone can be connected at a time.

**7** A virtual keypad is displayed in the screen: enter a code with at least 4 digits. Confirm by pressing OK.



**8** A message is displayed in the screen of the telephone chosen. To accept the pairing, enter the same code on the telephone, then confirm with OK.

If pairing fails, the number of attempts is not limited.



**9** A message that the pairing has been successful appears in the screen.


**i** The automatic connection authorised is only active after the telephone has been configured. The directory and the call list can be accessed after the synchronisation period.


# 06 BLUETOOTH


 
## RECEIVING A CALL

- 1 An incoming call is announced by a ring and a superimposed display in the vehicle's screen.

- 2  Select the YES tab on the display using the buttons and confirm by pressing OK.




Press this button to accept the call.



## MAKING A CALL

- 1 From the Bluetooth telephone function Audio menu, select Manage the telephone call then Call, Call list or Directory.

- 2 Press this button for more than two seconds for access to your directory, then navigate with the thumb wheel.  
Or  
To dial a number, use your telephone's keypad, with the vehicle stationary.

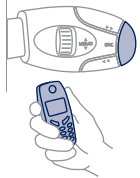

## ENDING A CALL

- 1 During a call, press this button for more than 2 seconds.  
Confirm with OK to end the call.



# 06 BLUETOOTH



## BLUETOOTH AUDIO STREAMING\*

!

Wireless transmission of the telephone's music files via the audio equipment. The telephone must be able to manage the appropriate Bluetooth profiles (Profiles A2DP / AVRCP).

1

Initiate the pairing between the telephone and the vehicle. This pairing can be initiated from the vehicle's telephone function menu or via the telephone's keypad. See steps 1 to 9 on the previous pages. During the pairing phase, the vehicle must be stationary with the key in the ignition.



 
2

Select the telephone to be connected from the telephone function menu.  
The audio system connects to a newly paired telephone automatically.

3



Activate the streaming source by pressing the SOURCE button\*\*. The tracks to be played can be controlled as usual via the buttons on the audio system control panel and the steering mounted controls\*\*\*. The contextual information can be displayed on the screen.




 

 


 

 

 

 

 

 
\* Depending on the compatibility of the telephone.

\*\* In certain cases, playing of the Audio files must be initiated from the keypad.

\*\*\* If the telephone supports the function.

# 07 CONFIGURATION

## SETTING THE DATE AND TIME SCREEN C

<p>1</p>  <p>Press the MENU button.</p>		<p>5</p>  <p>Press to confirm the selection.</p>	
<p>2</p>  <p>Using the arrows, select PERSONALISATION CONFIGURATION.</p> 		<p>6</p>  <p>Using the arrows, select ADJUST DATE AND TIME.</p>	
<p>3</p>  <p>Press to confirm the selection.</p>		<p>7</p>  <p>Press to confirm the selection.</p>	
<p>4</p>  <p>Using the arrows, select DISPLAY CONFIGURATION.</p>		<p>8</p>  <p>Adjust the settings one by one confirming by pressing the OK button. Next select the OK tab on the screen then confirm.</p>	

# 08 TRIP COMPUTER

## VEHICLE DIAGNOSTICS



Each press of the button, located at the end of the wiper stalk, displays the different trip computer information in succession, depending on the screen.



- the "vehicle" tab with:
  - the range, the current fuel consumption and the distance remaining to the destination,
- the "1" tab (trip 1) with:
  - the average speed, the average consumption and the distance travelled calculated over trip "1",
- the "2" tab (trip 2) with the same information for a second trip.



### Zero reset

When the required trip is displayed, press the control for more than two seconds.

## A FEW DEFINITIONS

**Range:** displays the distance which can be travelled with the remaining fuel detected in the tank, based on the average consumption over the last few miles (kilometres).

This displayed value may vary significantly following a change in the vehicle speed or the relief of the route.

When the range falls below 20 miles (30 km), dashes are displayed. After filling with at least 10 litres of fuel, the range is recalculated and is displayed when it exceeds 60 miles (100 km).

If, whilst driving, dashes are displayed continuously in place of the digits, contact a PEUGEOT dealer.

**Current fuel consumption:** only calculated and displayed above 20 mph (30 km/h).

**Average fuel consumption:** this is the average fuel consumption since the last trip computer zero reset.

**Distance travelled:** calculated since the last trip computer zero reset.

**Distance remaining to the destination:** calculated with reference to the final destination, entered by the user. If guidance is activated, the navigation system calculates it as a current value.

**Average speed:** this is the average speed calculated since the last trip computer zero reset (ignition on).

# 09 SCREEN MENU MAP

01:17 20°  
27 MAY 2013

## MONOCHROME A



### 1 MAIN FUNCTION

- 2 OPTION A
- 3 OPTION A1
- 3 OPTION A2
- 2 OPTION B...

### 1 RADIO-CD

- 2 RDS SEARCH
- 2 REG MODE
- 2 CD REPEAT
- 2 RANDOM PLAY

### 1 VEHICLE CONFIG\*

- 2 REV WIPE ACT
- 2 GUIDE LAMPS

\* The parameters vary according to vehicle.

### 1 OPTIONS

- 2 DIAGNOSTICS
- 3 CONSULT
- 3 ABANDON



# 09 SCREEN MENU MAP

01:17 20°  
27 MAR 2013  
0 000

## 1 UNITS

2 TEMPERATURE: °CELSIUS / °FAHRENHEIT

2 FUEL CONSUMPTION: KM/L -  
L/100 - MPG

## 1 DISPLAY ADJUST

2 YEAR

2 MONTH

2 DATE

2 HOUR

2 MINUTES

2 12 H/24 H MODE

## 1 LANGUAGE

2 FRANCAIS

2 ITALIANO

2 NEDERLANDS

2 PORTUGUES

2 PORTUGUES-BRASIL

2 DEUTSCH

2 ENGLISH

2 ESPANOL

# 09 SCREEN MENU MAP



## MONOCHROME C



Press the OK dial for access to short-cut menus according to the display on the screen:



### RADIO

- 1 activate / deactivate RDS
- 1 activate / deactivate REG mode
- 1 activate / deactivate radiotext

### CD / MP3 CD

- 1 activate / deactivate Intro
- 1 activate / deactivate track repeat (the entire current CD for CD, the entire current folder for MP3 CD)
- 1 activate / deactivate random play (the entire current CD for CD, the entire current folder for MP3 CD)

### USB

- 1 activate / deactivate track repeat (of the current folder / artist / genre / playlist)
- 1 activate / deactivate random play (of the current folder / artist / genre / playlist)

# 09 SCREEN MENU MAP



## MONOCHROME C

Pressing the MENU button displays:



### 1 AUDIO FUNCTIONS

#### 2 FM BAND PREFERENCES

##### 3 alternative frequencies (RDS)

4 activate / deactivate

##### 3 regional mode (REG)

4 activate / deactivate

##### 3 radio-text information (RDTXT)

4 activate / deactivate

#### 2 PLAY MODES

##### 3 album repeat (RPT)

4 activate / deactivate

##### 3 track random play (RDM)

4 activate / deactivate



### 1 TRIP COMPUTER

#### 2 ENTER DISTANCE TO DESTINATION

3 Distance: x miles

#### 2 ALERT LOG

3 Diagnostics

#### 2 STATUS OF THE FUNCTIONS\*

3 Functions activated or deactivated

\* The parameters vary according to vehicle.

# 09 SCREEN MENU MAP



## PERSONALISATION-CONFIGURATION

1

### DEFINE THE VEHICLE PARAMETERS\*

2

### DISPLAY CONFIGURATION

2

#### video brightness adjustment

3

normal video

4

inverse video

4

brightness (- +) adjustment

4

#### date and time adjustment

3

day/month/year adjustment

4

hour/minute adjustment

4

choice of 12 h / 24 h mode

4

#### choice of units

3

l/100 km - mpg - km/l

4

°Celsius / °Fahrenheit

4

#### CHOICE OF LANGUAGE

2



## BLUETOOTH TELEPHONE

1

### BLUETOOTH CONFIGURATION

2

Connect/Disconnect a device

3

Telephone function

3

### Audio Streaming function

3

Consult the paired device

4

Delete a paired device

4

Perform a Bluetooth search

4

### CALL

2

#### Calls list

3

Directory

4

### MANAGE THE TELEPHONE CALL

2

Terminate the current call

3

Activate private mode

3


\* The parameters vary according to vehicle.

# FREQUENTLY ASKED QUESTIONS

QUESTION	ANSWER	SOLUTION
There is a difference in sound quality between the different audio sources (radio, CD...).	For optimum sound quality, the audio settings (Volume, Bass, Treble, Ambience, Loudness) can be adapted to the different sound sources, which may result in audible differences when changing source (radio, CD...).	Check that the audio settings (Volume, Bass, Treble, Ambience, Loudness) are adapted to the sources listened to. It is advisable to set the AUDIO functions (Bass, Treble, Front-Rear Balance, Left-Right Balance) to the middle position, select the musical ambience "None" and set the loudness correction to the "Active" position in CD mode or to the "Inactive" position in radio mode.
The CD is ejected automatically or is not played by the player.	The CD is inserted upside down, is unplayable, does not contain any audio data or contains an audio format which the player cannot play. The CD is protected by an anti-pirating protection system which is not recognised by the audio equipment.	<ul style="list-style-type: none"> <li>- Check that the CD is inserted in the player the right way up.</li> <li>- Check the condition of the CD: the CD cannot be played if it is too damaged.</li> <li>- Check the content in the case of a recorded CD: consult the advice in the "Audio" section.</li> <li>- The audio equipment's CD player does not play DVDs.</li> <li>- Due to their quality level, certain writeable CDs will not be played by the audio system.</li> </ul>
The message "USB peripheral error" is displayed on the screen. The Bluetooth connection is cut.	The battery of the peripheral may not be sufficiently charged.  The USB memory stick is not recognised. The memory stick may be corrupt.	Recharge the battery of the peripheral device.  Reformat the memory stick.
The CD player sound is poor.	The CD used is scratched or of poor quality.  The audio equipment settings (bass, treble, ambiences) are unsuitable.	Insert good quality CDs and store them in suitable conditions.  Set the treble or bass level to 0, without selecting an ambience.


QUESTION	ANSWER	SOLUTION
The stored stations do not function (no sound, 87.5 Mhz is displayed...).	An incorrect waveband is selected.	Press the BAND AST button to return to the waveband (AM, FM1, FM2, FMAST) on which the stations are stored.
The traffic announcement (TA) is displayed. I do not receive any traffic information.	The radio station is not part of the regional traffic information network.	Tune to a radio station which broadcasts traffic information.
The quality of reception of the radio station listened to gradually deteriorates or the stored stations do not function (no sound, 87.5 Mhz is displayed...).	The vehicle is too far from the transmitter used by the station listened to or there is no transmitter in the geographical area through which the vehicle is travelling.	Activate the RDS function to enable the system to check whether there is a more powerful transmitter in the geographical area.
	The environment (hills, buildings, tunnels, basement car parks...) block reception, including in RDS mode.	This phenomenon is normal and does not indicate a failure of the audio equipment.
	The aerial is absent or has been damaged (for example when going through a car wash or into an underground car park).	Have the aerial checked by a PEUGEOT dealer.
Sound cut-outs of 1 to 2 seconds in radio mode.	During this brief sound cut-out, the RDS searches for any frequency permitting better reception of the station.	Deactivate the RDS function if the phenomenon is too frequent and always on the same route.
With the engine off, the audio equipment switches off after a few minutes of use.	When the engine is switched off, the audio equipment operating time depends on the battery charge. The switch-off is normal: the audio equipment switches to economy mode and switches off to prevent discharging of the vehicle's battery.	Start the vehicle's engine to increase the battery charge.
The message "the audio system is overheated" appears on the display.	In order to protect the installation if the surrounding temperature is too high, the audio equipment switches to an automatic thermal protection mode leading to a reduction of the volume or stopping of the playing of the CD.	Switch the audio system off for a few minutes to allow the system to cool.

EXTERIOR

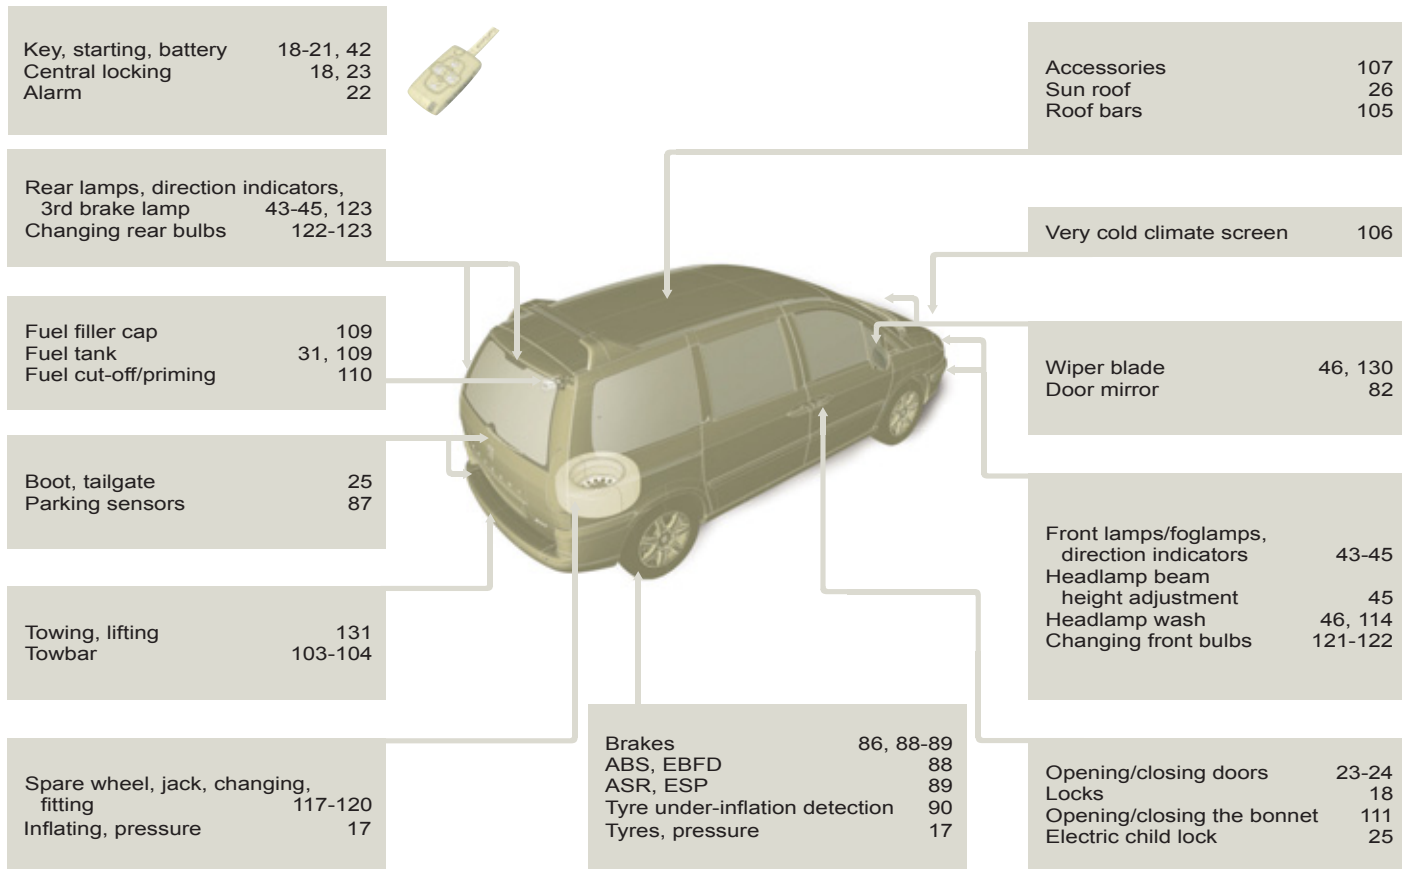

## Interior

## INTERIOR

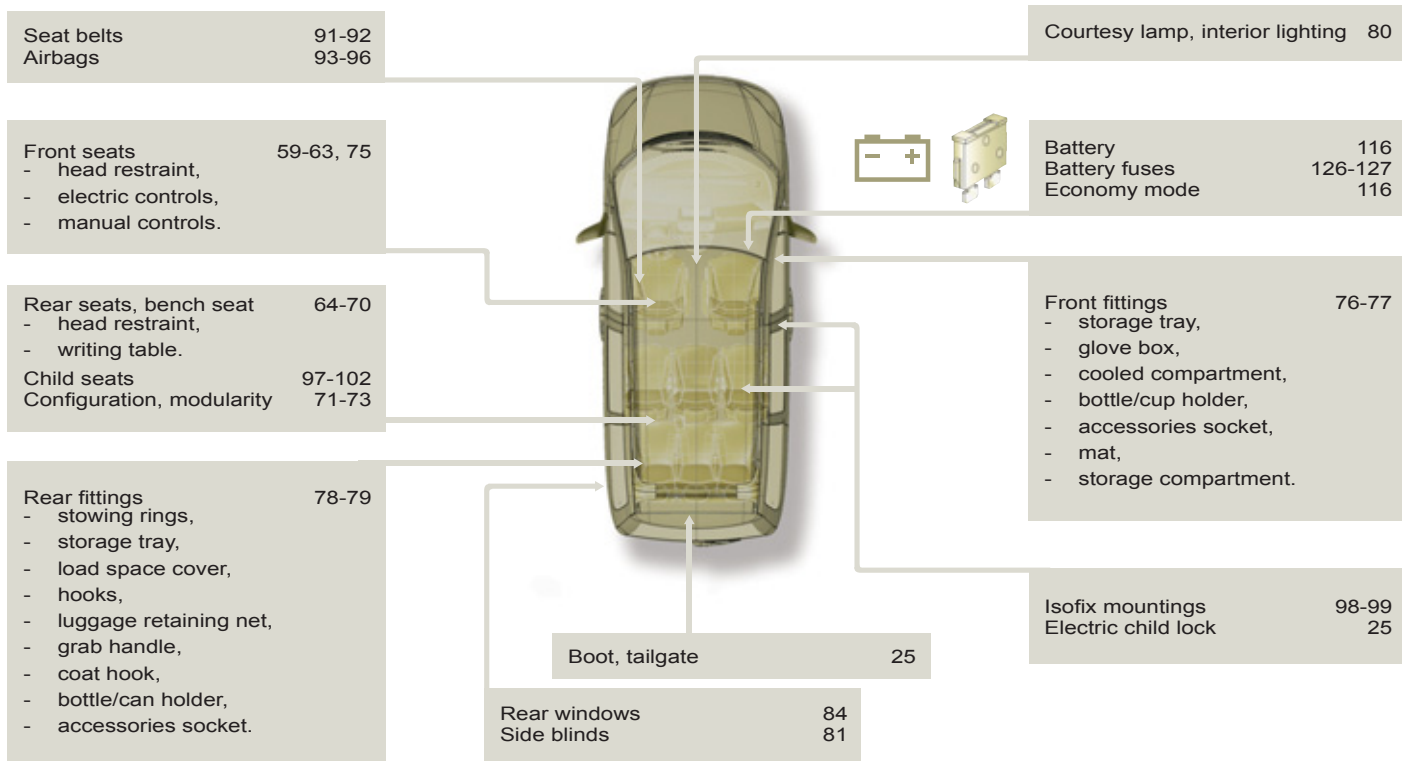


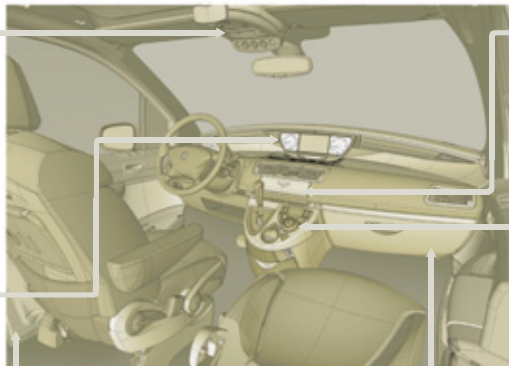


FRONT INTERIOR

Mirror, toll card,  
car park ticket 81-82  
Sun visor, mirror/  
monitoring 81, 102  
Courtesy lamp, interior lighting 80

Instrument panels, dials,  
counters 27-28  
Warning lamps,  
indicator lamps 29-33  
Indicators, displays 34-36  
Dimmer, trip recorder zero reset 36

 Setting the date/time  
Section 9



Parking brake, handbrake 86

In-car Technology Section 9  
- Peugeot Connect Navigation (RT6)  
- Peugeot Connect Sound

Heating, ventilation 54-58  
- defrosting, demisting,  
- air conditioning A/C,  
- climate control,  
- air recirculation.  
Hazard warning lamps 86

Fittings 76-77  
- cigarette lighter,  
- glove box,  
- cooled compartment,  
- ashtray.  
Interior fuses 124-125



## INSTRUMENTS AND CONTROLS

Lighting, controls 43-45

- automatic,
- changing direction,
- dipped beam headlamps,
- main beam headlamps.

Electric windows,  
door mirrors 82-84

Alarm 22  
ASR, ESP 89  
Headlamp beam  
height adjustment 45  
Parking sensors 87


Front-rear wipers 46-47  
Wash-wipe 46, 47, 114  
Trip computer Section 9

Gearbox 37-41

- automatic,
- manual.

Cruise control 48-50  
Speed limiter 51-53

Steering wheel, adjustment, horn 41, 88

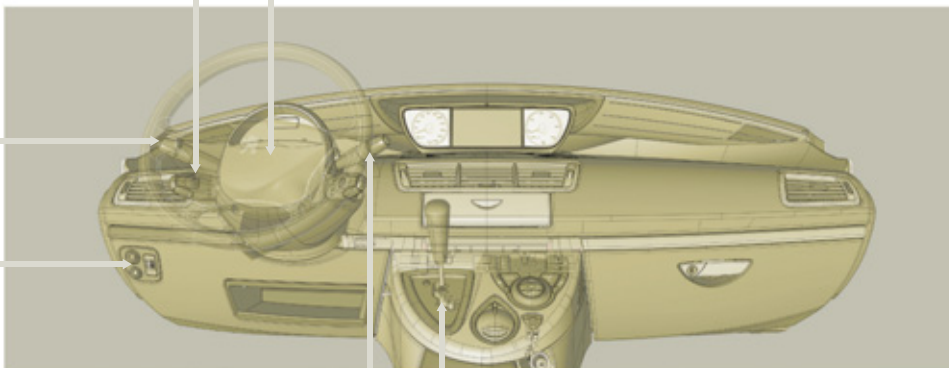

Vehicle documents  
contained in the  
wallet:

Handbook  
Servicing booklet  
...

TECHNICAL DATA - MAINTENANCE



Engine fuses 128-129


Wash-wipe/headlamp wash 46, 47, 114

Bulbs, lighting, changing bulbs 121-123

Battery 116  
Battery fuses 126-127



Diesel 112, 132-135  
Fuel cut-off/priming 110  
Engine data 112, 133  
Weights, loads 134-135  
Dimensions 136-138

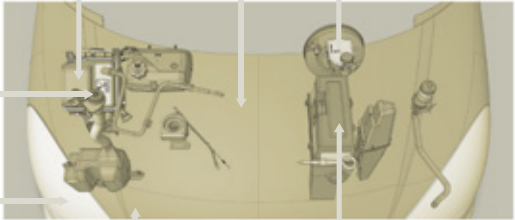

Levels 113-114  
- diesel additive,  
- fuel supply,  
- oil gauge,  
- power steering fluid,  
- brake fluid,  
- coolant.

Checks 112, 115  
- air/oil filters,  
- particle emission filter,  
- brake pads/discs.

Opening the bonnet, stay 111  
Under the bonnet 112

Identification features 17

### ECO-DRIVING

Eco-driving is a range of everyday practices that allow the motorist to optimise their fuel consumption and CO<sub>2</sub> emissions.

#### Optimise the use of your gearbox

With a manual gearbox, move off gently, change up without waiting and drive by changing up quite soon. If your vehicle has the system, the gear shift indicator invites you to change up; it is displayed in the instrument panel, follow its instructions.

With an automatic or electronic gearbox, stay in Drive "**D**" or Auto "**A**", according to the type of gearbox, without pressing the accelerator pedal heavily or suddenly.

#### Drive smoothly

Maintain a safe distance between vehicles, use engine braking rather than the brake pedal, and press the accelerator progressively. These practices contribute towards a reduction in fuel consumption and CO<sub>2</sub> emissions and also helps reduce the background traffic noise.

If your vehicle has cruise control, make use of the system at speeds above 25 mph (40 km/h) when the traffic is flowing well.

#### Control the use of your electrical equipment

Before moving off, if the passenger compartment is too warm, ventilate it by opening the windows and air vents before using the air conditioning.

Above 30 mph (50 km/h), close the windows and leave the air vents open.

Remember to make use of equipment that can help keep the temperature in the passenger compartment down (sunroof and window blinds...).

Switch off the air conditioning, unless it has automatic digital regulation, as soon as the desired temperature is attained.

Switch off the demisting and defrosting controls, if not automatic.

Switch off the heated seat as soon as possible.

Switch off the headlamps and front foglamps when the level of light does not require their use.

Avoid running the engine before moving off, particularly in winter; your vehicle will warm up much faster while driving.

As a passenger, if you avoid connecting your multimedia devices (film, music, video game...), you will contribute towards limiting the consumption of electrical energy, and so of fuel.

Disconnect your portable devices before leaving the vehicle.

### Limit the causes of excess consumption

Spread loads throughout the vehicle; place the heaviest items in the bottom of the boot, as close as possible to the rear seats.

Limit the loads carried in the vehicle and reduce wind resistance (roof bars, roof rack, bicycle carrier, trailer...). Use a roof box in preference.

Remove roof bars and roof racks after use.

At the end of winter, remove snow tyres and refit your summer tyres.

### Observe the recommendations on maintenance

Check the tyre pressures regularly, when cold, referring to the label in the door aperture, driver's side.

Carry out this check in particular:

- before a long journey,
- at each change of season,
- after a long period out of use.




Don't forget the spare wheel and the tyres on any trailer or caravan.

Have your vehicle serviced regularly (engine oil, oil filter, air filter...) and observe the schedule of operations recommended by the manufacturer.

When refuelling, do not continue after the third cut-off of the nozzle to avoid any overflow.

At the wheel of your new vehicle, it is only after the first 1 800 miles (3 000 kilometres) that you will see the fuel consumption settle down to a consistent average.

PRECAUTIONS...

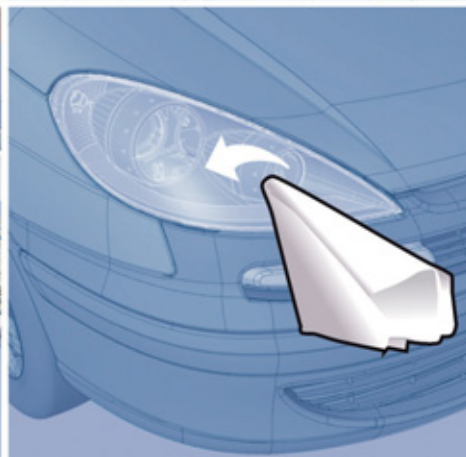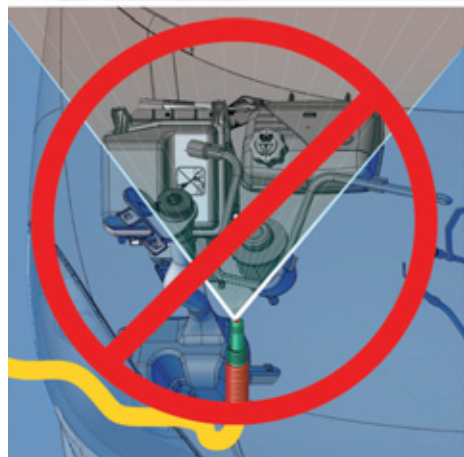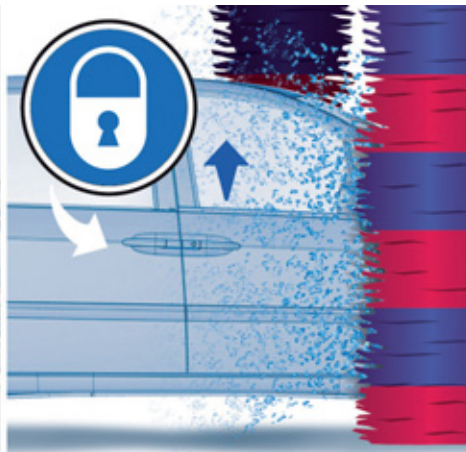

## Passenger airbag OFF

Refer to the advice given on the label present on both sides of the passenger's sun visor.

To assure the safety of your child, you must deactivate the passenger's front airbag when you install a child seat in the rearwards facing position on the front passenger's seat.

Otherwise, there is a risk that the child could be seriously injured or killed if the airbag were deployed.

AR	لا يجب أبدا تركيب نظام لإجلال الطفل الوجه باتجاه الراء على مقعد سيارة مجهز بوسادة أمان هوائية أمامية مغلقة، فقد يؤدي هذا إلى التسبب بموت الطفل أو بإصابات خطيرة لديه.
BG	НИКОГА НЕ инсталирайте детско столче на седалка с АКТИВИРАНА предна ВЪЗДУШНА ВЪЗГЛАВНИЦА. Това можеда причини СМЪРТ или СЕРИОЗНО НАРАНЯВАНЕ на детето.
CS	NIKDY neumistujte dětské zádržné zařízení orientované směrem dozadu na sedadlo chráněné AKTIVOVANÝM čelním AIRBAGEM. Hrozí nebezpečí SMRTI DÍTĚTE nebo VÁŽNĚHO ZRANĚNÍ.
DA	Brug aldrig en bagudvendt barnestol på et sæde der er beskyttet af en aktiv airbag. Død eller alvorlig skade på barnet kan forekomme.
DE	Verwenden Sie NIEMALS einen Kindersitz oder Babyschale gegen die Fahrtrichtung bei AKTIVIERTEM Airbag, TOD oder ERNSTHAFTE VERLETZUNGEN können die Folge sein.
EL	Μη χρησιμοποιείτε ΠΟΤΕ παιδικό κάθισμα με την πλάτη του προς το εμπρός μέρος του αυτοκινήτου, σε μια θέση που προστατεύεται από ΜΕΤΩΠΙΚΟ αερόσακο που είναι ΕΝΕΡΓΟΣ. Αυτό μπορεί να έχει σαν συνέπεια το ΘΑΝΑΤΟ ή το ΣΟΒΑΡΟ ΤΡΑΥΜΑΤΙΣΜΟ του ΠΑΙΔΙΟΥ
EN	NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DEATH or SERIOUS INJURY to the CHILD can occur
ES	NO INSTALAR NUNCA EL SISTEMA DE RETENCIÓN PARA NIÑOS DE ESPALDAS AL SENTIDO DE LA CIRCULACIÓN SOBRE UN ASIENTO PROTEGIDO CON UN COJÍN INFLABLE FRONTAL ( AIRBAG ) ACTIVADO. ESTO PUEDE CAUSAR LA MUERTE DEL BEBE O HERIRLO GRAVEMENTE.
ET	Ärge kasutage kunagi lapse turvatooli seljaga sõidusuunas sõiduki istmel mis on kaitstud AKTIVEERITUD TURVAPADJAGA. See võib põhjustada lapsele RÄSKEID VIGASTUSI või SURMA.
FI	ÄLÄ KOSKAAN aseta lapsen turvaistuinta selkä ajosuuntaan istuimelle, jonka edessä suojana on käyttöön aktivoitu TURVATYYNY. Sen laukeaminen voi aiheuttaa LAPSEN KUOLEMAN tai VAKAVAN LOUKKAANTUMISEN.
FR	NE JAMAIS installer de système de retenue pour enfants faisant face vers l'arrière sur un siège protégé par un COUSSIN GONFLABLE frontal ACTIVÉ. Cela peut provoquer la MORT de l'ENFANT ou le BLESSER GRAVEMENT
HR	NIKADA ne postavljati dječju sjedalicu leđima u smjeru vožnje na sjedalo zaštićeno UKLJUČENIM prednjim ZRAČNIM JASTUKOM. To bi moglo uzrokovati SMRT ili TEŠKU OZLJEDU djeteta.
HU	SOHA ne használjon menetiránynak háttal beszerelt gyermekülést olyan ülésen, amely AKTIVÁLT ÁLLAPOTÚ (BEKAPCSOLT) FRONTLEGZSÁKKÁL van védve. Ez a gyermek halálát vagy súlyos sérülését okozhatja.
IT	NON installare MAI seggiolini per bambini posizionati in senso contrario a quello di marcia su un sedile protetto da un AIRBAG frontale ATTIVATO. Ciò potrebbe provocare la MORTE o FERITE GRAVI al bambino.

LT	NIEKADA neįrenkite vaiko prilaikymo priemonės su atgal atgręžtu vaiku ant sėdynės, kuri saugoma VEIKIANČIOS priekinės ORO PAGALVĖS. Išsiskleidus oro pagalvei vaikas gali būti MIRTINAI arba SUNKIAI TRAUMUOTAS.
LV	NAV PIELĀUJĀMS uzstādīt uz aizmuguri vērstu bērnu sēdekli priekšējā pasažiera vietā, kurā ir AKTIVIZĒTS priekšējais DROŠĪBAS GAISA SPILVENS. Tas var izraisīt BĒRNA NĀVI vai radīt NOPIETNUS IEVAINOJUMUS.
MT	Qatt m'ghandek thalli tifel/tifla marbut f'siggu dahru lejn l-Airbag attiva, ghalix tista' tikkawza korriment serju jew anke mewt lit-tifel/tifla
NL	Plaats NOOIT een kinderzitje met de rug in de rijrichting op een zitplaats waarvan de AIRBAG is INGESCHAKELD. Bij het afgaan van de airbag kan het KIND ERNSTIG OF DODELIJK GEWOND raken.
NO	Installer ALDRI et barnesete med ryggen mot kjøretningen i et sete som er beskyttet med en frontal AKTIVERT KOLLISJONSPUTE, BARNET risikerer å bli DREPT eller HÅRDT SKADET.
PL	NIGDY nie instalować fotelika dziecięcego w pozycji «tyłem do kierunku jazdy» na siedzeniu wyposażonym w CZŁOWĄ PODUSZKĘ POWIETRZĄ w stanie AKTYWNYM. W przeciwnym razie dziecko narażone będzie na ŚMIERĆ lub BARDZO POWAŻNE OBRAŻENIA CIAŁA w momencie wyzwolenia poduszki powietrznej
PT	NUNCA instale um sistema de retenção para crianças de costas para a estrada, num banco protegido por um AIRBAG frontal ACTIVADO. Esta instalação poderá provocar FERIMENTOS GRAVES ou a MORTE da CRIANÇA.
RO	Nu instalati NICIODATA un sistem de retinere pentru copii, dispus cu spatele in directia de mers, pe un loc din vehicul protejat cu AIRBAG frontal ACTIVAT. Aceasta ar putea provoca MOARTEA COPILULUI sau RANIREA lui GRAVA.
RU	ВО ВСЕХ СЛУЧАЯХ ЗАПРЕЩАЕТСЯ использовать обращенное назад детское удерживающее устройство на сиденье, защищенном ФУНКЦИОНИРУЮЩЕЙ ПОДУШКОЙ БЕЗОПАСНОСТИ, установленной перед этим сиденьем. Это может привести к ГИБЕЛИ РЕБЕНКА или НАНЕСЕНИЮ ЕМУ СЕРЬЕЗНЫХ ТЕЛЕСНЫХ ПОВРЕЖДЕНИЙ
SK	NIKDY nepoužívajte na prednom sedadle chránenom AKTÍVNYM AIRBAGOM detské zadržiavacie zariadenie umiestnené v proti smere jazdy. Môže to spôsobiť SMRT, alebo VÁŽNE ZRANENIE DIEŤAŤA.
SL	NIKOLI ne nameščajte otroškega sedeža s hrbtom v smeri vožnje, če je VARNOSTNA BLAZINA pred sprednjim sopotnikovim sedežem AKTIVIRANA. Takšna namestitve lahko povzroči SMRT OTROKA ali HUDE POŠKODBE.
SR	NIKADA ne koristite dečje sedišta koje se okreće unazad na sedištu zaštićenim AKTIVNIM VAZDUŠNIM JASTUKOM ispred njega, jer mogu nastupiti SMRT ili OZBILJNA POVREDA DETETA.
SV	Använd ALDRIG en bakåtvänd barnstol i ett säte skyddat av en AKTIV AIRBAG framför det. Det kan orsaka ALLVARLIGA eller DÖDLIGA skador på barnet.
TR	KESİNLİKLE HAVA YASTIĞI AKTİF olan ön koltuğa yüzü arkaya dönük bir çocuk koltuğu yerleştirmeyiniz. Bu ÇOCUĞUN ÖLMESİNE veya ÇOK AĞIR YARALANMASINA sebep olabilir.



This guide describes all of the equipment available.

The level of equipment fitted to each model marketed depends on its trim level, version and the specific requirements for the country in which it is sold.

The descriptions and illustrations are given without any obligation. Automobiles PEUGEOT reserves the right to modify the technical specifications, equipment and accessories without having to update the current guide.

 
This document is an integral part of your vehicle. It should be passed on to the new user in the event of sale or transfer.

Automobiles PEUGEOT declares, by application of the provisions of the European regulation (Directive 2000/53) relating to End of Life Vehicles, that it achieves the objectives set by this regulation and that recycled materials are used in the manufacture of the products that it sells.

Reproduction or translation of all or part of this handbook is prohibited without written authorisation from Automobiles PEUGEOT.

Printed in the EU

**Anglais**  
12-12



Automobiles PEUGEOT - Siège Social : 75, avenue de la Grande-Armée 75016 PARIS  
Tél. 33 (0)1 40 66 55 11 - Fax 33 (0)1 40 66 54 14

Adresse postale : Automobiles PEUGEOT B.P 01 75761 PARIS cedex 16 - Adresse Internet : <http://www.peugeot.com>

Société Anonyme au capital de 171 284 850 Euros - R.C.S. PARIS B 552 144 503. SIRET 552 144 503 00018. APE 341 Z



