



PEUGEOT Connect Media Navigation (NG4 3D)

MULTIMEDIA AUDIO SYSTEM / BLUETOOTH TELEPHONE
GPS EUROPE



The system is protected in such a way that it will only operate in your vehicle.



For safety reasons, the driver must only carry out operations which require prolonged attention while the vehicle is stationary.

When the engine is switched off and to prevent discharging of the battery, the system switches off following the activation of the energy economy mode.

CONTENTS

01 First steps	p.	212
02 Voice commands and steering mounted controls	p.	214
03 General operation	p.	217
04 Navigation - Guidance	p.	222
05 Traffic information	p.	231
06 Radio	p.	233
07 Music media players	p.	234
08 Using the telephone	p.	239
09 Screen menu map	p.	244
Frequently asked questions	p.	249

01 FIRST STEPS

PEUGEOT Connect Media Navigation (NG4 3D) control panel

Access to the Media Menu
(audio CD, Jukebox,
Auxiliary input).

Display the list of tracks.
Change the audio source.

Access to the Navigation
Menu and display recent
destinations.

Abandon the current
operation.

Long press: return to main
display.

Access to the Traffic Menu.

Access to the Address book
Menu.

Access to the Radio Menu
Display the list of stations in
alphabetical order (FM band) or
frequency order (AM band).

Audio settings (Balance /
Fader, Bass / Treble, Musical
ambience...).

Adjust volume (each source
is independent, including
navigation messages and alerts).
Long press: reinitialise the
system.

Short press: mute.

Access to the "SETUP" menu
(configuration).
Long press: GPS coverage.

Enter the numbers or letters
using the alpha-numeric keypad.
Presetting 10 radio frequencies.



Automatic search down/up for
radio frequencies.
Select previous/next CD or MP3
track.

SD card reader.

Short press: clears the last
character.



01 FIRST STEPS

PEUGEOT Connect Media Navigation (NG4 3D) navigator

Press to left / right:

With display of the "RADIO" screen:
select the previous / next frequency.

With display of the "MEDIA" screen:
select the previous / next track.

With display of the "MAP" or "NAV":
horizontal movement on the map.

Press up / down:

With display of the "RADIO" screen:
select the previous / next radio station
in the list.

With display of the "MEDIA" screen:
select the MP3 folder.

With display of the "MAP" or "NAV":
vertical movement on the map.

Go to the next or previous page in a
menu.

Movement on the virtual keypad
displayed.

OK: confirm the highlighted item.

Select successive display in the
screen of "MAP" / "NAV"
(if navigation in progress) /
"TEL" (if a call is in progress) /
"RADIO" or "MEDIA" being played.

CALL: access to the Phone
menu.

Bluetooth connection, accept
an incoming call.



Normal display or black screen.

END CALL: access to the
Phone menu.

End a call in progress or reject
an incoming call, Bluetooth
connection.

Rotate the dial:

With display of the "RADIO" screen:
select the previous / next radio station
in the list.

With display of the "MEDIA" screen:
select the previous / next CD or MP3
track.

With display of the "MAP" or "NAV":
zoom the map in/out.

Movement of the menu selection
cursor.

02 VOICE COMMANDS AND STEERING MOUNTED CONTROLS

Initiation of voice commands Voice recognition




1

Before using the system for the first time, you are advised to listen to, say and practice the tutorial.

2



Press the SETUP button and select the "Language & Speech" function. Turn the ring and select "Voice control". Activate voice recognition. Select "Tutorial".

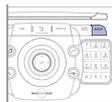

The phrases to be spoken according to the context are indicated in the tables below.

Speak and PEUGEOT Connect Media Navigation (NG4 3D) acts.



Pressing the end of the lighting control stalk activates voice recognition.



CONTEXT	SAY	ACTION
GENERAL	Help address book Help voice control Help media Help navigation Help telephone Help radio Cancel Correction	Access to the address book help Access to the voice recognition help Access to the media management help Access to the guidance, navigation help Access to the telephone help Access to the radio help To cancel a voice command which is in progress Request to correct the last voice recognition carried out Clear
RADIO	Select station Station <ts:stationName> Read out station list Enter frequency Select wave band AM FM TA on TA off	Select a radio station Select a radio station using its RDS description <ts:station Name> from the RADIO list Listen to the list of stations available Listen to the frequency of the current radio station Choose the frequency waveband (AM or FM) Change the frequency waveband to AM Change the frequency waveband to FM Activate Traffic Info (TA) Deactivate Traffic Info
NAVIGATION	Destination input Voice advice off Voice advice on Save address Start guidance Abort guidance Navigate entry POI Search	Command to enter a new destination address Deactivate the spoken guidance instructions Activate the spoken guidance instructions Save an address in the address book Start guidance (once the address has been entered) Stop the guidance Start guidance to an entry in the address book Start guidance to a point of interest

02 VOICE COMMANDS AND STEERING MOUNTED CONTROLS

Initiation of voice commands Voice recognition



CONTEXT	SAY	ACTION
MEDIA	Media Select media Single slot Jukebox USB External device SD-Card Track <1 - 1000> Folder <1 - 1000>	Select the MEDIA source Choose a source Select the CD player source Select the Jukebox source Select the USB player source Select the audio AUX input source Select the SD card source Select a specific track (number between 1 and 1 000) on the active MEDIUM Select a Folder (number between 1 and 1 000) on the active MEDIUM
TELEPHONE	Phone menu Enter number Phone book Dial Save number Accept Reject	Open the Telephone Menu Enter a telephone number to be called Open the phone book Make a call Save a number in the phone book Accept an incoming call Reject an incoming call
ADDRESS BOOK	Address book menu Call <entry> Navigate <entry>	Open the address book Call file using its <file> description as described in the address book Start guidance to an address in the address book using its <file> description

02 VOICE COMMANDS AND STEERING MOUNTED CONTROLS

Steering mounted controls

Wiper stalk: display "RADIO" and "MEDIA".

Lighting stalk: activate voice commands with a short press; indication of the current navigation instruction with a long press.

Radio: select the previous/next pre-set station.

CD audio: select the previous/next track

If "MEDIA" is displayed in the screen:


MP3 CD / SD CARD / JUKEBOX: select the previous/next folder.

Select the previous/next item in the contacts list.

Radio: automatic search for a higher frequency.

CD / SD CARD / JUKEBOX: select the next track.

CD / SD CARD / JUKEBOX: continuous press: fast forwards.

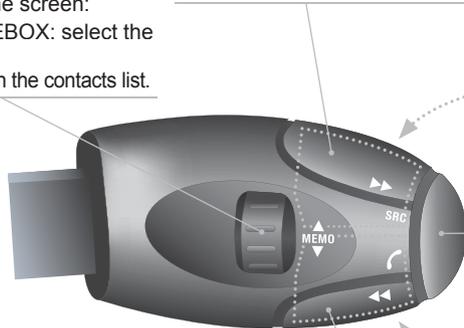

Volume increase.

Change audio source.
Start a call from the contacts list.
Call/hang up the telephone.
Confirm a selection.
Press for more than 2 seconds:
telephone menu.

Volume decrease.

Mute: press the volume increase and decrease buttons simultaneously.
The sound is restored by pressing one of the two volume buttons.

Radio: automatic search for a lower frequency.

CD / SD CARD / JUKEBOX: select the previous track.

CD / SD CARD / JUKEBOX: continuous press: fast backwards.

03 GENERAL OPERATION

Contextual display

Press the MODE button several times in succession to gain access to the following displays:

RADIO / MUSIC MEDIA / VIDEO



TELEPHONE
(If a conversation is in progress)



FULL SCREEN MAP

NAVIGATION (If guidance is in progress)



SETUP:

access to the "SETUP" Menu: system language* and voice functions*, voice initialisation (section 09), date and time*, display, unit and system parameters.

* Available according to model.



TRAFFIC:

access to the Traffic Menu: display of the current traffic alerts.



MEDIA:

"DVD-audio" menu
"DVD-Video" menu



Long press: access to the GPS coverage and to the demonstration mode.

For maintenance of the screen, the use of a soft, non-abrasive cloth (spectacles cloth) is recommended, without any additional product.



For a detailed global view of the menus available, refer to the "Screen menu map" section of this handbook.

03 GENERAL OPERATION

Contextual display



Pressing OK gives access to short-cut menus according to the display on the screen.

NAVIGATION (IF GUIDANCE IS IN PROGRESS):

1 **Abort guidance**

1 **Repeat advice**

1 **Block road**

2 Unblock

2 More

2 Less


2 Calculate

2 Zoom/Scroll

2 Browse route

1 **Route info**

2 Show destination

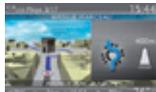

2 Trip info

3 Route type

3 Avoid

3 Satellites

3 Stopovers

2 Browse route

2 Zoom/Scroll

1 **Voice advice**

1 **Route options**

2 Route type

2 Route dynamics

2 Avoidance criteria

2 Recalculate

TELEPHONE:

1 **End call**

1 **Hold call**

1 **Dial**

1 **DTMF-Tones**

1 **Private mode**

1 **Micro off**

MUSIC MEDIA PLAYERS:

1 **TA**

1 **Play options**

2 Normal order

2 Random track

2 Scan

1 **Select media**

03 GENERAL OPERATION

Contextual display



RADIO:

1 In FM mode

- 2 TA
- 2 RDS
- 2 Radiotext
- 2 Regional prog.

2 AM

1 In AM mode

- 2 TA
- 2 Refresh AM list
- 2 FM

FULL SCREEN MAP:

1 Abort guidance / Resume guidance

1 Set destination / Add stopover

1 POIs nearby

1 Position info



2 Options

3 Navigate to

3 Dial

3 Save position

3 Zoom/Scroll

1 Map Settings

2 2D Map

2 2.5D Map

2 3D Map

2 North Up

2 Heading Up

1 Zoom/Scroll

AUDIO DVD (LONG PRESS):

1 Stop

2 Group

3 Group 1 .2/n

2 Play options

3 Normal order / Random track / Scan

1 TA

2 Select media

03 GENERAL OPERATION



Contextual display



VIDEO DVD (LONG PRESS):

- 1 Play
- 2 Stop
- 2 DVD menus
- 3 DVD menu
- 3 DVD top menu
- 3 List of titles
- 3 List of chapters
- 2 DVD Options
- 3 Audio
- 3 Subtitles
- 3 Angle

Examples:

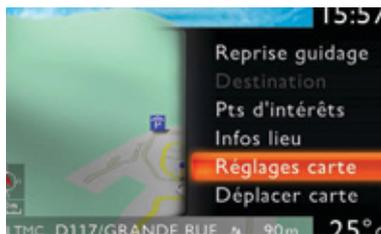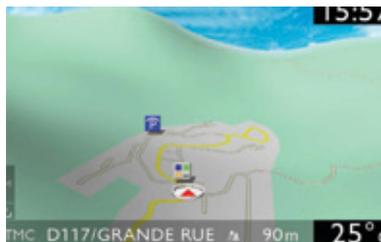

PEUGEOT Connect Media IS:

- the map setting which allows the map to be displayed flat, in perspective or in 3D.



- configuration of the system by means of voice commands.



04 NAVIGATION - GUIDANCE

Selecting a destination

The "NAVIGATION" voice commands are listed in section 02. During guidance, a long press on the end of the lighting stalk repeats the last guidance instruction.

1



Press the NAV button.



4



Select the "Address input" function and press OK to confirm.

Address input



The list of the last 20 destinations appears under the Navigation Menu function.

2



Press the NAV button again or select the Navigation Menu function and press OK to confirm.


Navigation Menu



5



Once the country has been selected, turn the ring and select the town function. Press OK to confirm.

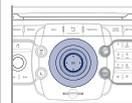

6



Select the letters of the town one by one confirming each time by pressing OK.



3



Select the "Destination input" function and press OK to confirm.

Destination input




A pre-set list (by entering the first few letters) of the towns in the country selected can be accessed via the LIST button on the virtual keypad.

04 NAVIGATION - GUIDANCE

7



Turn the ring and select OK.
Press OK to confirm.

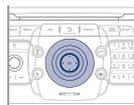

To speed up the process, the post code can be entered directly after selecting the "Postal code" function.
Use the virtual keypad to enter the letters and digits.

8



Repeat steps 5 to 7 for the "Street"
and "House number" functions.



Select the "Save to address book" function to record the address entered in a directory file. Press OK to confirm the selection.
The PEUGEOT Connect Media allows more than 4 000 contact records to be saved.



To delete a destination; from steps 1 to 3, select "Choose from last destinations".
A long press on one of the destinations displays a list of actions from which you can select:

Delete entry

Delete list

It is possible to scroll the map using the 4-direction navigator. It is possible to select its orientation via the short-cut menu of the "Full screen map". Press OK then select "Map Settings" and confirm.

9



Then select "Start route guidance"
and the press OK to confirm.



Start route guidance

10




Select the route type:
"Fast route", "Short route", or
"Optimized route" and press OK to
confirm.



11



Select the road with the colour
corresponding to the route chosen
and press OK to confirm and start
guidance.

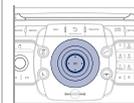

It is also possible to select a destination via "Choose from address book" or "Choose from last destinations", by selecting a junction, a town centre, geographic coordinates, or directly on the "Map".

Choose from address book

Choose from last destinations

04 NAVIGATION - GUIDANCE

Setting and navigating to my "Home address"

i

To be set as the "Home address", an address must first be entered in the address book, for example from "Destination input" / "Address input" then "Save to address book".

1



Press the NAV button twice to display the Navigation Menu.

Navigation Menu



2



Select "Destination input" and confirm. Then select "Choose from address book" and confirm.

Destination input




3



Select your home address and confirm. Then select "Edit entry" and confirm.

Edit entry

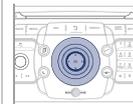


4



Select "Set as Home address" and confirm to save.

Set as home address

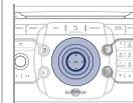


To start navigation towards "Home", press NAV twice to display the Navigation Menu, select "Destination input" and confirm. Then select "Navigate HOME" and confirm to start guidance.

04 NAVIGATION - GUIDANCE

Route options

When the map is displayed on the screen, you can select "Map Settings" then "2D Map / 2.5D Map / 3D Map / North Up / Heading Up". The display of buildings in 3D mode depends on the progress in town mapping.
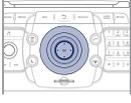
<p>1</p>  <p>Press the NAV button.</p>	
<p>2</p>  <p>Press the NAV button again or select the Navigation Menu function and press OK to confirm.</p> <p>Navigation Menu</p>	
<p>3</p>  <p>Select the "Route options" function and press OK to confirm.</p> <p>Route options</p>	
<p>4</p>  <p>Select the "Route type" function and press OK to confirm. This function allows you to change the route type.</p> <p>Route type</p>	
<p>5</p>  <p>Select the "Route dynamics" function. This function provides access to the "Traffic independent", "Semi-dynamic" and "Dynamic" options.</p> <p>Route dynamics</p>	
<p>6</p>  <p>Select the "Avoidance criteria" function. This function provides access to the "Avoid" options (motorways, toll roads, ferries, tunnels).</p> <p>Avoidance criteria</p>	
<p>7</p>  <p>Turn the ring and select the "Recalculate" function to take into account the route options selected. Press OK to confirm.</p> <p>Recalculate</p>	

04 NAVIGATION - GUIDANCE

Adding a stopover




Stopovers can be added to or deleted from the route once the destination has been selected.

<p>1</p>  <p>Press the NAV button.</p>		<p>5</p>  <p>Enter a new address, for example.</p> <p>Address input</p>	
<p>2</p>  <p>Press the NAV button again or select the "Navigation" Menu function and press OK to confirm.</p> <p>"Navigation" Menu</p>		<p>6</p>  <p>Once the new address has been entered, select "Start route guidance" and press OK to confirm.</p> <p>Start route guidance</p>	
<p>3</p>  <p>Select the "Stopovers" function and press OK to confirm.</p> <p>Stopovers</p>		<p>7</p>  <p>Position the stopover on the list and press OK to confirm.</p>	
<p>4</p>  <p>Select the "Add stopover" function (5 stopovers maximum) and press OK to confirm.</p> <p>Add stopover</p>		<p>8</p> <p>Repeat operations 1 to 7 as many times as necessary then select "Recalculate" and press OK to confirm.</p>	
 <p>To change the stopovers, repeat operations 1 to 3 and select "Rearrange route" (select a stopover, delete it or move it on the list using the ring to change the order, confirm its new position and finish with "Recalculate").</p>			

04 NAVIGATION - GUIDANCE

Searching for points of interest (POI)

The points of interest (POIs) indicate all of the service locations in the vicinity (hotels, various businesses, airports...).

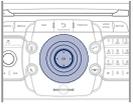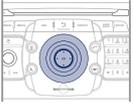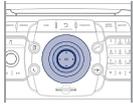1 	Press the NAV button.		
2 	Press the NAV button again or select the Navigation Menu function and press OK to confirm. Navigation Menu		
3 	Select the "POI search" function and press OK to confirm. POI search		
4 	Select the "POI nearby" function to search for POIs around the vehicle. POI nearby		
5 	Select the "POI near destination" function to search for POIs near the point of arrival of the route. POI near destination		
6  Select the "POI in city" function to search for POIs in the city required. Select the country then enter the name of the city using the virtual keypad. POI in city			
 A list of cities present in the country selected can be accessed via the LIST button on the virtual keypad.			
7  Select the "POI in country" function to search for POIs in the country required. POI in country			
8  Select the "POI near route" function to search for POIs near the route. POI near route			

04 NAVIGATION - GUIDANCE



This icon appears when several POIs are grouped together in the same area. Zooming in on this icon shows details of the POIs.

List of principal points of interest (POI)

-  Service station
-  LPG station
-  Garage
-  PEUGEOT
-  Motor racing circuit
-  Covered car park
-  Car park
-  Rest area
-  Hotel
-  Restaurant
-  Refreshment area
-  Picnic area
-  Cafeteria

-  Airport
-  Railway station
-  Bus station
-  Port
-  Industrial estate
-  Supermarket
-  Bank
-  Vending machine
-  Tennis court
-  Swimming pool
-  Golf course
-  Winter sports resort
-  Theatre

-  Cinema
-  Theme parks
-  Hospital
-  Pharmacy
-  Police station
-  School
-  Post office
-  Museum
-  Tourist information
-  Risk area*

* According to availability in the country.

04 NAVIGATION - GUIDANCE

Updating POIs

1



Download the "POIs" update file onto an SD card or USB memory stick from the Internet. This service is available at <http://peugeot.navigation.com>.

i

The files must be copied to the root on the chosen medium.

2




Insert the medium (SD card or USB memory stick) containing the POI database into the system's SD card reader or USB port.

3




Press NAV, select Navigation Menu, then "Settings", then "Update personal POI".

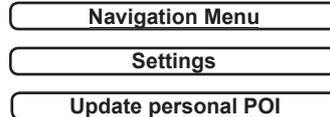

4



Select the medium ("USB" or "SD-Card") used and press OK.

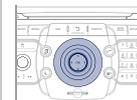

5

Successful downloading is confirmed by a message.
The system restarts.
The POIs version can be found in the SETUP \ System menu.

04 NAVIGATION - GUIDANCE

Spoken instruction settings

1



When the navigation is displayed in the screen, press OK then select or deselect "Voice advice" to activate or deactivate the spoken guidance instructions.

Use the volume button to adjust the volume.



i


The volume of the Risk Areas POIs alert can only be adjusted during this type of alert.

3



Select the "Settings" function and press OK to confirm.

Settings

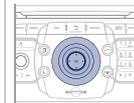

4



Select the "POI categories on Map" function to select the POIs to be displayed on the map by default.

POI categories on Map



5



Select "Set parameters for risk areas" to gain access to the "Display on map", "Visual alert" and "Sound alert" functions.

Set parameters for risk areas



Point of interest and risk area settings

1



Press the NAV button.



2



Press the NAV button again or select the Navigation Menu function and press OK to confirm.

Navigation Menu



05 TRAFFIC INFORMATION

Configure the filtering and display of TMC messages

1



Press the TRAFFIC button.



The list of TMC messages appears under the Traffic Menu sorted in order of proximity.

2



Press the TRAFFIC button again or select the Traffic Menu function and press OK to confirm.

Traffic Menu



3



Select "Select preferred list" and press OK to confirm.



4



Select the filter of your choice:

Messages on route

All warning messages

Only warnings on route

All messages



5



Select "Geo. Filter".

Geo. Filter



i

When all of the messages on the route are selected, the addition of a geographic filter is recommended (within a radius of 3 miles (5 km) for example) to reduce the number of messages displayed on the map. The geographic filter follows the movement of the vehicle.

i


The filters are independent and their results are concealed. We recommend:

- a filter over 6 miles (10 km) around the vehicle in heavy traffic,
- a filter over 30 miles (50 km) around the vehicle or a filter on the route on motorway journeys.

05 TRAFFIC INFORMATION

Principal TMC symbols

1 Black and blue triangle: general information, for example:

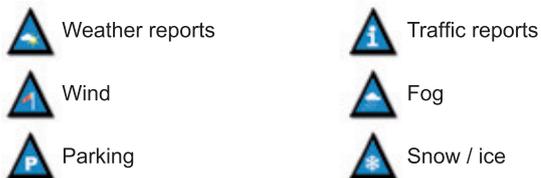

2 Red and yellow triangle: traffic information, for example:




Receiving TA messages

- i
-  - the station transmits TA messages.
 -  - the station does not transmit TA messages.
 -  - TA messages are not activated.

The TA (Traffic Announcement) function gives priority to TA alert messages. To operate, this function needs good reception of a radio station transmitting this type of message. When a traffic report is transmitted, the current audio source (Radio, CD, ...) is interrupted automatically to play the TA message. Normal playback of the audio source resumes at the end of the transmission of the message.


- 1
- 
- With the current audio source displayed on the screen, press the dial.

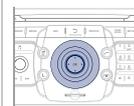

- 2 The shortcut menu for the source appears and gives access to:

TA

- 3
- 
- Select Traffic Announcements (TA) and press the dial to confirm and go to the associated settings.

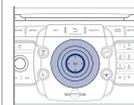

06 RADIO

Selecting a station

1



Press the RADIO button to display the list of stations received locally sorted in alphabetical order.



Select the station required by turning the ring and press to confirm.



While listening to the radio, press buttons ◀ and ▶ for the automatic search for a lower or higher frequency.



When the "RADIO" screen is displayed, turn the ring or use the 4-direction navigator to select the previous or next station on the list.



Press one of the buttons on the numeric keypad for more than 2 seconds to store the current station. A bleep confirms that it has been stored.

Press the button on the numeric keypad to recall the stored radio station.


The external environment (hill, building, tunnel, underground car park...) may interfere with the reception, including in RDS station tracking mode. This phenomenon is a normal result of the way in which radio waves are transmitted and does not in any way indicate a failure of the audio equipment.

RDS - Regional mode

1




When the current radio station is displayed on the screen, press OK.

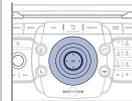

2

The radio source short-cuts menu appears and provides access to the following short-cuts:

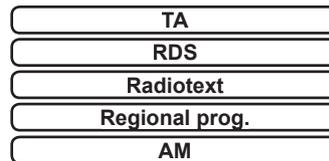

i



Select the function required and press OK to confirm to gain access to the corresponding settings.



i

RDS, if displayed, allows you to continue listening to the same station by automatic retuning to alternative frequencies. However, in certain conditions, coverage of an RDS station may not be assured throughout the country as radio stations do not cover 100 % of the territory. This explains the loss of reception of the station during a journey.

07 MUSIC MEDIA PLAYERS

CD, MP3 / WMA CD, MP3 / WMA SD card / USB player

Information and advice



The MP3 format, an abbreviation of MPEG 1, 2 & 2.5 Audio Layer 3 and the WMA format, an abbreviation of Windows Media Audio and the property of Microsoft, are audio compression standards which permit the recording of several tens of music files on a single disc.



Connecting an iPod:
To play MP3 type files, connect the iPod using the USB port (limited functions).
To play iTunes files, connect the iPod using the auxiliary socket (AUX).



In order to be able to play a recorded CDR or CDRW, when recording it is preferable to select the ISO 9660 level 1, 2 or Joliet standard.

If the disc is recorded in another format it may not be played correctly.

It is recommended that the same recording standard is always used for an individual disc, with as low a speed as possible (4x maximum) for optimum sound quality.

In the particular case of a multi-session CD, the Joliet standard is recommended.



In order to be read, a USB memory stick must be formatted to FAT 32.



The audio equipment will only play audio files with the extension ".mp3" with a speed of between 8 Kbps and 320 Kbps and the extension ".wma" with a speed of between 5 Kbps and 384 Kbps. It also supports the VBR (Variable Bit Rate) mode. No other type of file (.mp4, .m3u...) can be played.



It is advisable to restrict file names to 20 characters, without using of special characters (e.g.: " " ? ; ù) to avoid any playing and displaying problems.



During play, exit the "SD-Card" or "USB" source before removing the SD card or the USB memory stick from its port.



To avoid any risk of theft, remove the SD card or the USB memory stick when you leave your vehicle with the roof open.

07 MUSIC MEDIA PLAYERS

Selecting / Playing CD, MP3 / WMA CD, MP3 / WMA SD card / USB player

MP3 CDs, SD cards or USB peripherals are the compatible sources.

- 1 Insert the audio or MP3 CD in the player, the SD card in the card reader or the USB peripheral in the USB port. Play begins automatically.



i

The list of tracks or MP3/WMA files appears under "Media" Menu.

- 2  Press this button.



- 3  When the "MEDIA" screen is displayed, turn the ring up or down to select the previous or next compatible source.




- 4  Press the MEDIA button.



- 5  Press the MEDIA button again or select the "Media" Menu function and press OK to confirm.

"Media" Menu

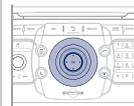


- 6  Select the "Select media" function and press OK to confirm.

Select media



- 7  Select the music source required. Press OK to confirm. Play begins.

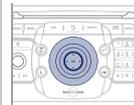

i

The playing and displaying of an MP3/WMA compilation may depend on the recording programme and/or the parameters used. We recommend the ISO 9660 recording standard.

07 MUSIC MEDIA PLAYERS

Jukebox

Copying a CD, a USB memory stick or an SD card to the hard disk

When copying is in progress, switching off the ignition will interrupt the process but it will resume directly when the ignition is switched on again.

<p>1</p> <p>Insert an audio / MP3 CD, a USB memory stick or an SD card.</p>		<p>5</p>  <p>Select the tracks required then "Rip selection" or select all of the tracks using "Rip all".</p> 
<p>!</p> <p>Check that the active MEDIA source is that of the medium used (CD, USB or SD card).</p>		<p>6</p>  <p>Select "[New folder]" to create a new folder or select an existing folder (created previously).</p> <p>[New folder]</p> 
<p>2</p>  <p>Press the MEDIA button. Press the MEDIA button again or select Media Menu and press OK to confirm.</p> 		<p>7</p>  <p>"Do you want to change the names of the tracks that will be ripped?": select "Yes" to change them or "No".</p> <p>Yes No</p> 
<p>3</p>  <p>Select "Jukebox management" then "Add files" and press OK at each step to confirm.</p> <p>Add files</p> 		<p>8</p>  <p>To copy an MP3 CD, then select "Real time ripping", "Fast ripping" / "High quality (192 kbit/sec)" or "Standard quality (128 kbit/sec)" then select "Start ripping".</p> 
<p>4</p>  <p>Select "Add files from MP3-Disc" for example and press OK to validate.</p> <p>Add files from MP3-Disc</p> 		<p>9</p>  <p>Confirm the warning message by pressing "OK" to start the copy.</p> <p>OK</p> 

07 MUSIC MEDIA PLAYERS

Jukebox Renaming or deleting an album

i Check that the active source is not the Jukebox in order to be able to rename or delete a track / folder.

1 Activate the playing of a source other than the Jukebox (CD, radio, etc...).

2  Press the MEDIA button.



3  Press the MEDIA button again or select Media Menu and press OK to confirm.



4  Select "Jukebox management" and press OK to confirm.

Jukebox management



5  Select "Modify content" and press OK confirm.

Modify content



Playing the jukebox

1  Press the MEDIA button.
Press the MEDIA button again or select Media Menu and press OK to confirm.



2  Select "Jukebox management" and press OK to confirm.



3  Select "Play options" and press OK to confirm.
Select "Folders & Files" or "Playlists" then press OK to confirm.



 Press the ESC button to return to the first file level.
Playlists can be created in the Jukebox.
Media Menu> Jukebox management> Create new playlist. Add the tracks required one by one then save the change. The "Playlists" play mode must then be selected.

07 MUSIC MEDIA PLAYERS

Viewing a video DVD

1

Insert the DVD in the player. Play begins automatically.



2



If the DVD does not appear on the screen, press the MODE button to gain access to the "MEDIA" screen which displays the DVD screen.



3



Press the MEDIA button to gain access to the DVD menu at any time, or to the functions of the Media Menu which adjust the video (brightness/contrast, image format...).



The 4-direction navigator and the chromed ring allow you to move the DVD selection cursor. Change chapter by pressing the ►► or ◀◀ button.

!

Select the video source required ("DVD-Video", "External device (AV)"). Press OK to confirm. Play begins.

Using an external device (AUX)

Audio / Video / RCA cable not supplied

1

Connect the portable device (MP3 player, camcorder, camera...) to the RCA sockets (white and red for audio; yellow for video) in the glove box using a JACK/RCA audio cable.

2



Press the MEDIA button then press it again or select the Media Menu function and press OK to confirm.



!

If the external input is not activated, select "Ext. Device (Aux) management" to activate it.

3



Select "Select media" then "External device (AV)" and press OK to activate it.

External device



4



Select the AUX music source and press OK to confirm. Play begins automatically.



!

The display and management of the controls is via the portable device.

08 USING THE TELEPHONE

Choosing between the Bluetooth telephone / internal telephone

1



To activate the Bluetooth telephone or the internal telephone, press PICK UP.



2



Select Phone menu, then "Select phone" then choose between "Telephone off", "Use Bluetooth phone" or "Use internal phone". Press OK at each step to confirm.



!

The system can only be connected to one Bluetooth telephone and one SIM card (Internal telephone) at the same time.
In this case, the phone book is synchronised with the Bluetooth telephone.

08 USING THE TELEPHONE

Pairing a Bluetooth telephone / First connection

* The services available via the telephone depend on the network, the SIM card and the compatibility of the Bluetooth device used. Refer to your telephone's manual and your operator to check which services you have access to.



For safety reasons and because they require prolonged attention on the part of the driver, the operations for pairing the Bluetooth mobile telephone to the hands-free system of the PEUGEOT Connect Media Navigation (NG4 3D) must be carried out with the vehicle stationary and the ignition on. Visit www.peugeot.co.uk for more information (compatibility, more help, ...).

1

Activate the telephone's Bluetooth function and ensure that it is "visible to all" (refer to the telephone instructions).



2



Press the CALL button.



3



If no telephone has been paired, the system prompts you to "Connect phone". Select "Yes" and press OK to confirm.



4



Select "Search phone" and press OK to confirm. Then select the name of the telephone.


Search phone



5



Enter the authentication code on the telephone. The code to be entered is displayed on the screen of the system.

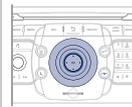


Once the telephone has been connected, the PEUGEOT Connect Media Navigation (NG4 3D) can synchronise the address book and the call list. This synchronisation may take a few minutes*.



To pair another telephone, press the TEL button, then select Phone menu, then "Select phone" then "Connect Bluetooth phone" then select the telephone required.

Press OK at each step to confirm.

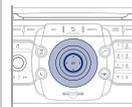

Pairing can be started from the telephone (refer to the telephone instructions).



To delete a pairing, press TEL, select "Connect phone" then "Delete pairing".

08 USING THE TELEPHONE

Connecting a Bluetooth telephone

* The services available via the telephone depend on the network, the SIM card and the compatibility of the Bluetooth device used. Refer to your telephone's manual and your operator to check which services you have access to. A list of mobile telephones which offer the best range of services is available from dealers.



For safety reasons and because they require prolonged attention on the part of the driver, the operations for pairing the Bluetooth mobile telephone to the hands-free system of the PEUGEOT Connect Media Navigation (NG4 3D) must be carried out with the vehicle stationary and the ignition on.



Once the telephone has been connected, the PEUGEOT Connect Media Navigation (NG4 3D) can synchronise the address book and the call list. This synchronisation may take a few minutes*.

1

Activate the telephone's Bluetooth function and ensure that it is visible to all.



2



Press the PICK UP button.



The list of telephones connected previously (maximum of 4) appears in the multifunction screen. Select the telephone required then select "Connect phone" for a new connection. Select "Delete pairing" to cancel the connection to the telephone.

08 USING THE TELEPHONE

Using the internal telephone with a SIM card


If you have declined to use the internal telephone for personal calls, you can still connect a Bluetooth telephone to receive your calls on the vehicle's audio system.

1



Extract the holder by pressing the eject button.

2

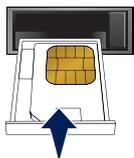

Install the SIM card in the holder and then insert it in the slot.

3

To remove the SIM card, repeat step 1.


i

For safety reasons and because they require prolonged attention on the part of the driver, the SIM card installation operations must be carried out when stationary.

4



Enter the PIN code on the keypad then select OK and confirm.

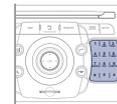

Remember PIN



When entering your PIN code, tick the "Remember PIN" tab to allow use of the telephone without having to enter this code when it is used subsequently.

5



The system asks "Do you want to switch to the internal phone?", select "Yes" if you wish to use your SIM card for your personal calls. Otherwise, only the emergency call and the services will use the SIM card.




Once the SIM card has been installed, the system can synchronise the address book and the call list. This synchronisation may take a few minutes.

08 USING THE TELEPHONE

Receiving a call

1 An incoming call is announced by a ring and a superimposed display in the screen.

2 Select the "Yes" tab to accept or "No" to refuse and confirm by pressing OK.

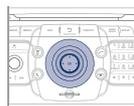

Yes No

The PICK UP button accepts, the HANG UP button rejects the incoming call.

3 To hang up, press the HANG UP button or press OK and select "End call" then confirm by pressing OK.



End call

Press the end of the steering mounted control to accept the call or end the call in progress.



Operating the telephone while driving is prohibited. It is recommended that you park safely or use in preference the steering mounted controls.

Making a call

1 Press the PICK UP button.




The list of the last 20 calls made and received in the vehicle appears under Phone menu. You can select a number and press OK to make the call.

2 Select the Phone menu function and press OK to confirm.




Phone menu

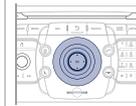

3 Select "Dial number", then dial the telephone number using the virtual keypad.




Dial number

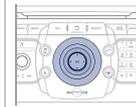

It is also possible to select a number from the address book. You can select "Dial from address book". The PEUGEOT Connect Media can record up to 4 096 entries.

It is always possible to start a call directly from the telephone; park the vehicle as a safety measure.

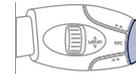

Press the end of the steering mounted control for more than two seconds to open the address book.

09 SCREEN MENU MAP(S)



MAIN FUNCTION

1

OPTION A

2

option A1

3

option A2

3

OPTION B...

2

4

Within 6 miles (10 km)

4

Within 30 miles (50 km)

2

Read out settings

3

On confirmation

3

Incoming messages

2

TMC station information



"Traffic" Menu

1

Select preferred list

2

Messages on route

3

Only warnings on route

3

All warning messages

3

All messages

3

Geo. Filter

3

Deactivate PIN

4

Within 2 miles (3 km)

4

Within 3 miles (5 km)

4



"Media" Menu

1

Select media

2

Audio CD / MP3-Disc / DVD-Audio / DVD-Video

3

Jukebox (Folders & Files)

3

SD-Card

3

USB

3

External device (audio/AV)

3

Jukebox management

2

Add files

3

3

Create folder

3

Modify content

3

Edit playlist

3

Play options

4

Folders & Files

4

Playlists

3

Memory capacity

2

Sound settings

3

Refer to the "Sound settings" menu details of which are shown on the next page.

2

Video settings

3

Aspect ratio

3

Menu language

3

Display

4

Brightness

4

Contrast

4

Colour

4

- 3 AUX standard
- 3 Reset video settings
- 2 Ext. Device (Aux) management
- 3 Off / Audio / Audio and Video (AV)



"Radio" Menu

- 1 Waveband
- 2 FM
- 3 AM
- 2 Manual tune
- 2 Sound settings
- 3 Refer to the "Sound settings" menu below.

"Sound settings" Menu

- 1 Balance / Fader
- 2 Bass / Treble
- 2 Equalizer
- 3 Linear

- 3 Classic
- 3 Jazz
- 3 Rock/Pop
- 3 Techno
- 3 Vocal

- 2 Mute rear speakers
- 2 Loudness
- 2 Speed dependent volume
- 2 Reset sound settings



"Navigation" Menu

- 1 Abort guidance / Resume guidance
- 2 Destination input
- 3 Address input
- 4 Country
- 4 City
- 4 Street
- 4 House number

- 4 Start route guidance
- 4 Postal code
- 4 Save to address book
- 4 Intersection
- 4 City district
- 4 Geo position
- 4 Map
- 3 Navigate HOME
- 3 Choose from last destinations
- 3 Choose from address book
- 2 Stopovers
- 3 Add stopover
- 4 Address input
- 4 Navigate HOME
- 4 Choose from address book
- 4 Choose from last destinations
- 3 Rearrange route
- 3 Replace stopover
- 3 Delete stopover

3 **Recalculate**

4 Fast route

4 Short route

4 Optimized route

2 **POI search**

3 **POI nearby**

3 **POI near destination**

3 **POI in city**

3 **POI in country**

3 **POI near route**

2 **Route options**

3 **Route type**

4 POI near destination

4 Short route

4 Optimized route

4 Subscr. service

2 **Settings**

3 **Route dynamics**

4 Traffic independent

4 Semi-dynamic

4 Dynamic

3 **Avoidance criteria**

4 Avoid motorways

4 Avoid toll roads

4 Avoid tunnels

4 Avoid ferries

3 **Recalculate**



1 **"Address book" Menu**

2 **Create new entry**

2 **Show memory status**

2 **Export address book**

2 **Delete all voice entries**

2 **Delete all entries**

2 **Delete folder "My Addresses"**



1 **"Phone" menu**

2 **Dial number**

2 **Dial from address book**

2 **Call lists**

2 **Messages**

2 **Select phone**

3 **Telephone off**

3 **Use Bluetooth phone**

3 **Use internal phone**

3 **Connect Bluetooth phone**

4 Search phone

5 Disconnect phone

5 Rename phone

5 Delete pairing

5 Delete all pairings

5 Show details

2 **Settings**

3 **Automatic answering system**

3 **Select ring tone**

3 **Phone / Ring tone volume**

3 **Enter mailbox number**

3 **Internal phone settings**

3 **Automatically accept call**

3 **Signal waiting call (?)**

3 **Show status**

3 **Activate waiting call**

3 **Deactivate waiting call**

3 **Call forward (?)**

3 **Show status**

3 **Activate call forward**

3 **Deactivate call forward**

3 **Suppress own number**

3 **Select network**

3 **Set network automatically**

3 **Set network manually**

3 **Search for networks**

3 **PIN settings**

3 **Change PIN**

4 **Activate PIN**

4 **Deactivate PIN**

3 **Remember PIN**

3 **SIM-card memory status**



1 **"SETUP" Menu**

2 **Language & Speech**

3 **Menu language**

4 **Deutsch**

4 **English**

4 **Español**

4 **Français**

4 **Italiano**

4 **Nederlands**

4 **Polski**

4 **Portuguese**

3 **Voice control**

4 **Voice control active**

4 **Tutorial**

5 **Basics**

5 **Examples**

5 **Tips**

4 **Speaker adaptation**

5 **New speaker adaptation**

5 **Delete speaker adaptation**

3 **Voice output volume**

2 **Date & Time**

3 **Set date & time**

3 **Date format**

3 **Time format**

2 **Display**

3 **Brightness**

3 **Colour**

4 Steel

4 blue light (only in day mode)

4 Orange Ray

4 Blue Flame

3 **Map colour**

4 Day mode for map

4 Night mode for map

4 Auto. Day/Night for map

2 **Units**

3 **Temperature**

4 Celsius

4 Fahrenheit

3 **Metric / Imperial**

4 km

4 Miles

2 **System**

3 **Factory reset**

3 **Software version**

3 **Automatic scrolling**

FREQUENTLY ASKED QUESTIONS

The table below groups together the answers to the most frequently asked questions concerning the PEUGEOT Connect Media Navigation (NG4 3D).


QUESTION	ANSWER	SOLUTION
<p>There is a difference in sound quality between the different audio sources (radio, CD...).</p>	<p>For optimum sound quality, the audio settings (Volume, Bass, Treble, Ambience, Loudness) can be adapted to the different sound sources, which may result in audible differences when changing source (radio, CD...).</p>	<p>Check that the audio settings (Volume, Bass, Treble, Ambience, Loudness) are adapted to the sources listened to. It is advisable to set the AUDIO functions (Bass, Treble, Front-Rear Balance, Left-Right Balance) to the middle position, select the musical ambience "Linear" and set the loudness correction to the "Active" position in CD mode or to the "Inactive" position in radio mode.</p>
<p>The CD is ejected automatically or is not played by the player.</p>	<p>The CD is inserted upside down, is unplayable, does not contain any audio data or contains an audio format which the player cannot play. The CD is protected by an anti-pirating protection system which is not recognised by the audio equipment.</p>	<ul style="list-style-type: none"> - Check that the CD is inserted in the player the right way up. - Check the condition of the CD: the CD cannot be played if it is too damaged. - Check the content in the case of a recorded CD: consult the advice in the "Audio" section. - The audio equipment's CD player does not play DVDs. - Due to inadequate quality, certain recorded CDs will not be played by the audio system.
<p>The CD player sound is poor.</p>	<p>The CD used is scratched or of poor quality.</p>	<p>Insert good quality CDs and store them in suitable conditions.</p>
	<p>The audio equipment settings (bass, treble, ambiences) are unsuitable.</p>	<p>Set the treble or bass level to 0, without selecting an ambience.</p>


QUESTION	ANSWER	SOLUTION
The stored stations do not function (no sound, 87.5 Mhz is displayed...).	An incorrect waveband is selected.	Press RADIO, select Radio Menu then "Waveband" to return to the waveband on which the stations are stored.
The quality of reception of the radio station listened to gradually deteriorates or the stored stations do not function (no sound, 87.5 Mhz is displayed...).	The vehicle is too far from the transmitter used by the station listened to or there is no transmitter in the geographical area through which the vehicle is travelling.	Activate the "RDS" function by means of the short-cut menu to enable the system to check whether there is a more powerful transmitter in the geographical area.
	The environment (hills, buildings, tunnels, basement car parks...) block reception, including in RDS mode.	This phenomenon is normal and does not indicate a failure of the audio equipment.
	The aerial is absent or has been damaged (for example when going through a car wash or into an underground car park).	Have the aerial checked by a PEUGEOT dealer.
Sound cut-outs of 1 to 2 seconds in radio mode.	During this brief sound cut-out, the RDS searches for any frequency permitting better reception of the station.	Deactivate the "RDS" function by means of the short-cut menu if the phenomenon is too frequent and always on the same route.
With the engine off, the system switches off after a few minutes of use.	When the engine is switched off, the system's operating time depends on the battery charge. The switch-off is normal: the system switches to economy mode and switches off to prevent discharging of the vehicle's battery.	Start the vehicle's engine to increase the battery charge.

QUESTION	ANSWER	SOLUTION
<p>"TA" is selected. However, certain traffic jams along the route are not indicated in real time.</p>	<p>On starting, it is several minutes before the system begins to receive the traffic information.</p>	<p>Wait until the traffic information is being received correctly (displaying of the traffic information symbols on the map).</p>
	<p>In certain countries, only major routes (motorways...) are listed for the traffic information.</p>	<p>This phenomenon is normal. The system is dependent on the traffic information available.</p>
<p>The time taken to calculate a route sometimes seems longer than usual.</p>	<p>The performance of the system may slow down temporarily if a CD/DVD is being copied onto the Jukebox at the same time as a route is being calculated.</p>	<p>Wait until the CD/DVD has been copied or stop the copying before starting the guidance function.</p>
<p>The "Risk areas" audible warning does not work.</p>	<p>The audible warning is not active.</p>	<p>Activate the audible warning on Navigation Menu, Settings, Set parameters for risk areas.</p>
	<p>The alert volume is set to minimum.</p>	<p>Increase the volume of the alert when passing a "Risk area".</p>
<p>Does the emergency call function work without a SIM card?</p>	<p>No, as certain national regulations impose the presence of a SIM card in order to make an emergency call.</p>	<p>Insert a valid SIM card in the slot.</p>
<p>The altitude is not displayed.</p>	<p>On starting, the initialisation of the GPS may take up to 3 minutes to receive more than 4 satellites correctly.</p>	<p>Wait until the system has started up completely. Check that there is a GPS coverage of at least 4 satellites (long press on the SETUP button, then select "GPS coverage").</p>
	<p>Depending on the geographical environment (tunnel...) or the weather, the conditions of reception of the GPS signal may vary.</p>	<p>This phenomenon is normal. The system is dependent on the conditions of reception of the GPS signal.</p>

QUESTION	ANSWER	SOLUTION
The route calculation is not successful.	The exclusion criteria may conflict with the current location (exclusion of toll roads on a toll motorway).	Check the exclusion criteria on the Navigation Menu ("Route options" - "Avoidance criteria").
There is a long waiting period following the insertion of a CD.	When a new medium is inserted, the system reads a certain amount of data (directory, title, artist, etc.). This may take a few seconds.	This phenomenon is normal.
I cannot connect my Bluetooth telephone.	The telephone's Bluetooth function may be switched off or the equipment may not be visible.	<ul style="list-style-type: none"> - Check that your telephone's Bluetooth function is switched on. - Check that your telephone is visible.
	The Bluetooth telephone is not compatible with the system.	A list of compatible Bluetooth mobile telephones is available from the dealer network.
The volume of the telephone connected in Bluetooth mode is inaudible.	The volume depends both on the system and on the telephone.	Increase the volume of the PEUGEOT Connect Media Navigation (NG4 3D), to maximum if required, and increase the volume of the telephone if necessary.
The system does not play the DVD.	The region protection may not be compatible.	Insert DVDs which have compatible region protection.
I cannot copy the CD to the Jukebox.	The wrong source is selected.	Change the active source to CD.
	The CD is copy-protected.	It is normal that a protected CD cannot be copied.

QUESTION	ANSWER	SOLUTION
The system does not receive SMS.	The Bluetooth mode does not permit sending of the SMS to the system.	Use your SIM card and the internal telephone.
	The SIM card used is a twin card.	Use the original SIM card to receive the SMS.
I cannot update the risk area POIs.	The Navigation Menu - "Update personal POI" is not displayed.	Check that the medium used for the update (SD card or USB memory stick) is inserted correctly.
	An error message is displayed at the end of the procedure.	<ul style="list-style-type: none"> - Start the procedure again in full. - Consult a PEUGEOT dealer if the problem persists. - Check that the data on the MEDIUM is supplied by an official partner of PEUGEOT.
The voice frequencies (DTMF) are not active when I am communicating and I press numbers on the keypad.	The numeric buttons on the keypad are only active for calls if the display is in telephone mode.	To activate them, press the MODE button until the telephone is displayed on the screen.
An risk area which does not concern me is displayed on the screen.	The risk areas are displayed near a point defined on the map and in relation to a direction of travel.	The alert may be triggered when travelling under a road or near a road which is a Risk area.

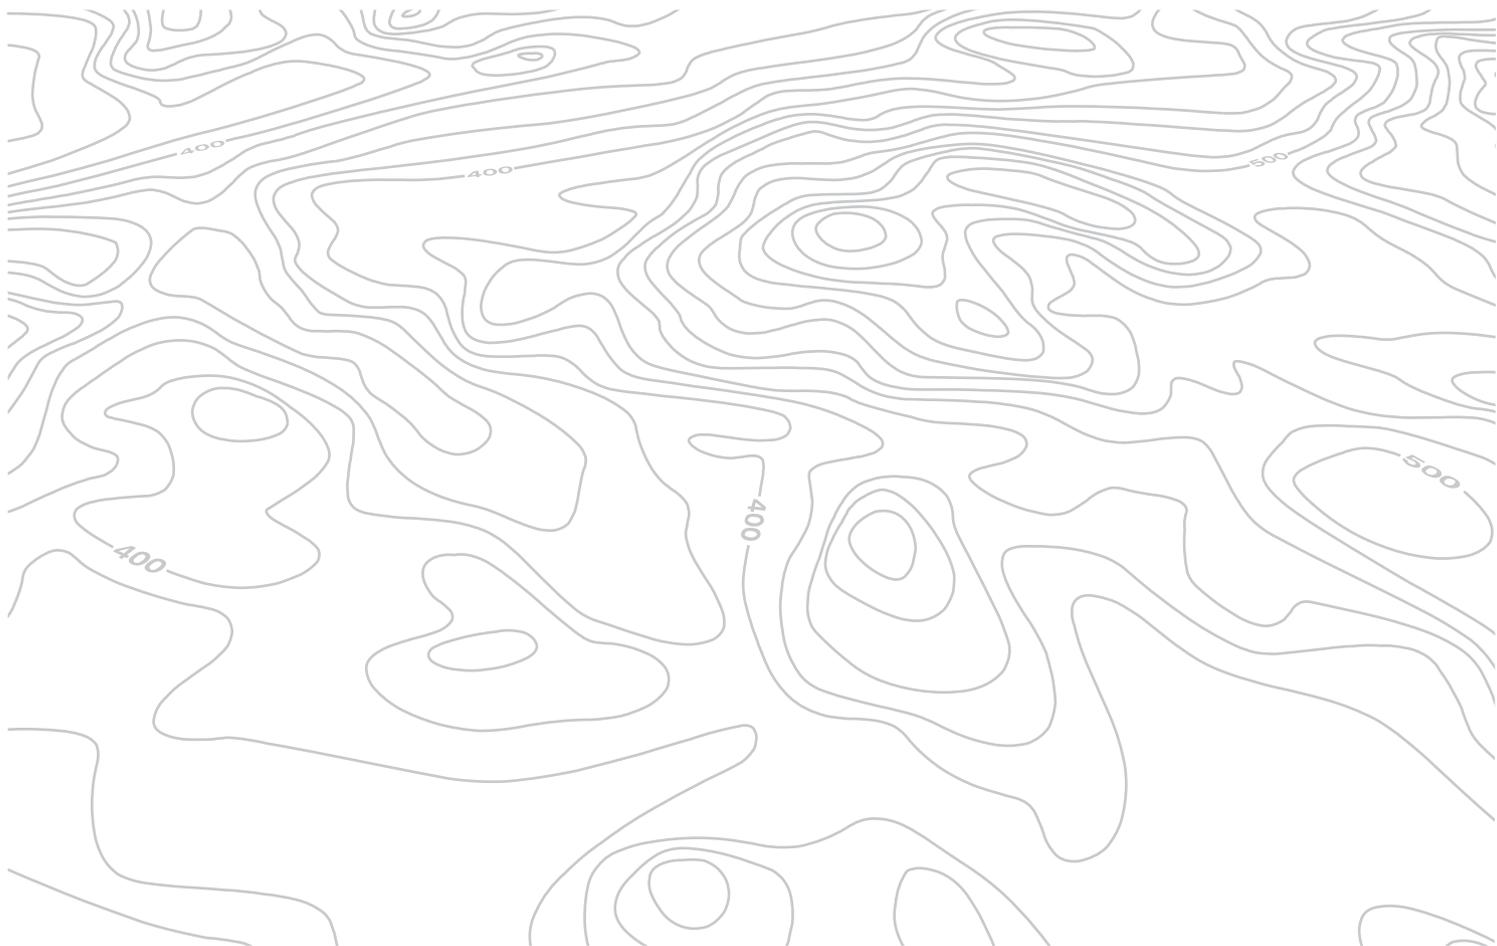

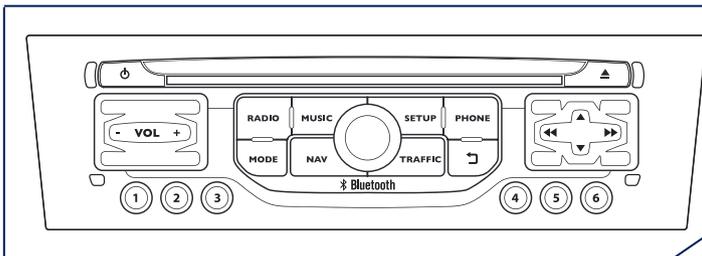

PEUGEOT Connect Navigation (RT6)

SATELLITE NAVIGATION SYSTEM

MULTIMEDIA BLUETOOTH

TELEPHONE AUDIO SYSTEM



The system is protected in such a way that it will only operate in your vehicle.



For safety reasons, the driver must only carry out operations which require prolonged attention while the vehicle is stationary.

When the engine is switched off and to prevent discharging of the battery, the system switches off following the activation of the energy economy mode.

CONTENTS

01 First steps - Control panel	p. 256
02 Steering mounted controls	p. 258
03 General operation	p. 259
04 Navigation - Guidance	p. 261
05 Traffic information	p. 274
06 Using the telephone	p. 277
07 Radio	p. 287
08 Music media players	p. 291
09 Audio settings	p. 297
10 Configuration	p. 298
11 Screen menu map	p. 299
Frequently asked questions	p. 303

01 FIRST STEPS

Selection and confirmation OK dial:

Selection of an item on the screen or in a list or a menu, then confirmation with a short press.

Other than for menus and lists, a short press displays a contextual menu depending on the current screen.

Rotation with map displayed: zoom the map scale in and out.

Short press without the engine running: on / off.

Short press with the engine running: audio source off / restore.

Volume adjustment (each source is independent, including TA messages and navigation instructions).

MODE button: Selection of the type of permanent display.

Long press: black screen (DARK).

Access to the **"Navigation - guidance"** menu and display the recent destinations.

Open the **"Traffic information"** menu and display the current traffic alerts.

Abandon the current operation, up one level in the menu.

Long press: return to the permanent display.

Select:


- the previous/next line in a list or menu.
- the previous / next media folder.
- step by step selection of the previous/next radio frequency.
- the previous / next MP3 folder.

Move up/down, in **"Move the map"** mode.

Select:

- the next lower / higher radio frequency automatically.
- the previous / next CD track, MP3 track or media.
- the left / right of the screen when a menu is displayed.

Move left / right in **"Move the map"** mode.

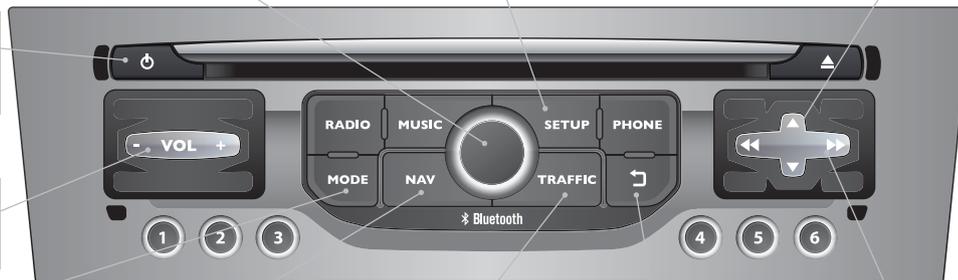


01 FIRST STEPS

Access to the **"RADIO"** menu and display the list of stations received.
Long press: display the audio settings screen for the radio tuner source.

Access to the **"MUSIC"** menu, and display of the CD/MP3/Apple® tracks and folders.
Long press: display the audio settings screen for the **"MEDIA (CD/USB/iPod/Streaming/AUX)"** sources.

Open the **"Telephone"** menu and display the list of recent calls or accept an incoming call.

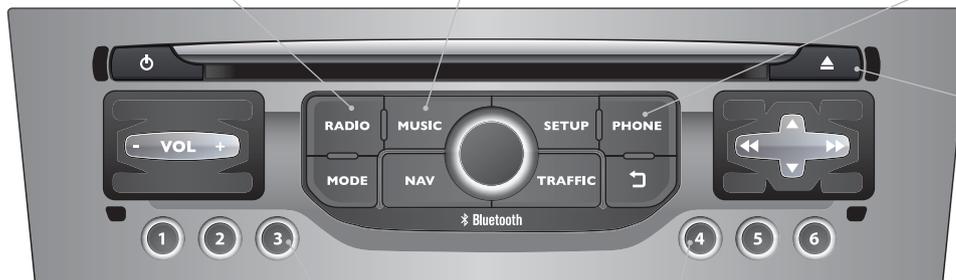

Continuous press: reinitialisation of the system.

Short press: select pre-set radio station.
Long press: pre-set the current station.

02 STEERING MOUNTED CONTROLS

RADIO: change to the next radio station in the list.
Long press: automatic search for a higher frequency.
CD: select the next track.
CD: continuous press: fast forward play.

SRC/TEL button:
change the audio source,
start a call from the address book,
call/end call on the telephone,
press for more than 2 seconds: access
to the address book.



RADIO: change to the previous radio
station in the list.
Long press: automatic search for a
lower frequency.
CD: select the previous track.
CD: continuous press: fast reverse.

RADIO: select the previous/next preset
station.
Select the next entry in the address book.



Volume increase.

Volume decrease.

Mute: press the volume
increase and decrease
buttons simultaneously.
Restore the sound by
pressing one of the
two volume buttons.

03 GENERAL OPERATION

MODE



Press the **MODE** button several times in succession for access to the following displays:

"**RADIO**"



"**TELEPHONE**"

(If conversation in progress)

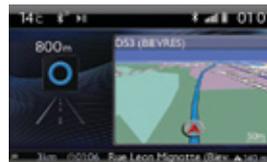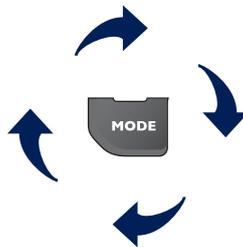

"**MAP IN WINDOW**"

(If navigation guidance in progress)



"**FULL SCREEN MAP**"

SETUP

SETUP: PARAMETERS

date and time, display configuration, sound, vehicle settings.

RADIO

MUSIC

Changing the audio source:

RADIO: RADIO broadcasts.

MUSIC: playing MUSIC.



For cleaning the screen, the use of a soft, non-abrasive cloth (spectacles cloth) is recommended, with no additional product.



For the details of the menus, refer to the "Screen menu map" section.

03 GENERAL OPERATION

Display according to context



A press on the knob gives access to short-cut menus according to the display in the screen.

RADIO:

- 1 Activate / Deactivate TA
- 1 Activate / Deactivate RDS
- 1 Change waveband
 - 2 FM
 - 2 AM
- 1 TA

TELEPHONE (call in progress):

- 1 Private mode
- 1 Put call on hold

- 1 DTMF ring tones
- 1 Hang up

MUSIC MEDIA PLAYERS, CD or USB (according to media):

Play modes:

- 1 Normal
- 1 Random
- 1 Random on all media
- 1 Repetition

FULL SCREEN MAP OR IN A NEW WINDOW:

- 1 Stop / Restore guidance

1 Select destination

- 2 Enter an address
- 2 Directory
- 2 GPS coordinates
- 1 Divert route
- 1 Move the map
 - 2 Info. on location
 - 2 Select as destination
 - 2 Select as stage
 - 2 Save this place (contacts)
 - 2 Quit map mode
- 1 Guidance criteria

04 NAVIGATION - GUIDANCE

Access to the "Navigation" menu



Press **NAV**.

A short press on the end of the lighting control stalk repeats the last navigation message.



To make full use of all of the functions of your navigation system, update the mapping regularly. Contact a PEUGEOT dealer or order your mapping update at <http://peugeot.navigation.com>

To delete the list of recent destinations, select "**Guidance options**" in the navigation menu then select "**Delete last destinations**" and confirm. Select "**Yes**" then confirm. Deleting just one destination is not possible.

Go from the list to the menu (left/right).











or



04 NAVIGATION - GUIDANCE



Selecting a destination

Towards a new destination

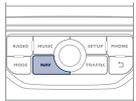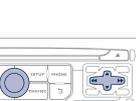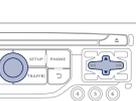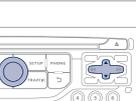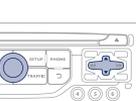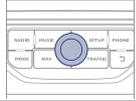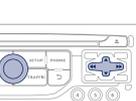
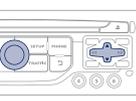
<p>1</p> 	<p>Press NAV to display the "Navigation - guidance" menu.</p>		<p>6</p> 	<p>Select the town from the list offered, then confirm. A pre-set list (by entering the first few letters) of the towns in the country selected can be accessed directly by selecting and confirming "List" in the screen.</p>	
<p>2</p> 	<p>Select "Select destination" and confirm, then select "Enter an address" and confirm.</p>		<p>7</p> 	<p>If possible, enter the "Road" and "N°/X" information in the same way.</p>	
<p>3</p> 	<p>Select the "Country" function then confirm.</p>		<p> Select "Archive" to save the address entered in a contact file. The system allows up to 400 contact files to be recorded.</p>		
<p>4</p> 	<p>Select the "Town" or "Post code" function then confirm.</p>		<p>8</p> 	<p>Confirm "OK" to start guidance.</p>	
<p>5</p> 	<p>Select the letters in the name of the town or the characters in a post code one at a time, confirming each one with the knob.</p>		<p>9</p> 	<p>Select the guidance criteria: "Fastest route", "Shortest route" or optimised "Distance/Time", then select the desired restriction criteria: "With tolls", "With Ferry", or "Traffic info" then confirm "OK".</p>	

04 NAVIGATION - GUIDANCE




Towards a recent destination

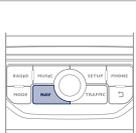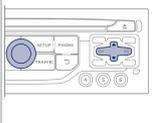-  Press **NAV** to display the "**Navigation - guidance**" menu. 
-  Select the desired destination and confirm to start guidance. 

Delete recent destinations

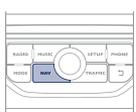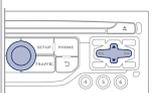-  Press **NAV** to display the "**Navigation - guidance**" menu. 
-  Select "**Options**" and confirm and then "**Delete recent destinations**" and confirm. 

Towards a contact in the contacts directory

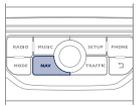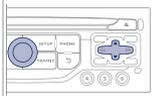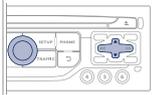- i** Navigation towards a contact is only possible if it has an address entered in the audio navigation system.
-  Press **NAV** to display the "**Navigation - guidance**" menu. 
 -  Select "**Select destination**" and confirm, then select "**Directory**" and confirm. 
 -  Selection the desired destination from your contacts and confirm "**OK**" to start the guidance. 


04 NAVIGATION - GUIDANCE

Towards GPS coordinates

1




Press **NAV** to display the "Navigation - guidance" menu.

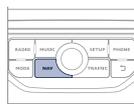

2




Select "**Select destination**" and confirm, then select "**GPS coordinates**" and confirm.

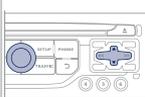

3



Enter the GPS coordinates and confirm "**OK**" to start the guidance.

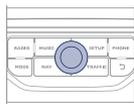


Towards a point on the map

1




With the map displayed, press **OK** to display the contextual menu. Select "**Move the map**" and confirm.

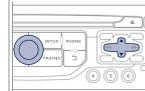

2




Move the cursor using the control to identify the desired destination.

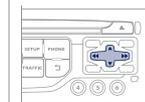

3




Press **OK** to display the contextual menu for "**Move the map**" mode.

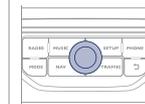

4



Select "**Select as destination**" or "**Select as stage**" and confirm.

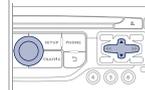

04 NAVIGATION - GUIDANCE


Towards points of interest (POI)

The points of interest (POI) indicate all of the service locations in the vicinity (hotels, various businesses, airports...).

1




Press **NAV** to display the "Navigation - guidance" menu.

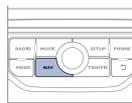

2



Select the "Enter an address" function and confirm, then select **Select destination** and confirm.

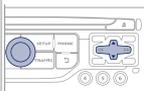

3



To select a POI close to your current location, select **"POI"** and confirm, then select **"Around the current place"** and confirm.

To select a POI as a stage on the route, select **"POI"** and confirm, then select **"On the route"** and confirm.

To select a POI as a destination, first enter the country and town (see "Towards a new destination"), select **"POI"** and confirm, finally select **"Near"** and confirm.




Select **"Search by Name"** to search for POIs by name and not by proximity.

4




Search for POIs in the categories suggested in the following pages.

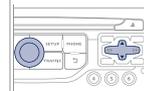

5



Select the POI and confirm **"OK"** to start the guidance.

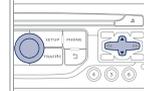

04 NAVIGATION - GUIDANCE

This icon appears when several POIs are grouped together in the same area. Zooming in on this icon shows details of the POIs.



List of principal points of interest (POI)

-  Service station
-  Garage
-  PEUGEOT
-  Covered car park
-  Car park
-  Rest area
-  Hotel
-  Restaurant
-  Cafeteria
-  Bed and breakfast

-  Airport
-  Railway station
-  Bus station
-  Port
-  Industrial estate
-  Supermarket
-  Vending machine
-  Sports complex, sports centre, sports ground
-  Swimming pool
-  Winter sports resort




-  Cinema
-  Theme parks
-  Hospital, Chemist, Vet
-  Police station
-  School
-  Town hall
-  Post office
-  Museum, Culture, Theatre, Historic monument
-  Tourist information, Tourist attraction
-  Risk areas / Danger areas*

An annual mapping update allows new points of interest to be presented to you. You can also update the Risk areas / Danger areas every month. The detailed procedure is available on: <http://peugeot.navigation.com>.

* According to availability in the country.

04 NAVIGATION - GUIDANCE

Settings for risk area / danger area alerts
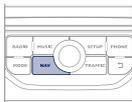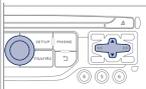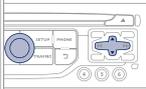
<p>1</p>  <p>Press NAV to display the "Navigation - guidance" menu.</p>	
<p>2</p>  <p>Select "Guidance options" and confirm, then select "Set parameters for risk areas" and confirm.</p>	
<p>3</p>  <p>Select:</p> <ul style="list-style-type: none">- "Visual alert"- "Audible alert"- "Alert only in guidance"- "Overspeed alarm only". <p>The choice of time of notification defines how long in advance that Risk area warnings are given.</p> <p>Select "OK" to confirm the screen.</p>	





!

These functions are only available if risk areas have been downloaded and installed on the system.




The detailed procedure for updating risk area POIs can be found at <http://peugeot.navigation.com>.

04 NAVIGATION - GUIDANCE

Adding a stage
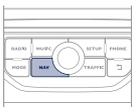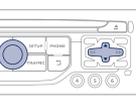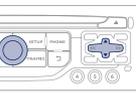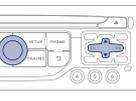
<p>1</p> 	<p>Press NAV to display the "Navigation - guidance" menu.</p>	
<p>2</p> 	<p>Select "Journey leg and route" then confirm.</p>	
<p>3</p> 	<p>Select "Add a stage" then confirm. The address of the stage is entered as a destination, by "Enter an address", a contact in "Directory", or "Previous destinations".</p>	
<p>4</p> 	<p>Select "Close to" a route passing close to the stage or "Strict" for a route passing through the stage. Confirm "OK" to start the guidance, and give a general indication of the guidance route.</p>	

Organising stages
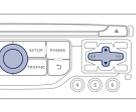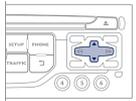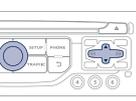
<p>1</p> 	<p>To organise stages, carry out operations 1 to 2 again, then select "Order/delete journey legs" and confirm.</p>	
<p>2</p> 	<p>Select the stage that you want to move in the order.</p>	
<p>3</p> 	<p>Select and confirm to save the modifications.</p>	
	<p>Select "Delete" to delete the stage.</p>	

04 NAVIGATION - GUIDANCE


Route options

Calculation criteria

1




Press **NAV** to display the "Navigation - guidance" menu.

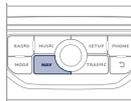

2



Select "**Guidance options**" and confirm.

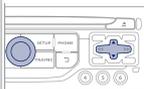


3



Select "**Define calculation criteria**" and confirm.

This function allows modification of:

- the guidance criteria: ("**Fastest route**", "**Shortest route**", "**Distance/Time**"),
- the exclusion criteria: ("**With tolls**" or "**With Ferry**"),
- traffic avoidance: ("**Traffic info**").

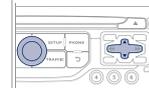

i

If traffic avoidance (Traffic info) is selected, the system suggests an alternative route if there is a delay on the guidance route.

4



Select "**OK**" and confirm to save the modifications.



04 NAVIGATION - GUIDANCE


Map management

Selecting the points of interest displayed on the map

1




Press **NAV** to display the "Navigation - guidance" menu.

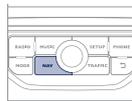

2




Select "**Map management**" and confirm.

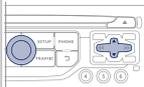

3




Select "**Map details**" and confirm.

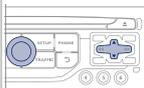

4



Select from the various categories the ones that you want to display on the screen.

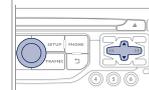


Select "**Default**" to have only "**Filling stations, garages**" and "**Risk areas**" appear on the map (if installed in the system).

5



Select "**OK**" then confirm and select "**OK**" again then confirm to save the modifications.

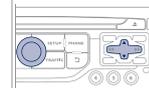


04 NAVIGATION - GUIDANCE

Map orientation

1




Press NAV to display the "Navigation - guidance" menu.

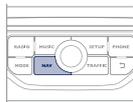

2




Select "Map management" and confirm.

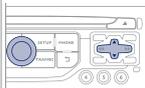

3



Select "Map orientation" and confirm.

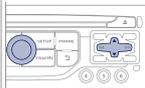


4



Select:

- "Vehicle direction" to have the map follow the direction of travel,
- "North direction" to keep the map always North up,
- "Perspective view" to display a perspective view.

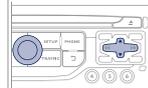

The colour of the map, different from the day and night mode, is configured in the "SETUP" menu.



Street names are visible on the map from the 100 m scale.

04 NAVIGATION - GUIDANCE

Navigation voice synthesis

Adjusting the volume / Deactivation



The volume of messages can be adjusted during the transmission of the message using the volume adjustment control.




The volume setting of guidance messages is also accessible via the **"SETUP"** / **"Voice synthesis"** menu.

1




Press **NAV** to display the **"Navigation - guidance"** menu.

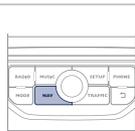

2




Select **"Guidance options"** and confirm.

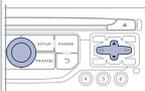

3




Select **"Set speech synthesis"** and confirm.

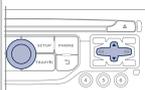

4




Select the volume graph and confirm.

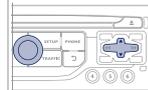

5



Adjust the volume to the desired level and confirm.

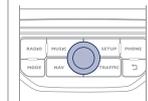


Select **"Deactivate"** to deactivate voice messages.

6



Select **"OK"** and press the dial to confirm.

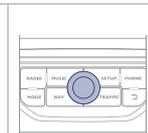


04 NAVIGATION - GUIDANCE

Male voice / Female voice

1




Press **SETUP** to display the configuration menu.

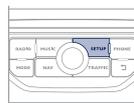

2




Select "**Voice synthesis**" and confirm.

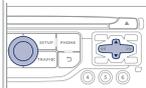

3



Select "**Select male voice**" or "**Select female voice**" then confirm "**Yes**" to activate a male or female voice. The system restarts.

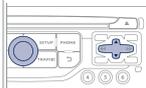


05 TRAFFIC INFORMATION

Access to the "Traffic information" menu



Press "TRAFFIC".

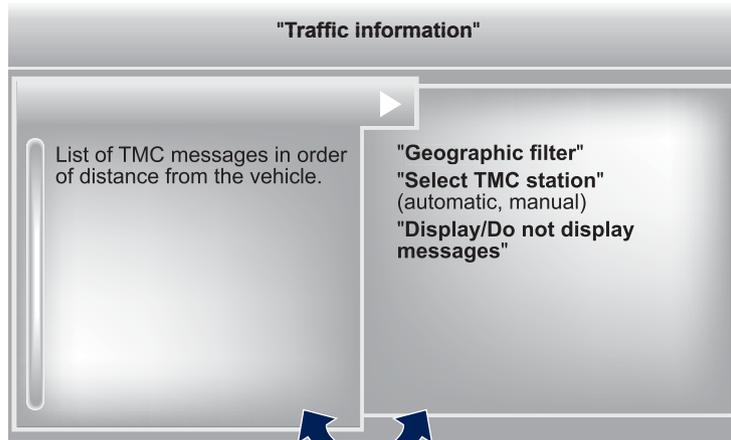

List of TMC messages in order of distance from the vehicle.

"Geographic filter"
"Select TMC station"
(automatic, manual)
"Display/Do not display messages"



Go from the list to the menu (left/right).



or



05 TRAFFIC INFORMATION

Configure the filtering and display of TMC messages


TMC (Traffic Message Channel) messages contain information on traffic and weather conditions, received in real time and transmitted to the driver in the form of audible announcements and symbols on the navigation map.

The navigation system can then suggest an alternative route to avoid a traffic problem.

1




Press the **TRAFFIC** button to display the "Traffic information" menu.

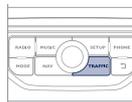

2



Select the "**Geographic filter**" function and confirm.

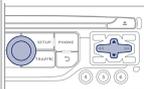


3



The system offers a choice of:


- "Retain all the messages",
- or
- "Retain the messages"
- "Around the vehicle", (confirm the mileage to modify and select the distance),
- "On the route".

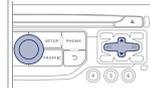

4



Confirm "**OK**" to save the modifications.

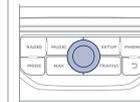

i

We recommend:

- a filter on the route and
- a filter around the vehicle of:
 - 12 miles (20 km) in urban areas,
 - 30 miles (50 km) on motorways.



05 TRAFFIC INFORMATION

Principal TMC symbols

1 Black and blue triangle: general information, for example:




2 Red and yellow triangle: traffic information, for example:




Receiving TA messages

! The TA (Traffic Announcement) function gives priority to TA alert messages. To operate, this function needs good reception of a radio station transmitting this type of message. When a traffic report is transmitted, the current audio source (Radio, CD, USB, ...) is interrupted automatically to play the TA message. Normal playback of the audio source resumes at the end of the transmission of the message.


1  Press **RADIO** to display the "FM / AM band" menu.

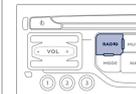

2  Select "**Guidance options**" then confirm.

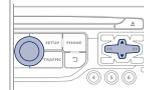

3  Activate or deactivate "**TA**" then confirm.

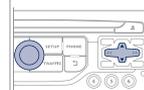

! The volume setting for TA messages can be adjusted only during the transmission of this type of alert.

  Activate or deactivate the function at any time by pressing the button.
During a message, press the button to interrupt it.

06 USING THE TELEPHONE

Access to the "Telephone" menu



Press this button.

"Telephone"

List of recent calls sent and received with the telephone connected to the system.

- "Dial"
- "Directory of contacts"
- "Contacts management"
- "Phone functions"
- "Bluetooth functions"
- "Hang up"

In the top bar of the permanent display



No telephone connected.



Telephone connected.



Incoming call.



Outgoing call.



Synchronisation of contacts in progress.



Telephone call in progress.

To make a call, select a number in the list and confirm **"OK"** to start the call.



Connecting a different telephone deletes the list of recent calls.

Go from the list to the menu (left/right).



or



06 USING THE TELEPHONE

Pairing a Bluetooth telephone First connection



You can check the compatibility of your telephone at www.peugeot.co.uk (services).



For reasons of safety and because they require prolonged attention on the part of the driver, the operations for pairing the Bluetooth mobile telephone to the hands-free system of the audio unit must be carried out with the **vehicle stationary**.

Quick procedure from the telephone

1

In the Bluetooth menu of your telephone, select the name of the system from the list of devices detected.



2


Enter a minimum 4 figure code in the telephone and confirm.



3



Enter the same code in the system, select **"OK"** and confirm.

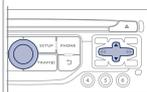

1


Activate the telephone's Bluetooth function and ensure that it is "visible to all" (telephone configuration).



2




Press this button.

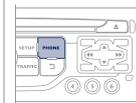

3




Select **"Bluetooth functions"** and confirm.

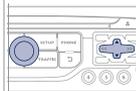

4



Select **"Peripherals search"** and confirm.
The list of peripheral devices detected is displayed. Wait until the **"Connect"** button is available.

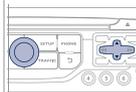

06 USING THE TELEPHONE




The services available depend on the network, the SIM card and the compatibility of the Bluetooth telephone used. Check the telephone manual and with your network provider for details of the services available to you.

5




Select the name of the desired peripheral from the list of devices detected then confirm

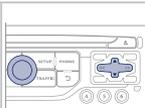

6



Select "**Connect**" and confirm.

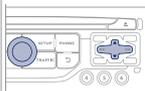


7



The system offers to connect the telephone:

- in "**Hands-free mode**" (telephone only),
- in "**Audio**" mode (streaming: playing music files on the telephone),
- or "**All**" (for selection of both modes).

Select "**OK**" and confirm.

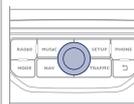

The "**Hands-free mode**" should be used in preference if "Streaming" is not desired.



The ability of the system to connect in only one mode depends on the telephone. The two modes may both connect by default.

8


Enter a minimum 4 figure code in the telephone and confirm.



9



Enter the same code in the system, select "**OK**" and confirm.

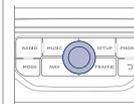

Then accept automatic connection on the telephone to allow the telephone to reconnect automatically every time the vehicle is started.










Depending on the type of telephone, the system will ask you to accept or not the transfer of your contacts.



On return to the vehicle, the last telephone connected automatically reconnects, within around 30 seconds after switching on the ignition (Bluetooth activated and visible). To modify the automatic connection mode, remove the pairing and pair the telephone again with the desired mode.







06 USING THE TELEPHONE

Directory configuration / Synchronisation with the telephone
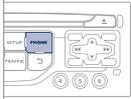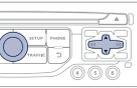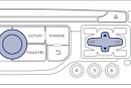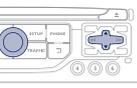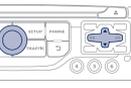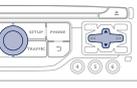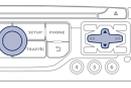
<p>1</p>  <p>Press PHONE then select "Contacts management" and confirm.</p>		<p>2d</p>  <p>Select "Import all the entries" to import all the contacts in the telephone and save them in the system. Once imported, a contact remains visible whatever telephone is connected.</p>	
<p>2a</p>  <p>Select "New contact" to enter a new contact.</p>		<p>2e</p>  <p>Select "Synchronization options":</p> <ul style="list-style-type: none">- No synchronization: only the contacts saved in the system (always present).- Display telephone contacts: only the contacts saved in the telephone.- Display SIM card contacts: only the contacts saved on the SIM card.- Display all phone contacts: contacts on the SIM card and in the telephone.	
<p>2b</p>  <p>Select "Sort by Name/First name" to choose the order in which they appear.</p>		<p>2f</p>  <p>Select "Contact mem. status" to see the number of contacts saved in the system or imported, and the free memory.</p>	
<p>2c</p>  <p>Select "Delete all contacts" to delete the contacts saved in the system.</p>			

06 USING THE TELEPHONE

Editing, importing or deleting a contact

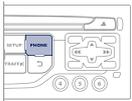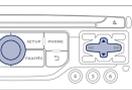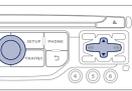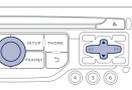
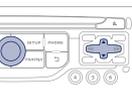
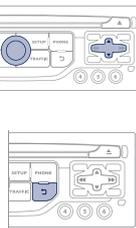
<p>1</p> 	<p>Press PHONE then select "Directory of contacts" and confirm.</p>		<p>i</p> <p>It is not possible to modify or delete contacts in the telephone or the SIM card via the Bluetooth connection.</p>
<p>2</p> 	<p>Select the desired contact and confirm.</p>		<p>i</p> <p>Once the contact has been imported, the Bluetooth symbol disappears, replaced by the telephone symbol which shows that the contact has been saved in the system.</p>
<p>3a</p> 	<p>Select "Open" to view a contact on the telephone or modify a contact saved in the system.</p>		<p>i</p> <p>In the "Directory of contacts" menu, the import and deletion of contacts is done one by one.</p>
<p>3b</p> 	<p>Select "Import" to copy a contact from the telephone to the system.</p>		<p>4</p> 
<p>3c</p> 	<p>Select "Delete" to delete a contact recorded in the system.</p>		 <p>Select OK or press the back button to exit this menu.</p> 

06 USING THE TELEPHONE





Making a call

! Use of the telephone is not recommended while driving. We recommended that you park safely or make use of the steering mounted controls.

Calling a new number
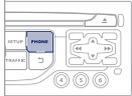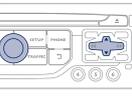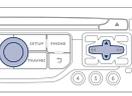
<p>1</p>  <p>Press PHONE twice.</p>	
<p>2</p>  <p>Select "Dial" then confirm.</p>	
<p>3</p>  <p>Dial the telephone number using the virtual keypad selecting each number in turn. Confirm "OK" to make the call.</p>	

Calling a contact
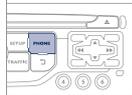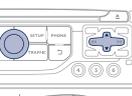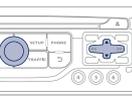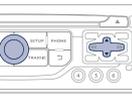
<p>1</p>  <p>Press TEL or twice on PHONE.</p>	
<p>2</p>  <p>Select "Directory of contacts" then confirm.</p>	
<p>3</p>  <p>Select the desired contact and confirm. If access was via the PHONE button, select "Call" and confirm.</p>	
<p>4</p>  <p>Select the number and confirm to start the call.</p>	

06 USING THE TELEPHONE

Calling a recently entered number

1




Press **TEL**, select "**Call list**" and confirm,

or




press **PHONE** to display the calls log.

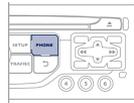

2



Select the desired number and confirm.

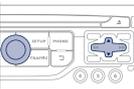

To erase the calls log, press **PHONE** twice, select "**Phone functions**" and confirm then select "**Delete calls log**" and confirm.

i


It is always possible to start a call directly from the telephone; park the vehicle as a safety measure.

Ending a call

1a



Press **PHONE** then select "**OK**" to end the call.

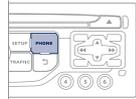

1b



Or make a long press on **TEL** at the steering mounted controls.



1c




Or make two short presses on **TEL** at the steering mounted controls.




1d



Or press the **MODE** button, as many times as necessary, until the telephone screen is displayed.

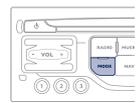

Press "**OK**" to display the contextual menu then select "**Hang up**" and confirm.

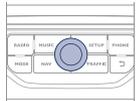

06 USING THE TELEPHONE

Receiving a call


1

An incoming call is announced by a ring and a superimposed display on the screen.


2



"Yes" to accept the call is selected by default.
Press "OK" to accept the call.
Select "No" and confirm to reject the call.








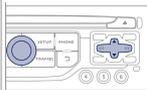


A short press on **TEL** accepts an incoming call.
A long press on **TEL** rejects an incoming call.

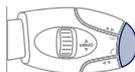

06 USING THE TELEPHONE




Options during a call*
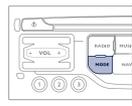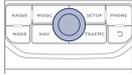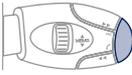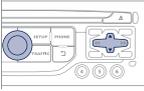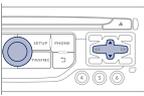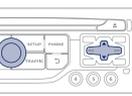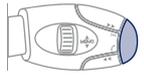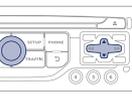
<p>1</p>  <p>During a call, press the MODE button several times to select display of the telephone screen, then press "OK" to open the contextual menu.</p>  <p>Or make a short press on this button.</p> 	  	<p>2c</p>  <p>Select "DTMF ring tones" to use the numerical keypad, so as to navigate through the menu of an interactive vocal server.</p> 	<p>2d</p>  <p>Select "Hang up" to end the call.</p> 
<p>2a</p>  <p>Select "Private mode" and confirm to take the call on the handset. Or select "Hands-free mode" and confirm to take the call via the vehicle's speakers.</p> 	<p> </p> <p>It is possible to hold a 3-way conference call by making 2 calls in succession*. Select "Conference mode call" in the contextual menu accessible using this button.</p> 		
<p>2b</p>  <p>Select "Put call on hold" and confirm to put the current call on hold. Or select "Resume the call" and confirm to resume the call on hold.</p> 			






* Depending on the compatibility of the phone and your service plan.

06 USING THE TELEPHONE

Managing paired telephones
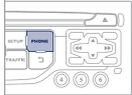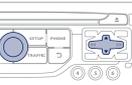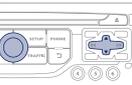
<p>1</p>  <p>Press PHONE twice.</p>	
<p>2</p>  <p>Select "Bluetooth functions".</p>	
<p>3</p>  <p>Select "List of the paired peripherals" and confirm.</p> <p>It is possible to:</p> <ul style="list-style-type: none">- "Connect" or "Disconnect" the selected telephone,- delete the pairing of the selected telephone. <p>It is also possible to select all pairings.</p>	

Changing the ringtone
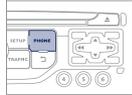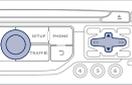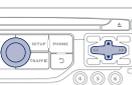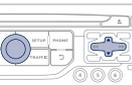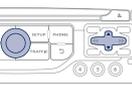
<p>1</p>  <p>Press PHONE twice.</p>	
<p>2</p>  <p>Select "Phone functions" and confirm.</p>	
<p>3</p>  <p>Select "Ring options" and confirm.</p>	
<p>4</p>  <p>You can adjust the volume and the type of ringtone.</p>	
<p>5</p>  <p>Select "OK" and confirm to save the changes.</p>	

07 RADIO

Access to the "Radio" menu



Press **RADIO**.

"FM / AM band / DAB"

Alphabetical list of stations received.



"Change waveband" ("AM / FM / DAB")
"Guidance options" ("TA, RDS, FM alternative frequencies / DAB")
"Audio settings" (see this section)
"Update radio list"



Press **▲** or **▼** or use the rotary control to select the previous or next station in the list.

Go from the list to the menu (left/right).



or



07 RADIO

Changing waveband




The external environment (hill, building, tunnel, underground car park...) may interfere with the reception, including in RDS station tracking mode. This phenomenon is a normal result of the way in which radio waves are transmitted and does not in any way indicate a fault with the audio system.

1




Press **RADIO** or **OK** to display the contextual menu.

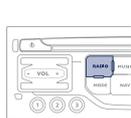

2




Select "**Change waveband**".

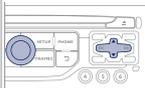

3



Select "**AM / FM**" and confirm.

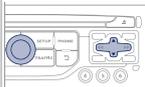

Selecting a station



The quality of reception is represented by the number of active waves in this symbol.

1a



By alphabetical list

Press **RADIO**, select the station of your choice and confirm.





1b



By automatic frequency search

Press ◀ or ▶ for the automatic search for a lower or higher radio frequency.

Or turn the thumb wheel at the steering mounted controls.

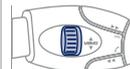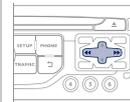


1c



By manual frequency search

Press ▲ or ▼ to adjust the radio frequency step by step.

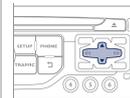


07 RADIO

Presetting a station

1




After selecting a station, press one of the buttons on the numerical keypad for 2 seconds to preset the current station.
An audible signal confirms that the station has been preset.

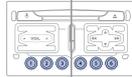

2



Press the button on the numerical keypad to recall a preset station.
Or press then turn the thumb wheel at the steering mounted controls.

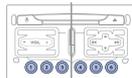

Activate / Deactivate RDS




RDS, if activated, allows you to continue listening to the same station by automatic retuning to alternative frequencies. However, in certain conditions, coverage of an RDS station may not be assured throughout the entire country as radio stations do not cover 100 % of the territory. This explains the loss of reception of the station during a journey.

1




Press **RADIO**.

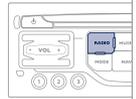

2




Select "**Guidance options**" then confirm.

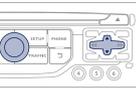

3



Activate or deactivate "**RDS**" then confirm.

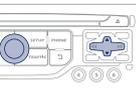

07 RADIO

DAB (Digital Audio Broadcasting) Digital radio

- i** Digital radio provides a higher quality reception and also the graphical display of information for the radio station, by selecting "Video mode" in "Radio favourites" (Options).
The different radio multiplex services offer a choice of stations displayed in alphabetical order.

-  Press "**RADIO**".
 -  Select "**Change band**" and confirm.
 -  Selection "**DAB**" and confirm.
-  Change of station in the same "multiplex".
-  Manual search for a "multiplex".

Digital radio - DAB/FM auto tracking

- i** "DAB" does not have 100% coverage of the country.
When the digital signal is weak, "DAB / FM auto tracking" allows you to continue listening to the same station, by automatically switching to the corresponding analogue "FM" station (if one exists).

-  Press "**RADIO**".
-  Select "**Options**" and confirm.
-  Select "**FM/DAB**" and confirm.


- i** If "DAB / FM auto tracking" is on, there will be a difference of a few seconds in the programme when the system changes to analogue "FM" radio with sometimes a variation in volume.
Display of the "DAB" band then becomes "DAB (FM)".
When the strength of the digital signal is good again, the system automatically switches back to "DAB".
- !** If the "DAB" station you are listening to is not available on "FM" ("DAB/FM" option greyed out), or if "DAB / FM auto tracking" is not on, the sound will be cut when the digital signal is too weak.

08 MUSIC MEDIA PLAYERS

Access to the "Music media player" menu



Press **MUSIC**.

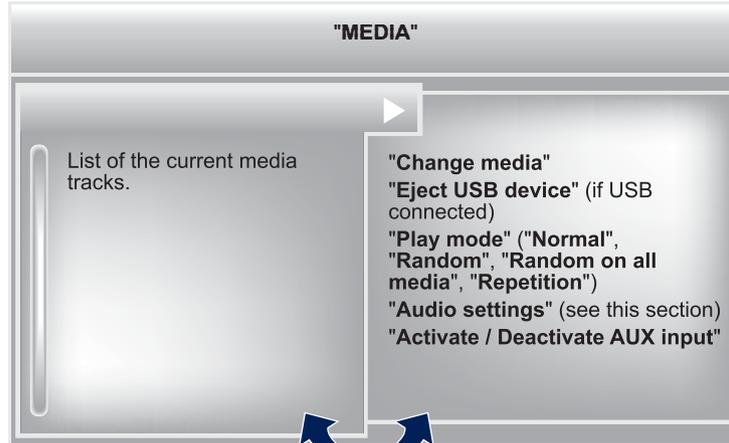

Go from the list to the menu (left/right).



or



08 MUSIC MEDIA PLAYERS

CD, MP3 CD / USB player

Information and advice

 The audio equipment will only play audio files with ".wma, .aac, .flac, .ogg and .mp3" file extensions and with a bit rate of between 32 Kbps and 320 Kbps.

It also supports VBR (Variable Bit Rate) mode.

No other type of file (.mp4, .m3u...) can be played.

WMA files must be of the standard wma 9 type.

The sampling rates supported are greater than 32 KHz.



It is advisable to restrict file names to 20 characters, without using of special characters (e.g.: " " ? ; ù) to avoid any playing and displaying problems.



In order to be able to play a recorded CDR or CDRW, when recording it is preferable to select the ISO 9660 level 1, 2 or Joliet standard.

If the disc is recorded in another format (udf, ...), it may not be played correctly.

It is recommended that the same recording standard is always used for an individual disc, with as low a speed as possible (4x maximum) for optimum sound quality.

In the particular case of a multi-session CD, the Joliet standard is recommended.



The system supports USB mass storage or iPod devices via the USB port (suitable cable not supplied). If a partitioned USB memory key is connected to the system, only the first partition is recognised.

Control of the peripheral device is with the audio system controls.

The number of tracks is limited to 2000 maximum, 999 tracks per folder.

If the current consumption at the USB port exceeds 500 mA, the system goes into protection mode and deactivates the port.

Other peripherals, not recognised on connection, must be connected to the auxiliary socket using a Jack cable (not supplied).



In order to be read, a USB memory stick must be formatted FAT 16 or 32.



The system does not support the operation of an Apple® player and a USB memory stick connected at the same time.



It is recommended that official Apple® USB cables are used to ensure correct operation.

08 MUSIC MEDIA PLAYERS

Sources



Insert the CD in the player, insert the USB memory stick in the USB player or connect the USB peripheral to the USB port using a suitable cable (not supplied)



The system builds playlists (in temporary memory), an operation which can take from a few seconds to several minutes at the first connection.

Reduce the number of non-music files and the number of folders to reduce the waiting time.

The playlists are updated every time the ignition is switched off or connection of a USB memory stick. However, the system memorises these lists and if they are not modified, the loading time will be shorter.


Play starts automatically after a period which depends on the capacity of the USB memory stick.



Selection of source




The **SOURCE** button on the steering mounted controls allows a direct change to the next media source.

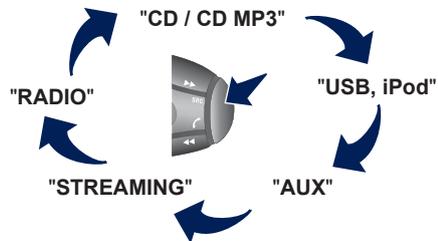

1




Press **MUSIC** to display the "MEDIA" menu.

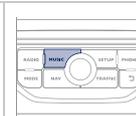

2



Select "**Following media source**" and confirm.

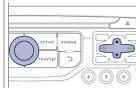

Repeat the operation as many times as necessary to obtain the desired media source (except for radio which is accessible either with **SOURCE** or **RADIO**).

08 MUSIC MEDIA PLAYERS

Selecting a track

Previous track.	 / 
Next track.	 / 
Previous folder.	
Next folder.	
Fast forward.	Long press  / 
Fast backward.	Long press  / 
Pause: long press on SRC .	

MUSIC: List of USB or CD tracks or folders	
Up or down in the list.	 /  / 
Confirm, next menu level.	 /  / 
Up one menu level.	 +  /  / 

08 MUSIC MEDIA PLAYERS

Connecting APPLE® players

- 1 Connect the Apple® player to the USB port using a suitable cable (not supplied).
Play starts automatically.

- 2 Control is via the audio system.

i The classifications available are those of the portable device connected (artists / albums / genres / playlists / audiobooks / podcasts).
The default classification used is by artist. To modify the classification used, return to the first level of the menu then select the desired classification (playlists for example) and confirm to go down through the menu to the desired track.
The "Shuffle tracks" mode on an iPod® corresponds to the "Random" mode on the audio system.
The "Shuffle albums" mode on an iPod® corresponds to the "Random all" on the audio system.
"Shuffle tracks" is restored by default on each connection.

i The version of software in the audio system may not be compatible with the generation of your Apple® player.

Audio streaming



Streaming allows audio files on your telephone to be played via the vehicle's speakers.

1

Connect the telephone: see "**USING THE TELEPHONE**".
Select "**Audio**" or "**All**" profile.

2

If play does not start automatically, it may be necessary to start the audio playback from the telephone.
Control is from the peripheral device or by using the audio system buttons.



Once connected in streaming mode, the telephone is considered to be a media source.
It is recommended that you activate "**Repeat**" on the Bluetooth peripheral.

08 MUSIC MEDIA PLAYERS

Using the auxiliary input (AUX) JACK/USB audio cable not supplied

1




Connect the portable device (MP3, WMA player...) to the JACK auxiliary audio socket or USB port using a suitable cable.

2



Press **MUSIC** to display the "MUSIC" menu.

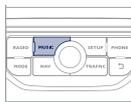


3



Select "**Activate / Deactivate AUX input**" and confirm.

First adjust the volume of your portable device (to a high level). Then adjust the volume of your audio system.

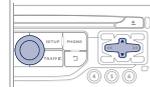

!


Display and management of the controls are via the portable device.

09 AUDIO SETTINGS

1



They are accessible by the **MUSIC** button in the control panel or by a long press on **RADIO** according to the source in use.

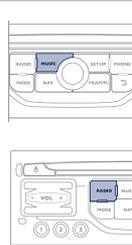

2

- "Equalizer" (choice of 6 musical ambiances)
- "Bass"
- "Treble"
- "Loudness" (Activate/Deactivate)
- "Distribution" ("Driver", "All passengers")
- "Le-Ri balance" (Left/Right)
- "Fr-Re balance" (Front/Rear)
- "Auto. Volume" depending on road speed (Activate/Deactivate)

!

The distribution (or spatialisation using the Arkamys® system) of sound is an audio process that allows the audio quality to be adapted to the number of listeners in the vehicle.

!

The audio settings (**Equalizer, Bass, Treble and Loudness**) are different and independent for each sound source.
The settings for distribution and balance are common to all sources.

i

On-board audio: Arkamys® Sound Staging.
With Sound Staging, the driver and passengers are immersed in an "audio scene" recreating the natural atmosphere of an auditorium: truly a part of the scene and its surroundings.
This new sensation is made possible by software in the audio system which processes the digital signals from the media players (radio, CD, MP3...) without changing the audio settings. This processing takes account of the characteristics of the passenger compartment to produce optimum results.
The Arkamys® software installed in your audio system processes the digital signal from the media players (radio, CD, MP3, ...) and recreates a natural musical scene, with harmonious placement of instruments and voices in the space in front of passengers, level with the windscreen.


10 CONFIGURATION

Display configuration

1




Press **SETUP** to display the "Configuration" menu.

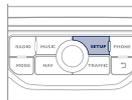

2



Select "**Display configuration**" and confirm.

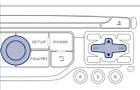


3a



Select "**Choose colour**" and confirm to select the screen colour harmony and the map presentation mode:


- day mode,
- night mode,
- automatic day/night mode, according to whether the headlamps are on.

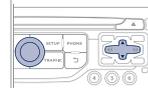

3b



Select "**Adjust luminosity**" and confirm to adjust the screen brightness. Press "**OK**" to save the changes. The settings for day and night are independent.

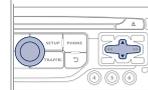

11 SCREEN MENU MAP(S)



MAIN FUNCTION

1 Option A

2 Option A1

3 Option A11

1 Option B...

"Navigation - guidance" MENU

1 Select destination

2 Enter an address

2 Directory

2 GPS coordinates

1 Journey leg and route

2 Add a stage

3 Enter an address

3 Directory

3 Previous destinations

2 Order/delete journey legs

2 Divert route

2 Chosen destination

1 Guidance options

2 Define calculation criteria

3 Fastest route

3 Shortest route

3 Distance/Time

3 With tolls

3 With Ferry

3 Traffic info

2 Set speech synthesis

2 Delete last destinations

2 Set parameters for risk areas

1 Map management

2 Map orientation

3 Vehicle direction

3 North direction

3 Perspective view

2 Map details

2 Move the map

2 Mapping and updating

2 Description of risk areas database

1 Stop / Restore guidance

2 Fastest route

2 Shortest route

2 Distance/Time

2 With tolls

2 With Ferry

2 Traffic info

11 SCREEN MENU MAP(S)

"TRAFFIC INFORMATION" MENU

1 Geographic filter

2 Retain all the messages:

2 Retain the messages:

3 Around the vehicle

3 On the route

1 Select TMC station

2 Automatic TMC

2 Manual TMC

2 List of TMC stations

1 Display / Do not display messages

"TELEPHONE" MENU

1 Dial

1 Directory of contacts

2 Call

2 Open

2 Import

2 Delete

2 Cancel

1 Contacts management

2 New contact

2 Sort by First name/Name

2 Delete all contacts

2 Import all the entries

2 Synchronization options

3 No synchronization

3 Display telephone contacts

3 Display SIM card contacts

3 Display all phone contacts

2 Contact mem. status

1 Phone functions

2 Ring options

2 Delete calls log

1 Bluetooth functions

2 List of the paired peripherals

3 Connect

3 Disconnect

3 Delete

3 Delete all

3 Cancel

2 Peripherals search

2 Rename radiotelephone

1 Hang up

11 SCREEN MENU MAP(S)

"RADIO" MENU

1 **Change Waveband**

2 AM / FM

1 **Guidance options**

2 TA

2 RDS options

1 **Audio settings**

2 Equalizer

3 None

3 Classical

3 Jazz

3 Rock

3 Techno

3 Vocal

2 Bass

2 Treble

2 Loudness

3 Activated / Deactivated

2 Distribution

3 Driver

3 All passengers

2 Le-Ri balance

2 Fr-Re balance

2 Auto. Volume

3 Activated / Deactivated

1 **Update radio list**

"MUSIC" MENU

1 **Change Media**

2 CD

2 Bluetooth streaming

2 USB/iPod

2 AUX

1 **Read mode**

2 Normal

2 Random

2 Random on all media

2 Repetition

1 **Audio settings**

1 **Activate / Deactivate AUX input**

11 SCREEN MENU MAP(S)

"SETUP" MENU

1 Display configuration

2 Choose colour

3 Harmony:

3 Cartography:

4 Day mode

4 Night mode

4 Auto Day/Night

2 Adjust luminosity

2 Set date and time

2 Select units

1 Speech synthesis setting

2 Guidance instructions volume

2 Select male voice/Select female voice

1 Select language

2 Français

2 English

2 Italiano

2 Portuguese

2 Español

2 Deutsch

2 Nederlands

2 Turkish

2 Polski

2 Русский

1 Define vehicle parameters*

2 Parking assistance

2 Wiper operation

3 Rear wiper in reverse

2 Lighting configuration

3 Guide-me-home lighting time

3 Directional headlamps

3 Mood lighting

3 Daytime running lamps

1 Trip computer

2 Alert log

2 Status of functions

* The settings vary according to the vehicle.

FREQUENTLY ASKED QUESTIONS

The following table groups together the answers to the most frequently asked questions concerning your audio system.

QUESTION	ANSWER	SOLUTION
The route calculation is not successful.	The guidance criteria may conflict with the current location (exclusion of toll roads on a toll motorway).	Check the guidance criteria on the Navigation Menu, "Guidance options"\ "Define calculation criteria".
I am unable to enter my post code.	The system only accepts post codes of up to 5 characters.	
The POIs do not appear.	The POIs have not been selected.	Select the POIs in the list of POIs.
The risk areas audible warning does not work.	The audible warning is not active.	Activate audible warnings in the Guidance options menu, "Navigation - guidance", "Set parameters for risk areas".
The system does not suggest a detour around an incident on the route.	The guidance criteria do not take account of TMC messages.	Select the "Traffic info" function in the list of guidance criteria.
I receive a Risk area alert which is not on my route.	Other than guidance, the system announces all Risk areas positioned in a cone located in front of the vehicle. It may provide an alert for a Risk area located on nearby or parallel roads.	Zoom in on the map to view the exact position of the Risk area. Select "On the route" to no longer receive alerts other than guidance or to reduce the time for the announcement.

FREQUENTLY ASKED QUESTIONS

QUESTION	ANSWER	SOLUTION
Certain traffic jams along the route are not indicated in real time.	On starting, it is several minutes before the system begins to receive the traffic information.	Wait until the traffic information is being received correctly (display of the traffic information icons on the map).
	The filters are too restrictive.	Modify the "Geographic filter" settings.
	In certain countries, only major routes (motorways...) are listed for the traffic information.	This phenomenon is normal. The system is dependent on the traffic information available.
The altitude is not displayed.	On starting, the initialisation of the GPS may take up to 3 minutes to receive more than 4 satellites correctly.	Wait until the system has started up completely. Check that there is a GPS coverage of at least 4 satellites (long press on the SETUP button, then select "GPS coverage").
	Depending on the geographical environment (tunnel...) or the weather, the conditions of reception of the GPS signal may vary.	This phenomenon is normal. The system is dependent on the GPS signal reception conditions.
I am unable to connect my Bluetooth telephone.	The telephone's Bluetooth function may be switched off or the telephone may not be visible.	<ul style="list-style-type: none"> - Check that your telephone's Bluetooth function is switched on. - Check in the telephone settings that it is "visible to all".
	The Bluetooth telephone is not compatible with the system.	You can check the compatibility of your telephone on www.peugeot.co.uk (services)
The volume of the telephone connected in Bluetooth mode is inaudible.	The volume depends both on the system and on the telephone.	Increase the volume of the audio system, to maximum if required, and increase the volume of the telephone if necessary.
	The ambient noise level has an influence on the quality of telephone communication.	Reduce the ambient noise level (close the windows, reduce the booster fan speed, slow down, ...).

FREQUENTLY ASKED QUESTIONS

QUESTION	ANSWER	SOLUTION
Some contacts are duplicated in the list.	The options for synchronizing contacts are synchronizing the contacts on the SIM card, the contacts on the telephone, or both. When both synchronizations are selected, some contacts may be duplicated.	Select "Display SIM card contacts" or "Display telephone contacts".
Contacts are not shown in alphabetical order.	Some telephones offer display options. Depending on the settings chosen, contacts can be transferred in a specific order.	Modify the display setting in the telephone directory.
The system does not receive SMS text messages.	The Bluetooth mode does not permit sending SMS text messages to the system.	
The CD is ejected automatically or is not played by the player.	<p>The CD is inserted upside down, is unplayable, does not contain any audio data or contains an audio format which the player cannot play.</p> <p>The CD has been recorded in a format that is not compatible with the player (udf, ...).</p> <p>The CD is protected by an anti-pirating protection system which is not recognised by the audio system.</p>	<ul style="list-style-type: none"> - Check that the CD is inserted in the player the right way up. - Check the condition of the CD: the CD cannot be played if it is too damaged. - Check the content in the case of a recorded CD: refer to the information and advice in the "MUSIC MEDIA PLAYERS" section. - The audio system's CD player does not play DVDs. - Some recorded CDs will not be played by the audio system because they are not of the correct quality.
There is a long waiting period following the insertion of a CD or connection of a USB memory stick.	When a new medium is inserted, the system reads a certain amount of data (directory, title, artist, etc.). This may take from a few seconds to a few minutes.	This phenomenon is normal.
The CD player sound is poor.	The CD used is scratched or of poor quality.	Insert good quality CDs and store them in suitable conditions.
	The audio equipment settings (bass, treble, ambiences) are unsuitable.	Set the treble or bass level to 0, without selecting an ambience.

FREQUENTLY ASKED QUESTIONS

QUESTION	ANSWER	SOLUTION
Some characters in the media information are not displayed correctly while playing.	The audio system does not display some types of characters.	Use standard characters to name tracks and folders.
Playing of streaming files does not start.	The peripheral device connected does not support automatic play.	Start the playback from the device.
The names of tracks and the track length are not displayed on the screen when streaming audio.	The Bluetooth profile does not allow the transfer of this information.	
The quality of reception of the radio station listened to gradually deteriorates or the stored stations do not function (no sound, 87.5 Mhz is displayed...).	The vehicle is too far from the transmitter used by the station listened to or there is no transmitter in the geographical area through which the vehicle is travelling.	Activate the "RDS" function by means of the short-cut menu to enable the system to check whether there is a more powerful transmitter in the geographical area.
	The environment (hills, buildings, tunnels, basement car parks...) block reception, including in RDS mode.	This phenomenon is normal and does not indicate a fault with the audio system.
	The aerial is absent or has been damaged (for example when going through a car wash or into an underground car park).	Have the aerial checked by a PEUGEOT dealer.
I cannot find some radio stations in the list of stations received.	The station is not received or its name has changed in the list.	
	Some radio stations send other information in place of their name (the title of the song for example).	
The name of the radio station changes.	The system interprets this information as the name of the station.	

FREQUENTLY ASKED QUESTIONS

QUESTION	ANSWER	SOLUTION
In changing the setting of treble and bass the equalizer setting is deselected.	The selection of an equalizer setting imposes the balance settings. Modifying one without the other is not possible.	Modify the balance or equalizer settings to obtain the desired musical ambience.
In changing the equalizer setting, treble and bass return to zero.		
When changing the balance settings, the distribution setting is deselected.	The selection of a distribution setting imposes the balance settings. Modifying one without the other is not possible.	Modify the balance or distribution settings to obtain the desired musical ambience.
When changing an distribution setting, the balance setting is deselected.		
There is a difference in sound quality between the different audio sources (radio, CD...).	For optimum sound quality, the audio settings for Volume, Bass, Treble, Equalizer and Loudness can be adapted to the different sound sources, which may result in audible differences when changing source (radio, CD...).	Check that the audio settings for (Volume, Bass, Treble, Equalizer, Loudness) are adapted to the sources listened to. It is advisable to set the AUDIO functions (Bass, Treble, Fr-Re balance, Le-Ri balance) to the middle position, select the "None", musical ambience and set the loudness correction to the "Active" position in CD mode or to the "Inactive" position in radio mode.

FREQUENTLY ASKED QUESTIONS

QUESTION	ANSWER	SOLUTION
<p>With the engine off, the system switches off after a few minutes of use.</p>	<p>When the engine is switched off, the system's operating time depends on the battery charge. The switch-off is normal: the system switches to economy mode and switches off to prevent discharging of the vehicle's battery.</p>	<p>Start the vehicle's engine to increase the battery charge.</p>
<p>Playback of my USB memory stick starts only after a very long wait (around 2 to 3 minutes).</p>	<p>Some files supplied with the memory stick may greatly slow down access to reading the memory stick (multiplication by 10 of the catalogue time).</p>	<p>Delete the files supplied with the memory stick and limit the number of sub-folders in the file structure on the memory stick.</p>
<p>When I connect my iPhone as telephone and to the USB port at the same time, I am unable to play the music files.</p>	<p>When the iPhone connects automatically as a telephone, it forces the streaming function. The streaming function takes the place of the USB function which is then not useable, there is a period without sound of the track being played with Apple® players.</p>	<p>Disconnect and reconnect to the USB port (the USB function takes priority over streaming).</p>
<p>When I connect my Apple® player or my BlackBerry® to the USB port, I have alert messages on the current consumption by the USB port.</p>	<p>When charging, the current consumption of these smartphones is greater than the rating of the USB port, which is 500mA.</p>	



PEUGEOT Connect Sound (RD5)

AUDIO SYSTEM / BLUETOOTH®



Your PEUGEOT Connect Sound (RD5) is coded in such a way that it will only operate in your vehicle.



For safety reasons, the driver must only carry out operations which require prolonged attention while the vehicle is stationary.

When the engine is switched off and to prevent discharging of the battery, the audio equipment may switch off after a few minutes.

CONTENTS

01	First steps	p. 310
02	Steering mounted controls	p. 311
03	Main menu	p. 312
04	Audio	p. 313
05	PEUGEOT Connect USB	p. 317
06	Bluetooth	p. 320
07	Screen menu map(s)	p. 323
	Frequently asked questions	p. 326

01 FIRST STEPS

Select source:
radio, audio CD / MP3 CD, USB,
Jack connection, Streaming,
AUX.

Selection of AM / FM / DAB*
wavebands.

* Depending on model.

Audio settings: front/
rear fader, left/right
balance, bass/treble,
loudness, audio
ambiences.

Display the list of
local stations.

Long press: CD
tracks or MP3
folders (CD / USB).

Abandon the current
operation.

Eject CD.

Select the screen display
mode:
Date, audio functions, trip
computer, telephone.

On/off, volume setting.

The DARK button changes the screen display
for improved driving comfort at night.
1st press: upper bar only illuminated.
2nd press: black screen.
3rd press: return to standard display.

Buttons 1 to 6:
Select a pre-set radio station.
Long press: pre-set a station.

Display main menu.

TA (Traffic Announcements)
on/off.

Long press: PTY* (radio
Programme TYpe) mode.

* Available according to version.

Automatic frequency search
down/up.

Select previous/next CD, MP3
or USB track.

Confirm.

Select next frequency down/up.

Select previous/next MP3 folder.

Select previous/next folder / genre /
artist / playlist (USB).



02 STEERING MOUNTED CONTROLS

Radio: automatic search for a higher frequency.
CD / MP3 / USB: selection of the next track.
CD / USB: continuous press: fast forwards play.
Move in the list.



Change audio source.
Confirm a selection.
Call/end call on the telephone.
Press for more than 2 seconds:
telephone main menu.

Radio: select the previous/next pre-set
station.
USB: select genre / artist / folder from the
classification list.
Select the previous/next item in a menu.

Radio: automatic search for a lower
frequency.
CD / MP3 / USB: selection of the
previous track.
CD / USB: continuous press: fast
reverse.
Move in the list.



Volume increase.

Volume decrease.


Mute: press the volume
increase and decrease
buttons simultaneously.
The sound is restored
by pressing one of the
two volume buttons.

03 MAIN MENU

Screen C

AUDIO FUNCTIONS:
radio, CD, USB, options.

TELEPHONE:
hands-free kit, pairing,
management of a call.

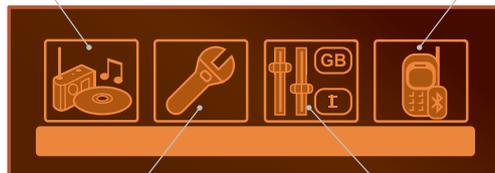

VEHICLE DIAGNOSTICS:
alert log.

**PERSONALISATION-
CONFIGURATION:**
vehicle parameters,
display, languages.







For a detailed global view of the menus available, refer to "Screen menu map" in this section.

04 AUDIO







Radio Selecting a station

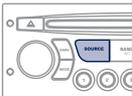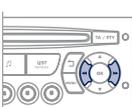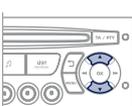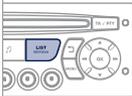1	 Press the SOURCE button several times in succession and select the radio.	
2	 Press the BAND AST button to select a waveband: FM1, FM2, FMast, AM.	
3	 Briefly press one of the buttons to carry out an automatic search of the radio stations.	
4	 Press one of the buttons to carry out a manual search up / down for radio frequencies.	
	 Press the LIST REFRESH button to display the list of stations received locally (30 stations maximum). To update this list, press for more than two seconds.	

The external environment (hills, buildings, tunnels, basement car parks, ...) may block reception, including in RDS mode. This is a normal effect of the way in which radio waves are transmitted and does not indicate any failure of the audio system.

RDS

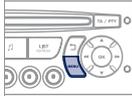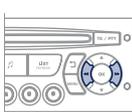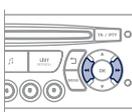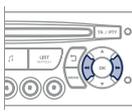1	 Press the MENU button.	
2	 Select AUDIO FUNCTIONS then press OK.	
3	 Select the FM WAVEBAND PREFERENCES function then press OK.	
4	 Select ACTIVATE RDS then press OK. RDS appears on the screen.	
	In radio mode, press OK directly to activate / deactivate RDS mode.	
	The RDS, if displayed, enables you to continue listening to the same station by automatic retuning to alternative frequencies. However, in certain conditions, coverage of an RDS station may not be assured throughout the country as radio stations do not cover 100 % of the territory. Under conditions of very weak reception, the system may change to a regional station.	

04 AUDIO


Receiving TA messages

! The TA (Traffic Announcement) function gives priority to TA alert messages. To operate, this function needs good reception of a radio station transmitting this type of message. When a traffic report is transmitted, the current audio source (Radio, CD, ...) is interrupted automatically to play the TA message. Normal playback of the audio source resumes at the end of the transmission of the message.

1



Press the TA button to activate or deactivate traffic messages.

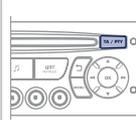

DAB (Digital Audio Broadcasting) Digital radio

i Digital radio provides a superior audio quality and also additional categories of traffic announcements (TA INFO). The different "multiplex services" offer a choice of radio stations in alphabetical order.



Change band (FM1, FM2, DAB, ...)



Change of station within the same "multiplex service".



Start a search for the next "multiplex service".



Long press: select the desired categories of announcements from Transport, News, Entertainment and Flash special (availability according to the station).



When the radio station is displayed in the screen, press on "OK" to display the contextual menu.
(Frequency hopping (RDS), DAB / FM auto tracking, RadioText (TXT) display, Information on the station, ...)

04 AUDIO

Digital radio - DAB / FM tracking

i "DAB" does not have 100% coverage of the country. When the digital signal is weak, "DAB / FM auto tracking" allows you to continue listening to the same station, by automatically switching to the corresponding analogue "FM" station (if it exists).

1  Press the **"Menu"** button.

2  Select **"Multimedia"** and confirm.

3  Select **"DAB / FM auto tracking"** and confirm

i If "DAB / FM auto tracking" is on, there will be a difference of a few seconds in the programme when the system changes to analogue "FM" radio, with sometimes a variation in volume. When the strength of the digital signal is good again, the system automatically switches back to "DAB"

! If the "DAB" station you are listening to is not available on "FM" ("DAB/FM" option barred), or if "DAB / FM auto tracking" is not on, the sound will be cut when the digital signal is too weak.


CD Playing a CD

! Insert circular compact discs only. Some anti-pirating systems, on original discs or CDs copied using a personal recorder, may cause faults which are no reflection on the quality of the vehicle's player. Without pressing the EJECT button, insert a CD in the player, play begins automatically.

1  To play a disc which has already been inserted, press the SOURCE button several times in succession and select CD.




2  Press one of the buttons to select a track on the CD.

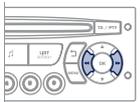

! Press the LIST REFRESH button to display the list of tracks on the CD.

3  Press and hold one of the buttons for fast forwards or fast backwards.

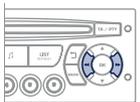

04 AUDIO

MP3 CD Playing an MP3 compilation



Insert an MP3 compilation in the player.

The audio equipment searches for all of the music tracks, which may take anything between a few seconds and several tens of seconds, before play begins.




On a single disc, the CD player can read up to 255 MP3 files spread over 8 folder levels. However, it is advisable to keep to a limit of two levels to reduce the access time before the CD is played.

While the CD is being played, the folder structure is not followed. All of the files are displayed on a single level.

1



To play a disc which has already been inserted, press the SOURCE button several times in succession and select CD.

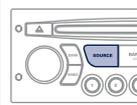


2



Press one of the buttons to select a folder on the CD.

Press one of the buttons to select a track on the CD.

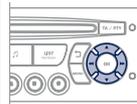


Press the LIST REFRESH button to display the list of directories of the MP3 compilation.

3



Press and hold one of the buttons for fast forward or backward play.

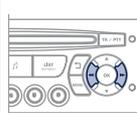

MP3 CD Information and advice



The MP3 format, an abbreviation of MPEG 1.2 & 2.5 Audio Layer 3, is an audio compression standard which permits the recording of several tens of music files on a single disc.



In order to be able to play a recorded CDR or CDRW, when recording, the ISO 9660 level 1.2 or Joliet file format is recommended.

If the disc is recorded in another format, it may not be played correctly.

It is recommended that the same recording format is always used for an individual disc, with as low a speed as possible (4x maximum) for optimum sound quality.

In the particular case of a multi-session CD, the Joliet format is recommended.



The audio system will only play files with the extension ".mp3" with a sampling rate of 22.05 KHz or 44.1 KHz. No other type of file (.wma, .mp4, .m3u...) can be played.



It is advisable to restrict file names to 20 characters without using special characters (e.g. " ? ; ù) to avoid any playing or displaying problems.



Empty CDs are not recognised and may damage the system.

05 PEUGEOT CONNECT USB

Using the PEUGEOT CONNECT USB

1

This unit consists of a USB port and an auxiliary Jack socket*. The audio files are transmitted from a portable device - digital player or a USB memory stick - to your PEUGEOT Connect Sound (RD5) and heard via the vehicle's speakers.



2

USB memory stick (1.1, 1.2 and 2.0) or Apple® player of generation 5 or later:

- USB memory sticks should be formatted FAT or FAT 32 (NTFS not supported),
- the Apple® player lead is essential,
- navigation through the file database is also possible by means of the steering mounted controls.



3

Other Apple® players of earlier generations and players using the MTP protocol*:

- play via Jack-Jack lead only (not supplied),
- navigation through the file database is from the portable device.



Connecting a USB memory stick

1

Connect the memory stick to the port, directly or using a lead. If the audio equipment is switched on, the USB source is detected as soon as it is connected. Play begins automatically after a delay which depends on the capacity of the USB memory stick.



The file formats supported are .mp3 (mpeg1 layer 3 only) and .wma (standard 9 only, 128 kbits/sec compression).

Certain playlist formats are supported (.m3u, ...)

On reconnection of the previous memory stick used, play is resumed automatically with the last track played.

!

The system puts together playlists (temporary memory) created over a period which depends on the capacity of the USB device. The other sources are available during this time.

The playlists are updated each time the ignition is switched off or each time a USB memory stick is connected.

When connecting for the first time, the classification suggested is by folder. When you reconnect, the classification selected previously is retained.

* According to vehicle.

05 PEUGEOT CONNECT USB

Using the PEUGEOT CONNECT USB

2


Press and hold LIST to display the different classifications.
Select by Folder / Artist / Genre / Playlist, press OK to select the classification required, then press OK again to confirm.



- by Folder: all folders containing audio files recognised on the peripheral device.
- by Artist: all of the artist names defined in the ID3 Tags, classified in alphabetical order.
- by Genre: all of the genres defined in the ID3 Tags.
- by Playlist: in accordance with the playlists recorded on the USB device.




Press LIST briefly to display the previously selected classification.
Navigate through the list using the left/right and up/down buttons.
Confirm the selection by pressing OK.

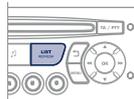

3




Press one of these buttons to gain access to the previous / next track on the classification list currently being played.
Press and hold one of the buttons for fast forward or backward play.

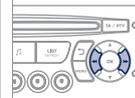

4



Press one of these buttons to gain access to the previous / next Genre, Folder, Artist or Playlist on the classification list currently being played.

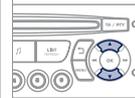

Connecting an Apple® player via the USB port

1

The lists available are Artist, Genre and Playlist (as defined in the Apple® player).
Selection and Navigation are described in steps 1 to 4 above.



Do not connect a hard disk or USB connection device other than audio equipment to the USB port. This could damage your installation.

05 PEUGEOT CONNECT USB

Using the auxiliary input (AUX)

JACK socket or USB port (according to vehicle)



The auxiliary input, JACK or USB, allows the connection of a portable device (MP3 player...).



Do not connect a device to both the JACK socket and the USB port at the same time.

1




Connect the portable device (MP3 player...) to the JACK socket or to the USB port, using a suitable cable (not supplied).

2



Press the SOURCE button several times in succession and select AUX.

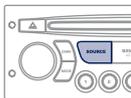

Adjusting the volume of the auxiliary source

1


First adjust the volume of your portable device.



2



Then adjust the volume of your audio system.

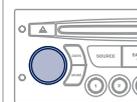

The display and control is via the portable device.



06 BLUETOOTH



Bluetooth telephone

Screen C

(Available according to model and version)

The services offered depend on the network, the SIM card and the compatibility of the Bluetooth equipment used.

Consult your telephone's manual and your operator to find out which services are available to you.

Pairing a telephone / First connection




! For safety reasons and because they require prolonged attention on the part of the driver, the operations for pairing of the Bluetooth mobile telephone with the Bluetooth hands-free system of your audio equipment must be carried out with the vehicle stationary and the ignition on.

☀ Go to www.peugeot.co.uk for more information (compatibility, more help, ...).

1 Activate the telephone's Bluetooth function and ensure that it is "visible to all" (telephone configuration).




2  Press the MENU button.

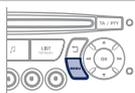

3  In the menu, select:

- Bluetooth telephone function - Audio
- Bluetooth configuration
- Perform a Bluetooth search

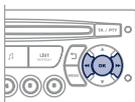

4 A window is displayed with a message that a search is in progress.

5 The first 4 telephones recognised are displayed in this window.

! The TELEPHONE menu permits access to the following functions in particular: Directory*, Call list, Pairing management.

* If your telephone is fully compatible.

6 Select the telephone to be connected from the list. Only one telephone can be connected at a time.

7 A virtual keypad is displayed in the screen: enter a code with at least 4 digits. Confirm by pressing OK.



8 A message is displayed in the screen of the telephone chosen. To accept the pairing, enter the same code on the telephone, then confirm with OK.

If pairing fails, the number of attempts is not limited.



9 A message that the pairing has been successful appears in the screen.

i The automatic connection authorised is only active after the telephone has been configured. The directory and the call list can be accessed after the synchronisation period.


06 BLUETOOTH



Receiving a call

- 1 An incoming call is announced by a ring and a superimposed display in the vehicle's screen.

- 2  Select the YES tab on the display using the buttons and confirm by pressing OK.

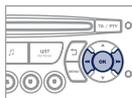


Press this button to accept the call.



Making a call

- 1 From the Bluetooth telephone function Audio menu, select Manage the telephone call then Call, Call list or Directory.

- 2 Press this button for more than two seconds for access to your directory, then navigate with the thumb wheel.
Or
To dial a number, use your telephone's keypad, with the vehicle stationary.

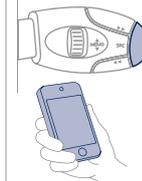

The system accesses the telephone's contacts directory, depending on compatibility, and while the Bluetooth connection with it is maintained.



With certain telephones connected by Bluetooth you can send a contact to the directory of the audio system. Contacts imported in this way are saved in a permanent directory visible to all, whatever the telephone connected. The menu for the directory is not accessible if it is empty.


06 BLUETOOTH



Ending a call

1

During a call, press this button for more than 2 seconds.
Confirm with OK to end the call.

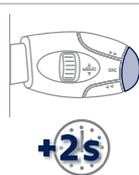

Bluetooth audio streaming*



Wireless transmission of music files on the telephone, played via the audio equipment. The telephone must be able to manage the appropriate Bluetooth profiles (Profiles A2DP / AVRCP).

1

Initiate the pairing between the telephone and the vehicle. This pairing can be initiated from the vehicle's telephone function menu or via the telephone's keypad. Refer to the steps in "Pairing a telephone" on the previous pages. During the pairing phase, the vehicle must be stationary with the key in the ignition.



2

Select the telephone to be connected from the telephone function menu.

The audio system connects to a newly paired telephone automatically.

3



Activate the streaming source by pressing the SOURCE button**. The tracks to be played can be controlled as usual via the buttons on the audio system control panel and the steering mounted controls***. The contextual information can be displayed on the screen.



* Depending on the compatibility of the telephone.

** In certain cases, playing of the Audio files must be initiated from the keypad.

*** If the telephone supports the function.

07 SCREEN MENU MAP(S)



Screen C



Press the OK dial for access to short-cut menus according to the display in the screen:



RADIO

- 1 activate / deactivate RDS
- 1 activate / deactivate REG mode
- 1 activate / deactivate radiotext

CD / MP3 CD

- 1 activate / deactivate Intro
- 1 activate / deactivate track repeat (the entire current CD for CD, the entire current folder for MP3 CD)
- 1 activate / deactivate random play (the entire current CD for CD, the entire current folder for MP3 CD)

USB

- 1 activate / deactivate track repeat (of the current folder / artist / genre / playlist)
- 1 activate / deactivate random play (of the current folder / artist / genre / playlist)

07 SCREEN MENU MAP(S)



Screen C



Pressing the MENU button displays:



1 Audio functions

1

2 FM waveband settings

2

3 Alternative frequencies (RDS)

3

4 activate / deactivate

4

3 Regional mode (REG)

3

4 activate / deactivate

4

3 Radio-text information (RDTXT)

3

4 activate / deactivate

4

2 Play modes

2

3 Album repeat (RPT)

3

4 activate / deactivate

4

3 Track random play (RDM)

3

4 activate / deactivate

4



1 Vehicle diagnostics

1

2 Alert log

2

07 SCREEN MENU MAP(S)



1 Personalisation-Configuration

- 2 Define the vehicle settings*
- 2 Display configuration
 - 3 Video brightness adjustment
 - 4 normal video
 - 4 inverse video
 - 4 brightness (- +) adjustment
 - 3 Date and time adjustment
 - 4 day/month/year adjustment
 - 4 hour/minute adjustment
 - 4 choice of 12 h / 24 h mode
 - 3 Choice of units
 - 4 l/100 km - mpg - km/l
 - 4 °Celsius / °Fahrenheit
- 2 Choice of language



1 Bluetooth telephone

- 2 Bluetooth configuration
 - 3 Connect/Disconnect an equipment
 - 3 Telephone function
 - 3 Audio Streaming function
 - 4 Consult the paired equipment
 - 4 Delete a paired equipment
 - 4 Perform a Bluetooth search
- 2 Call
 - 3 Calls list
 - 4 Directory
- 2 Manage the telephone call
 - 3 Terminate the current call
 - 3 Activate secret mode

* The parameters vary according to vehicle.

FREQUENTLY ASKED QUESTIONS

QUESTION	ANSWER	SOLUTION
<p>There is a difference in sound quality between the different audio sources (radio, CD...).</p>	<p>For optimum sound quality, the audio settings (Volume, Bass, Treble, Ambience, Loudness) can be adapted to the different sound sources, which may result in audible differences when changing source (radio, CD...).</p>	<p>Check that the audio settings (Volume, Bass, Treble, Ambience, Loudness) are adapted to the sources listened to. It is advisable to set the AUDIO functions (Bass, Treble, Front-Rear Balance, Left-Right Balance) to the middle position, select the musical ambience "None" and set the loudness correction to the "Active" position in CD mode or to the "Inactive" position in radio mode.</p>
<p>The CD is ejected automatically or is not played by the player.</p>	<p>The CD is inserted upside down, is unplayable, does not contain any audio data or contains an audio format which the player cannot play. The CD is protected by an anti-pirating protection system which is not recognised by the audio equipment.</p>	<ul style="list-style-type: none"> - Check that the CD is inserted in the player the right way up. - Check the condition of the CD: the CD cannot be played if it is too damaged. - Check the content in the case of a recorded CD: consult the advice in the "Audio" section. - The audio equipment's CD player does not play DVDs. - Due to their quality level, certain writeable CDs will not be played by the audio system.
<p>The message "USB peripheral error" is displayed on the screen. The Bluetooth connection is cut.</p>	<p>The battery of the peripheral may not be sufficiently charged.</p> <p>The USB memory stick is not recognised. The memory stick may be corrupt.</p>	<p>Recharge the battery of the peripheral device.</p> <p>Reformat the memory stick.</p>

FREQUENTLY ASKED QUESTIONS

QUESTION	ANSWER	SOLUTION
I am unable to access my voicemail.	Few telephones or service providers allow the use of this function.	
The CD player sound is poor.	The CD used is scratched or of poor quality.	Insert good quality CDs and store them in suitable conditions.
	The audio equipment settings (bass, treble, ambiances) are unsuitable.	Set the treble or bass level to 0, without selecting an ambience.
The stored stations do not function (no sound, 87.5 Mhz is displayed...).	An incorrect waveband is selected.	Press the BAND AST button to return to the waveband (AM, FM1, FM2, FMAST) on which the stations are stored.
The traffic announcement (TA) is displayed. I do not receive any traffic information.	The radio station is not part of the regional traffic information network.	Tune to a radio station which broadcasts traffic information.
The quality of reception of the radio station listened to gradually deteriorates or the stored stations do not function (no sound, 87.5 Mhz is displayed...).	The vehicle is too far from the transmitter used by the station listened to or there is no transmitter in the geographical area through which the vehicle is travelling.	Activate the RDS function to enable the system to check whether there is a more powerful transmitter in the geographical area.
	The environment (hills, buildings, tunnels, basement car parks...) block reception, including in RDS mode.	This phenomenon is normal and does not indicate a failure of the audio equipment.
	The aerial is absent or has been damaged (for example when going through a car wash or into an underground car park).	Have the aerial checked by a PEUGEOT dealer.

FREQUENTLY ASKED QUESTIONS

QUESTION	ANSWER	SOLUTION
Sound cut-outs of 1 to 2 seconds in radio mode.	During this brief sound cut-out, the RDS searches for any frequency permitting better reception of the station.	Deactivate the RDS function if the phenomenon is too frequent and always on the same route.
With the engine off, the audio equipment switches off after a few minutes of use.	When the engine is switched off, the audio equipment operating time depends on the battery charge. The switch-off is normal: the audio equipment switches to economy mode and switches off to prevent discharging of the vehicle's battery.	Start the vehicle's engine to increase the battery charge.
The message "the audio system is overheated" appears on the display.	In order to protect the installation if the surrounding temperature is too high, the audio equipment switches to an automatic thermal protection mode leading to a reduction of the volume or stopping of the playing of the CD.	Switch the audio system off for a few minutes to allow the system to cool.